 


lovehncare™

SOOTHEⁿ SWING


BP 952

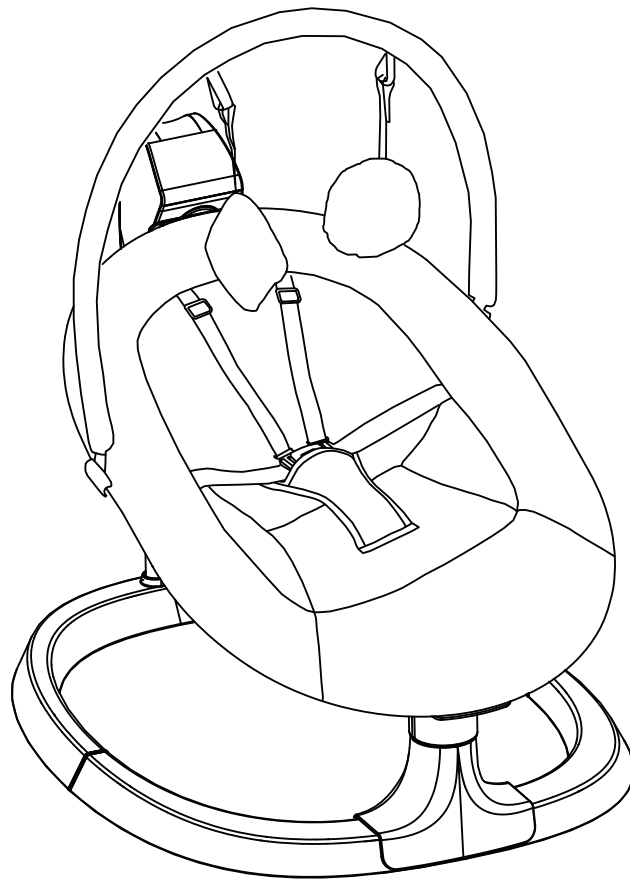

**IMPORTANT! READ AND FOLLOW THESE INSTRUCTIONS CAREFULLY
AND KEEP FOR FUTURE REFERENCE**



 Congratulations on your purchase of the Soothe N Swing. This product has been designed and developed with safety, comfort and functionality in mind. Please take the time to read this manual carefully before using this product and keep it in a safe place for future reference

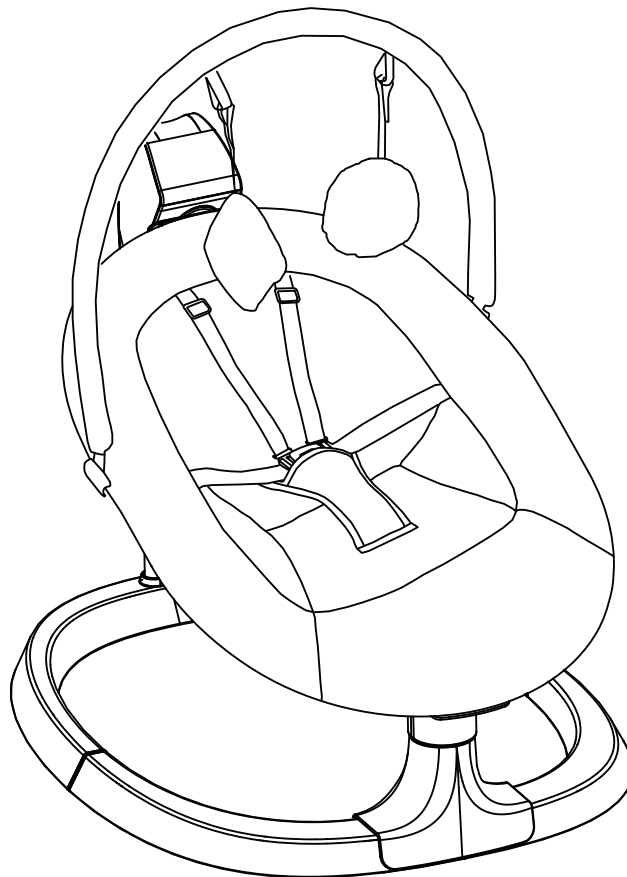

WARNING

- Read all instructions before use of the infant swing seat.
- Keep instructions for future use.
- Do not use this infant swing seat if it is damaged or broken.

FALL and STRANGULATION HAZARDS:

Infants have suffered head injuries falling from swings and have been strangled in straps.

- **Always** use restraints. Adjust to fit snugly.
- **STOP** using product when infant attempts to climb out (approximately 9 months) or the infant's weight reach to 12kg (26lbs), whichever comes first. Can be used as a seat from 12kg - 30kg. (not in swing mode).
- Stay near and watch baby during use. This product is not safe for sleep or unsupervised use. If baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface such as a crib or bassinet.

SUFFOCATION HAZARDS:

Young infants have limited head and neck control. If the seat is too upright, infant's head can drop forward and compress the airway.

- **Always** keep swing seat fully reclined until infant is at least 4 months old AND can hold up head without help.
- **Always** place swing on floor. Never use on any elevated surface.

NEVER add soft bedding or padding.

WARNING

Infant should be placed to sleep on a firm, flat surface. Place infant on their back when using this product. Do not put objects or accessories in an infant's sleep environment. Do not place this product near a blind, door, cord, strap or similar item that could become wrapped around an infant's neck. Do not use this product for infant sleep. Do not leave infant in this product unsupervised.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

 


WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Non-rechargeable batteries are not to be recharged.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- The compatible battery type is CR2025 and the nominal battery voltage is 3V.
- Do not force discharge, recharge, disassemble, heat above 50°C(122F) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

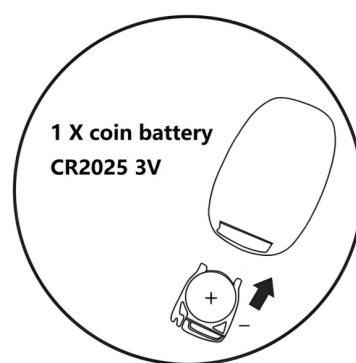

WARNING

 
- **INGESTION HAZARD:** This product contains a cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 Hours**.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.




Parts List




① Main unit X1

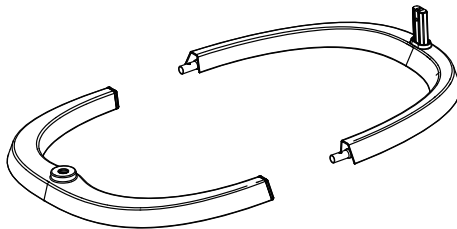


② Base tube set X2

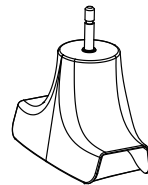 


③ Seat rotation base X1

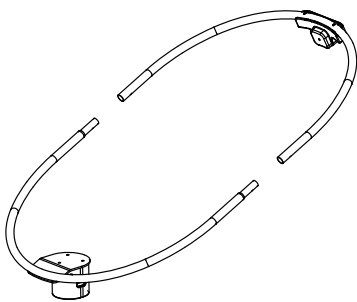 


④ Seat set X2

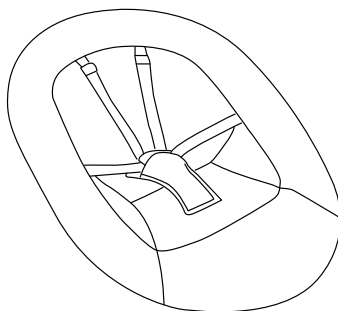 


⑤ Seat cover X1

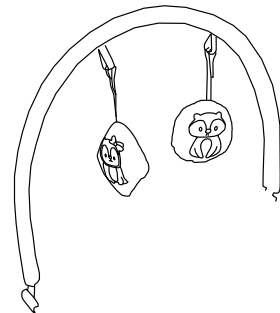 


⑥ Toy bar X1

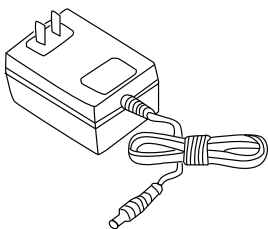 

⑦ Adapter X1

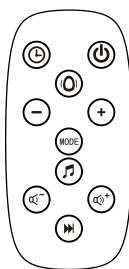 

⑧ Remote Control X1

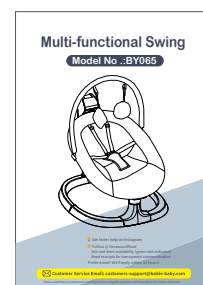 

⑨ Instruction manual X1

☒ Please check all parts and contact us if any parts are missing or damaged

INSTALLATION

- **Base Tube Set Installation**

Insert the 2 base tubes in the direction of the arrows (Figure 1-1) until the clips snap into place (Figure 1-2).

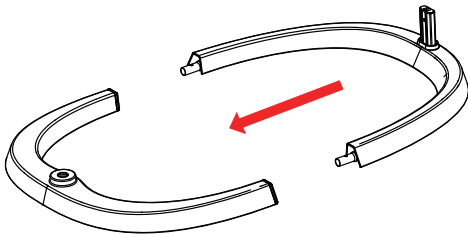 


Figure 1-1

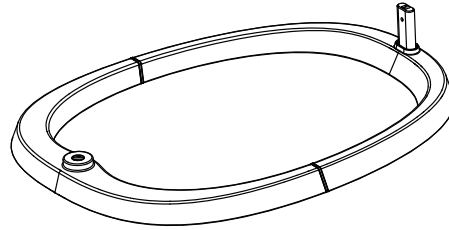 


Figure 1-2

- **Seat Rotation Base Installation**

Place the assembled base tube set flat on the ground (Figure 1-1). Insert the seat rotation base into the base tube set in the direction of the arrow (Figure 2-2).

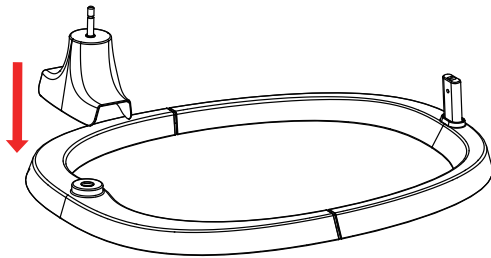 


Figure 2-1

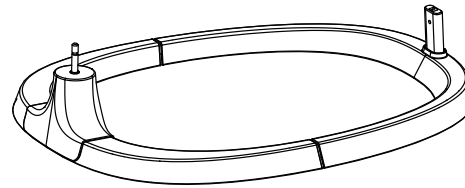 


Figure 2-2

- **Seat Set Installation**

Insert the 2 seat tubes in the direction of the arrows (Figure 3-1) until the clips snap into place (Figure 3-2). Then, insert the assembled seat set into the seat rotation base in the direction of the arrow (Figure 3-3) until you hear a "click" (Figure 3-4).

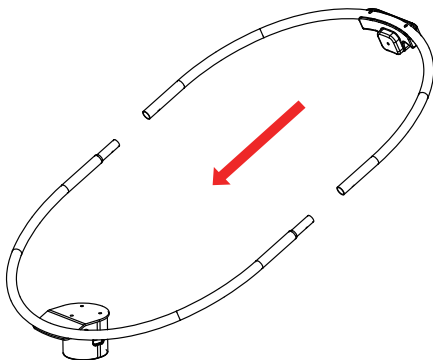 


Figure 3-1

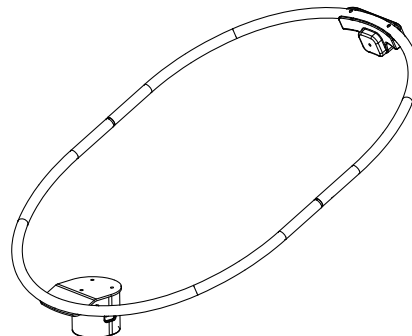 


Figure 3-2

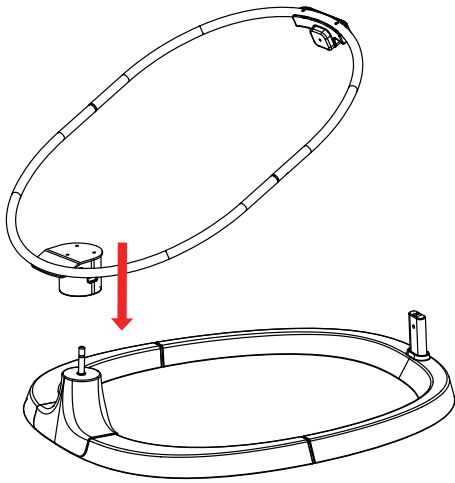 


Figure 3-3

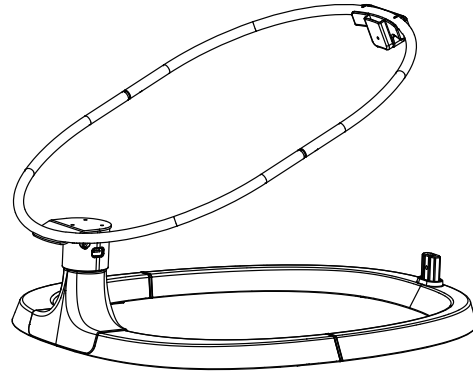 


Figure 3-4

Main Unit Installation

Place the assembled base tube set and seat set flat on the ground (Figure 4-1). Take the main unit and insert the quick-release base into the seat set in the direction of the arrow (Figure 4-2)

until the clip snaps into place. Then, insert the main support tube into the base tube set in the direction of the arrow (Figure 4-3) until the clip snaps into place (Figure 4-4).

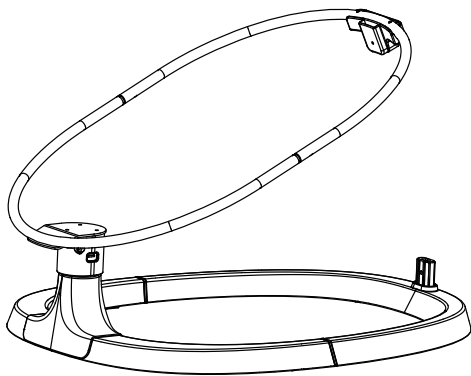 


Figure 4-1

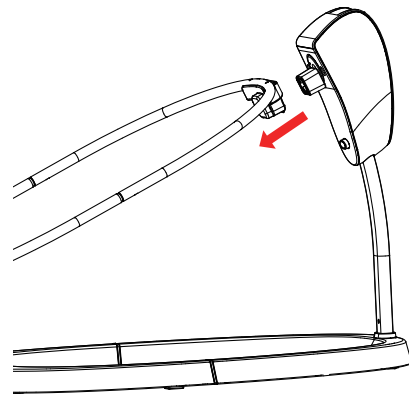 


Figure 4-2

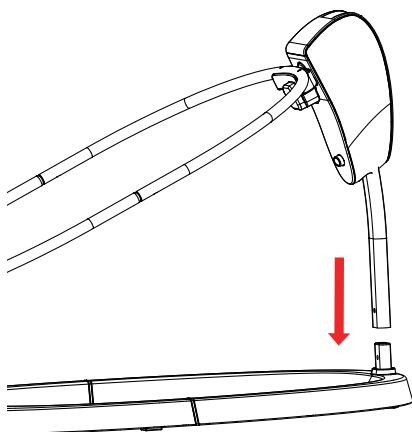 


Figure 4-3

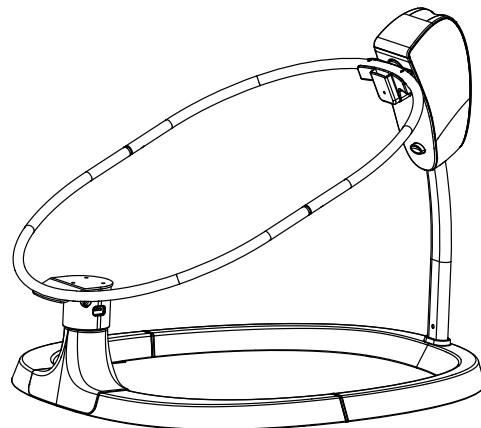 


Figure 4-4

• Seat Fabric Installation Instructions:

Prepare Components: Place the seat frame and seat fabric reverse-side up on a flat surface (Figure 1). **Attach the Fabric:** Insert the seat frame into the opening at the bottom of the seat fabric (Figure 2). **Secure the Drawstring:** Fasten the drawstring buckle into the corresponding grommet (Figure 4). Note: Ensure all parts are aligned properly before tightening. Refer to included diagrams for visual guidance.

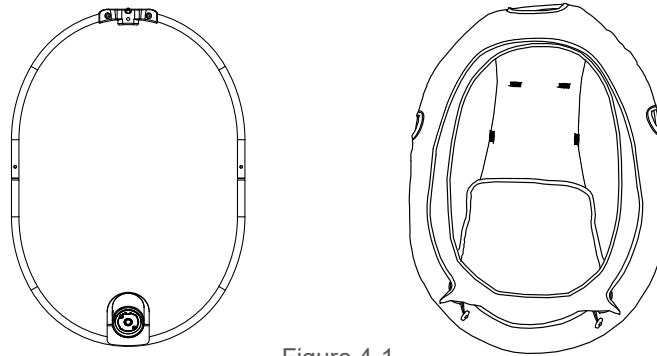 


Figure 4-1

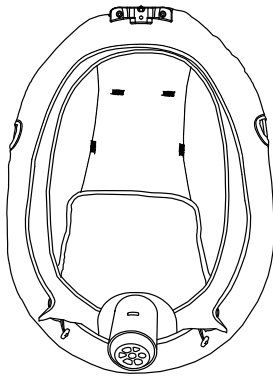 


Figure 4-2

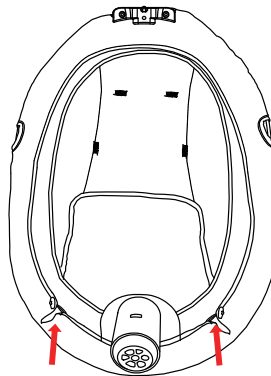 


Figure 4-3

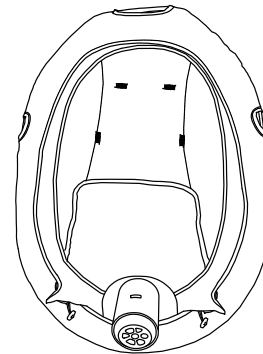 


Figure 4-4

• Toy Bar Installation

Attach the toy bar to the seat tubes by pressing both sides in the direction of the arrows (Figure 5-1). Once attached, it should look like Figure 5-2.

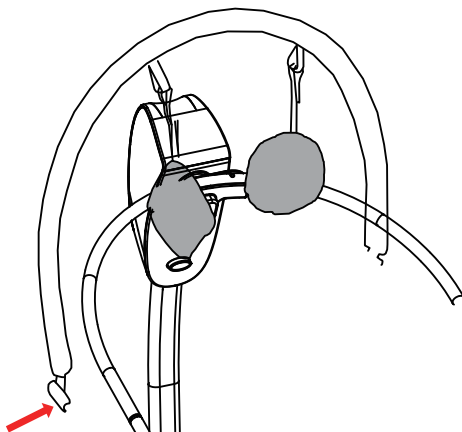 


Figure 5-1

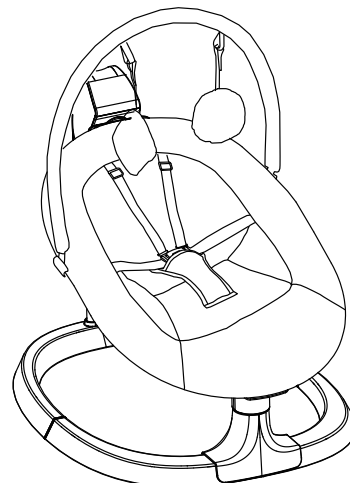 


Figure 5-2

USER MANUAL

1. Power Supply

It is recommended to use only the 12V 2A adapter. Plug the adapter into a 100-240V power outlet and connect the other end to the power port at the bottom of the main unit (Figure 5). Use indoors and avoid damp areas.


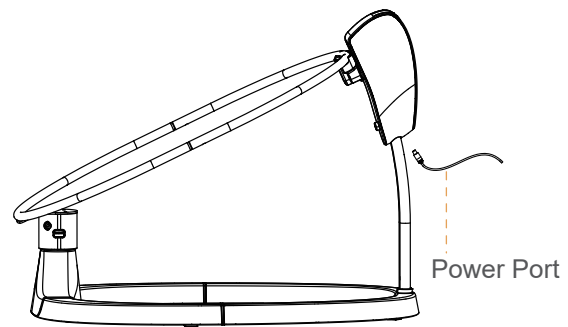 


Figure 5

 2. Touch Panel Button Functions

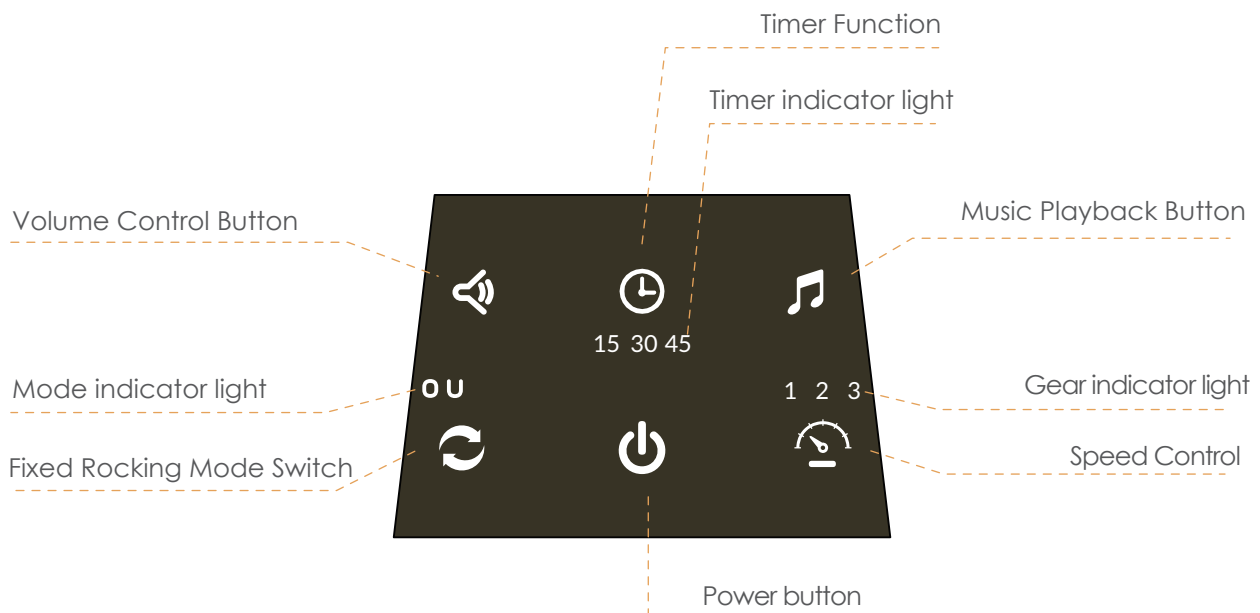

1. Power Button :

- 1.1 Press the button to turn the product on. The function buttons will light up.
- 1.2 When the swing is in operation, press the button to stop all functions, including music and timer.
- 1.3 When the swing is in swinging mode, press the button to return the seat to the center position before stopping.

2.Fixed Rocking Mode Switch :

In standby mode, press the button to select a rocking mode, then use the speed control button to choose the desired speed.

- 2.1  O-shaped swinging trajectory: 3 speed levels.
- 2.2  U-shaped swinging trajectory: 3 speed levels.
- 2.3  W-shaped swinging trajectory: Speed cannot be adjusted and varies from slow to fast.

3.Speed Control :

- 3.1 Press the button to adjust the swinging speed. There are 3 speed levels, indicated by the corresponding lights.

4.Timer Function :

- 4.1 Press the button to set the timer. Use the +/- buttons to adjust the time. Options: 15, 30, or 45 minutes.
- 4.2 Default timer setting is 45 minutes.

5. Music Playback Button

 
5.1 Press the button to turn on the music. Press again to skip to the next track. Long press to turn off the music.

5.2 Music playback is set to loop and has a memory function. It will resume from the last track when turned back on.

6. Volume Control Button

6.1 Press this button to adjust the volume. There are 5 volume levels.

3. Remote Control Function Guide

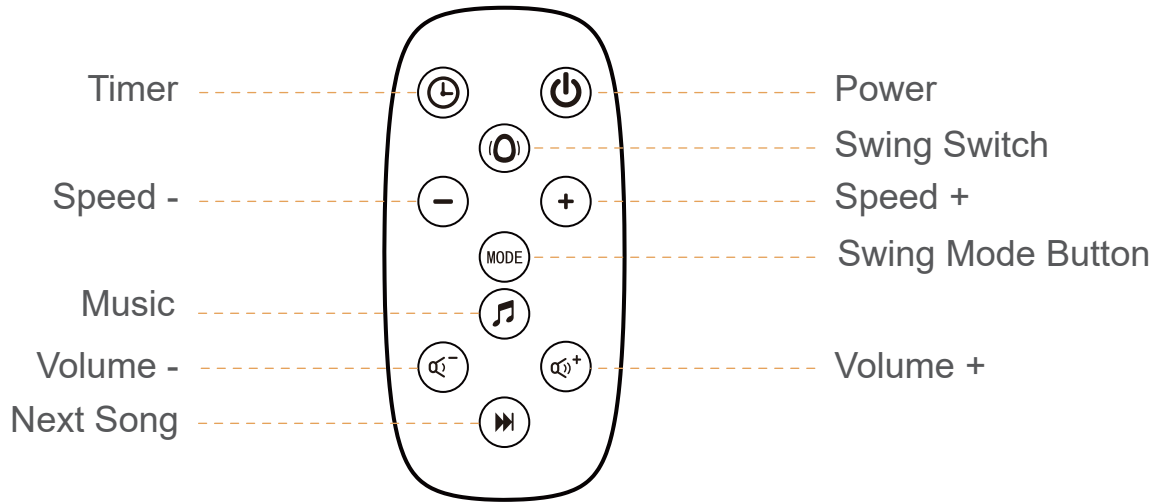

WARNING: This product contains a button or coin cell battery.

1. Initial Use

When using the remote control for the first time, pull out the battery insulating tab located at the bottom of the battery compartment and store it safely. To preserve battery life and extend the remote's longevity, reinsert the insulating tab when the remote is not in use.

2. Power Button:

Press once to turn on the power (standby mode).

Press again to turn off the power.

3. Timer Function:

Press to activate the timer. The timer display will show the set duration.

Press repeatedly to adjust the timer duration.

4. Swing On/Off:

After powering on, press this button to start rocking. The default mode is Speed Level 1.

5. Mode Selection:

While rocking is active, press this button to cycle through the 3 preprogrammed rocking modes.

6. Speed Increase:

Press to raise the rocking speed by one level (Levels 1–3). The corresponding indicator light will illuminate. No response when Level 3 is reached.

7. Speed Decrease:

Press to lower the rocking speed by one level. The indicator light dims as levels decrease. Pressing at Level 1 will turn off the light and stop rocking.

8. Music On/Off:

Press to play/pause music. Songs will repeat in a continuous loop.

9. Next Track:

During playback, press to skip to the next song. Cycle through tracks indefinitely.

10. Volume Up:

Default volume is medium. Press to increase volume incrementally to maximum.

11. Volume Down:

Default volume is medium. Press to decrease volume incrementally to minimum.

Remote Operation Guidelines

Ensure the remote faces upward, with its infrared sensor aligned toward the rocker's front panel.

Effective range: Within 4 meters (13 feet) of the rocker's front, within a 35-degree angle on either side.

Failure to follow these guidelines may result in unresponsive controls.

4. Other Features:

1. Motor stall protection: If the product is obstructed during normal operation, the program will detect the obstruction and enter stall protection mode, stopping the music, timer, and rocking functions.

5. Backrest Height Adjustment:

The seat has 2 adjustable angles. Press the adjustment button on the main unit (Figure 6, blue arrow) and move the main unit up or down to adjust (Figure 7). Do not adjust the backrest while a child is in the product, as this may cause injury.

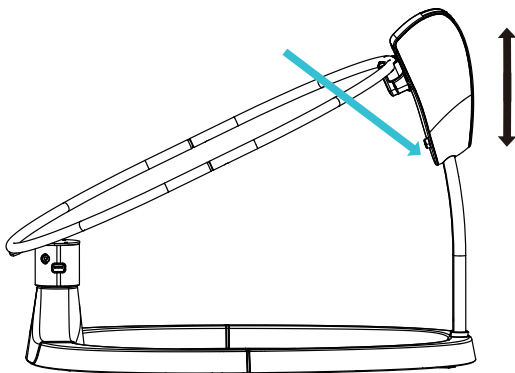 


Figure 6

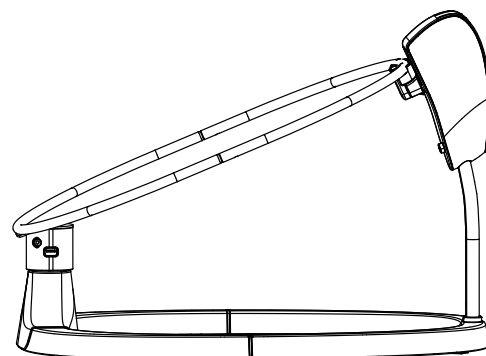 


Figure 7

When the power is connected, the music function can be used without enabling the swinging function.

The motor has stall protection:

If the product is obstructed during normal operation, the program will detect the obstruction and enter stall protection mode to prevent damage to key components. The music, timer, and swinging functions will stop. Simply turn off the power and restart to resume normal operation.

Safety Belt Usage:

 
 
 
First, open the safety belt and place it in the correct position. Then, place the child in the seat and fasten the shoulder and waist straps. Ensure the safety belt is properly installed to secure the child.

Seat Pad

1-To remove the seat cover, flip the seat cover and pull off the velcro.

2-Flip the seat cover, and starting from the bottom, remove the seat pad from the seat frame. Then, slide the seat pad up, off the top of the seat frame.




6. Safety Belt Instructions

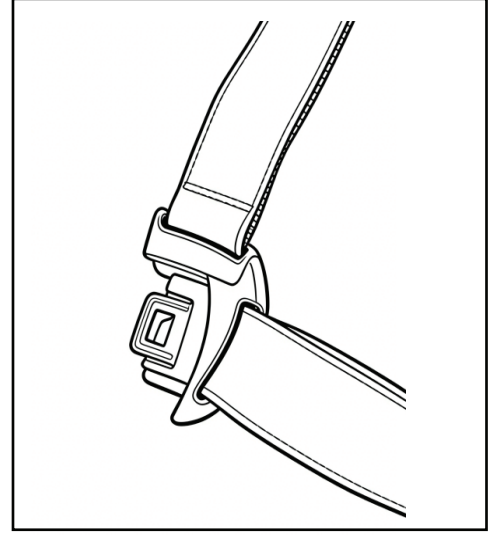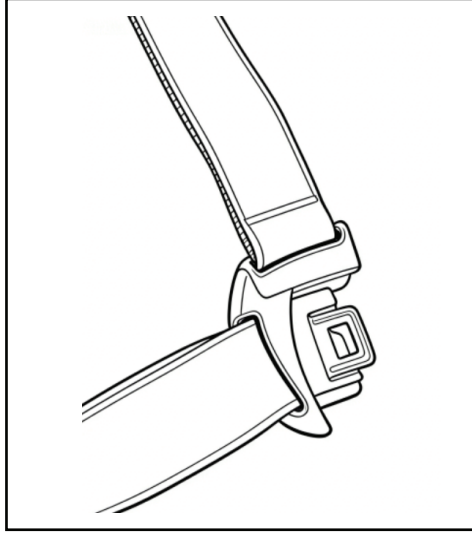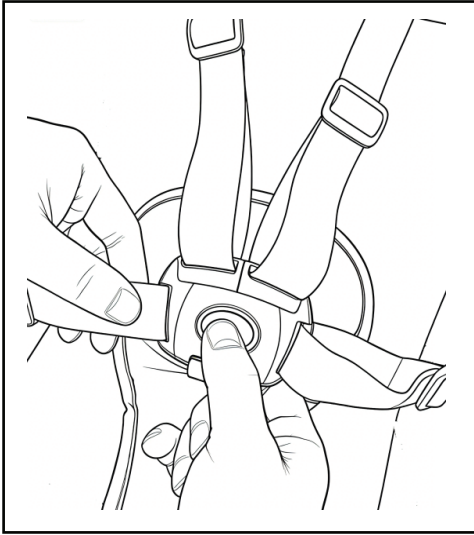

Unbuckling the Harness

Release the Buckle: Firmly press the large center button on the main buckle housing.

   Separate the Components: Pull the prongs out of the center housing. You can then slide the shoulder strap clip off the waist strap clip to fully separate the harness components.

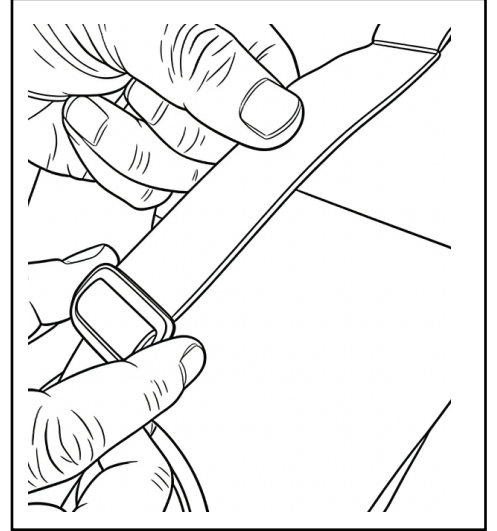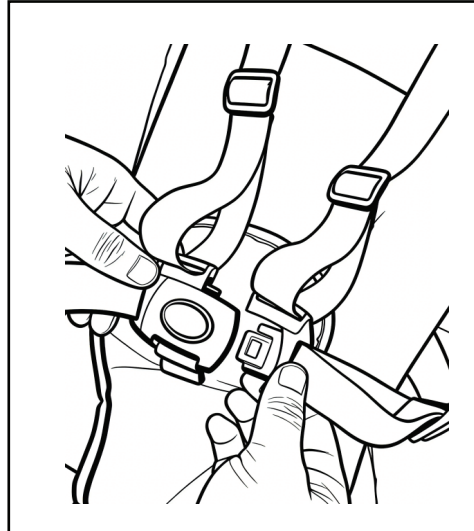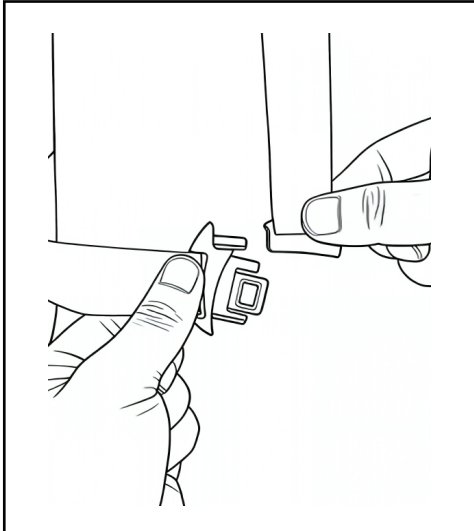

Assembling and Buckling the Harness

Interlock the Straps: Take the plastic clip at the end of the shoulder strap and slide it onto the corresponding clip on the waist strap. The two pieces will interlock to form a single, unified buckle prong. Repeat this process for the other side.

Secure the Buckle: Take the combined shoulder and waist prong and insert it into the slot on the main center buckle housing. Push firmly until you hear a definitive "click," ensuring the harness is securely locked in place.

Adjusting the Strap Length

Locate the Sliders: Find the plastic adjustment sliders located on the shoulder and waist straps.

Adjust for a Snug Fit: To tighten the harness, hold the plastic slider and pull the loose end of the strap through it. To loosen the harness, tilt the plastic slider slightly and pull the main portion of the strap back through the buckle. Ensure the harness is adjusted so that it fits securely and comfortably.

Cleaning and Maintenance:

Seat Cover:

The seat cover can be removed and washed. If it gets dirty, it can be hand-washed.

Product Body/Tubes:

The product is not waterproof. Do not wash it directly with water. If it gets dirty, wipe it with a damp cloth.

Toys:

Fabric toys can be removed and washed. Ensure they are completely dry before giving them to the child.

Adapter:

Clean only with a dry cloth. Do not wash with water.



⚠ WARNING: Changes or modification to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.



RETAIN FOR FUTURE REFERENCE.

 
READ CAREFULLY BEFORE ASSEMBLING AND USING THE PRODUCT

- **CAUTION!** NEVER LEAVE THE CHILD UNATTENDED!
- **CAUTION!** STOP USING THE PRODUCT ONCE YOUR CHILD IS ABLE TO SIT UNAIDED OR WEIGHS MORE THAN 9 KG!
- **CAUTION!** THIS PRODUCT IS NOT INTENDED FOR LONG PERIODS OF USE AND SLEEP.
- **CAUTION!** NEVER LEAVE THIS PRODUCT ON ELEVATED, SLOPED OR SOFT SURFACES!
- **CAUTION!** ALWAYS USE THE SAFETY HARNESS!
- **CAUTION!** TO AVOID INJURY, MAKE SURE THAT THE CHILD IS AT SAFE DISTANCE WHILE MAKING ADJUSTMENTS, UNFOLDING, FOLDING AND STORING THE PRODUCT!
- **CAUTION!** DO NOT MOVE THE PRODUCT OR LIFT THE PRODUCT WHILE THERE IS A CHILD IN IT!
- **CAUTION!** DO NOT ALLOW CHILDREN PLAY WITH THIS PRODUCT!
- **CAUTION!** SET THE SOUND VOLUME LOW TO AVOID DAMAGE TO THE CHILD'S HEARING!
- **CAUTION!** KEEP AWAY FROM FIRE!
- Adult assembly required!
- Do not use the product for more than one child!
- The product is not a substitute for a cot or bed. If the child needs sleep, you must put it in a suitable bed or cot.
- Do not use the product if there are missing or damaged parts!
- Do not use spare parts or other components, which are not supplied by Love N Care. Love N Care revokes all responsibility in case you have used spare parts different from the approved type or from the recommended by Love N Care.
- Do not make changes or modifications to the structure! If necessary, contact the retailer or and authorized service for advice and repair.
- Do not tie strings or cords to the product to avoid risk of suffocation!
- Use the product only for its purpose.
- All settings regarding the power supply – turning on/off, replacing or charging of batteries to be done only by adult!
- Use only the AC/DC adaptor supplied by the producer.
- Regularly check the good working order of the AC/DC adaptor. Discontinue usage in case of damage.
- Do not allow presence of children under 3 years before assembly is complete to avoid their access to small or disassembled parts!
- Keep the nylon package away from children to avoid risk of suffocation!
- When the product is connected to a music player, ensure that the volume of the music player is set to a low value.
- Transformers used with the product are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they shall not be used;
- The product shall only be used with the recommended transformer.
- When the product is connected to a music player, ensure that the volume of the music player is set to a low value.

WARNING: check this product regularly before using it, and do not use it if any part is loose or missing or if there are any signs of damage. Do not substitute parts. Contact the manufacturer if replacement parts or additional instructions are needed.

Warranty Against Defects

All Love N Care products are guaranteed for twelve months from the date of purchase. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. This covers against faults which develop through faulty materials and workmanship. Misuse, accidental damages, normal wear and tear or neglect are not covered. If a fault becomes apparent, please return the item to the store of purchase with your receipt. You must inform the store what the defect is. We will then arrange for its repair or it will be assessed for replacement as expediently as possible. The benefits of this warranty are in addition to other right and remedies under the law in relation to the goods or services to which this warranty relates. If you are unable to return the item to the store of purchase, you can contact Love N Care on free call 1300 732 599. Where you send the product directly to the manufacturer then you may be liable for the costs of transportation to and from Love N Care. Love N Care will meet the reasonable expenses incurred by a consumer in a making a warranty claim. You can claim expenses incurred in making a claim by contacting our customer service team on 1300 732 599 or by email at info@lovenccare.au

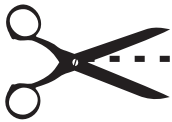

12 MONTH WARRANTY

Please fill in this section to validate your warranty and send to: **297 Canterbury Rd Revesby NSW 2212**

Name: _____	Store Purchased: _____
Address: _____	Date Purchased: _____
Product Name/No. _____	

Contact Us

Head Office:

Love N Care Pty Ltd.
297-299 Canterbury Rd, Revesby
NSW 2212 Australia
Contact No: 02 9774 4655
Email: info@lovencare.au
Website: www.lovencare.au

loveⁿcare

Let's be friends!



<http://www.facebook.com/lovencare1>



http://twitter.com/love_ncare



100 % AUSTRALIAN OWNED SINCE 1984