



Rock N Walk

Instruction Manual bp 8699

PLEASE KEEP INSTRUCTIONS FOR FUTURE REFERENCE



Congratulations on your new quality Love N Care product from our exclusive range of baby products. This exceptional design combines the most unique features that any baby product offers.

We are confident that you will appreciate its many highlights, including its reliability and durability. Your new product has been manufactured to comply with the Highest Quality Standards and comes with a 12-month warranty.

As you will soon learn there are many more great features about your new Love N Care product.





Safety guidelines and instructions must always be followed before making use of this product, please retain these instructions for future reference.



READ ALL INSTRUCTIONS BEFORE ASSEMBLY AND USE OF THE WALKER. KEEP INSTRUCTIONS FOR FUTURE USE.

NEVER LEAVE CHILD UNATTENDED.

ALWAYS KEEP CHILD IN VIEW WHILE IN WALKER.

TO AVOID BURNS, KEEP THE CHILD AWAY FROM HOT LIQUIDS, RANGES, RADIATORS, SPACE HEATERS, FIREPLACES, ETC.

USE ONLY ON FLAT SURFACE FREE OF OBJECTS THAT COULD CAUSE THE WALKER TO TIP OVER.

WARNING - STAIR HAZARD

AVOID SERIOUS INJURY OR DEATH BLOCK STAIRS/STEPS SECURELY BEFORE USING WALKER.

NOT SUITABLE FOR CHILDREN WHO ARE UNABLE TO SIT UP UNAIDED.

NOT SUITABLE FOR CHILDREN WHO ARE ABLE TO WALK.

NOT APPROPRIATE FOR CHILDREN AGED LESS THAN 6 MONTHS.

MAXIMUM WEIGHT LIMIT OF 12KG AND LESS THAN 80CM.

DO NOT USE THE WALKER IF IT IS DAMAGED OR BROKEN.

IT IS RECOMMENDED THAT THE WALKER/ROCKER BE USED ONLY FOR SHORT PERIODS OF TIME EG. 20 MIN.

TO AVOID INJURIES MAKE SURE THE CHILD IS NOT IN THE ROCKER/WALKER WHEN FOLDING OR UNFOLDING.

DO NOT ADJUST OR CARRY THE ROCKER/WALKER WITH THE CHILD IN IT.

ENSURE THAT THE CHILD CAN TOUCH THE FLOOR WITH BOTH FEET AFTER ADJUSTING THE HEIGHT OF THE WALKER (IF USING AS A WALKER)

DO NOT USE OR STORE OUTDOORS.

DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN.

IF USED ON CARPETS THE BASE BLOCKS MAY REDUCE THE WALKER SPEED.

DO NOT USE ACCESSORIES OTHER THAN THOSE SUPPLIED OR APPROVED BY LOVE N CARE.

WHATS INSIDE THE BOX









WHAT SHOULD YOU HAVE INSIDE?



- 1. Toy Tray
- 2. Mat
- 3. 2x Rear Castor Wheels
- 4. Seat Liner
- 5. 2x Front Wheels
- 6. Base Blocks
- 7. Rock N Walk Frame



HOW TO ASSEMBLE ASSEMBLING WHEELS



Insert the Base blocks (6) as shown in Fig 1.

Make sure they snap in before using.

Tug on them to ensure they don't fall out

Insert the 2 rear castor wheels (3) as shown in Fig 1.

Make sure they snap in before using.

Tug on them to ensure they don't fall out

Insert the 2 Front wheels (5) as shown in Fig 1.

Make sure they snap in before using.

Tug on them to ensure they don't fall out.



HOW TO ASSEMBLE UNFOLD/FOLD THE FRAME











To unfold the rocker/walker pull the frame tray upwards from the base.

To adjust the height, turn the button and press it.

The Position will lock automatically once you release the button.

To fold the baby walker back down, turn the button,

press it and lower the tray towards the base.



HOW TO ASSEMBLE ASSEMBLING THE STAND MATT







If you plan to use the Walker/Rocker as a rocker you should attach the Mat (2) to the base.

There are 3 clips on each side of the mat.

Snap the clips on the frame poles as shown.

Please ensure all 6 clips are snapped in before using.


If you would like to use the Rocker/Walker as a Walker remove the mat (2) by pushing the clips upwards

HOW TO ASSEMBLE ASSEMBLING THE SEAT LINER







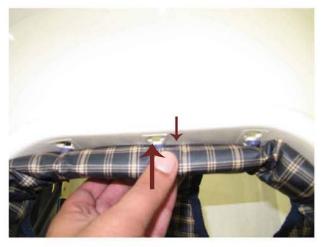



To attach the seat liner (4) to the frame attach the clips on the leg rest of the liner with the gaps available on the frame. There should be 3 gaps available.

Make sure they all are inserted.

Once the leg rest of the seat liner is attached to the frame you must then attach the shoulder rest to the frame.

There should be 6 clips. Insert them into the 6 gaps on the top of the walker/rocker frame.

The attached seat liner should look like this

HOW TO ASSEMBLE ASSEMBLING/REMOVING THE TRAY













2 AA Batteries are needed (not supplied)

Non-rechargeable batteries are not to be recharged.
Adult supervision is required when charging rechargeable batteries. Used and new or different types of batteries should not be mixed. Remove the batteries as soon as they become exhausted. Supply terminals for batteries are not to be short circuited.

Unscrew the base of the tray.

A Philips head screwdriver is needed for this step

Place the 2 AA batteries (not supplied) in the direction specified on the base.

Screw the battery lid back in. Test the tray by pressing the musical buttons.

Place the tray on the opening on the top of the frame. Make sure that the nozzles pass through the gaps on the top.

Once they are through the gaps you should turn the nozzles so they lock the tray into place.

To remove the tray just turn the nozzle and lift out.



HOW TO ASSEMBLE ROCKING/WALKING MODES

















rocker

Do not use without carpet as it will damage the rocker/walker.

On the sides of the rocker/walker there a 2 knobs.

Pull both the knobs to release the leg from the frame. The legs should be in the shape of a U in order for it to be used as a rocker.

Please ensure that the mat (2) is also installed

MARNING

- NEVER LEAVE CHILD UNATTENDED. ALWAYS KEEP CHILD IN VIEW WHILE IN WALKER
- USE ONLY ON FLAT SURFACES FREE OF OBJECTS THAT COULD CAUSE THE WALKER TO TIP OVER
- TO AVOID BURNS, KEEP THE CHILD AWAY FROM HOT LIQUIDS RANGES, RADIATORS, SPACE HEATERS, FIREPLACES, ETC.

MARNING - STAIR HAZARD

- · AVOID SERIOUS INJURY OR DEATH
- BLOCK STAIRS/STEPS SECURELY BEFORE USING WALKER


walker

Remove the mat (2) from the rocker.

Pull the knobs on the side of the rocker and push the legs towards the frame.

Adjust the height before using as a walker.

Ensure the child's feet can touch the ground

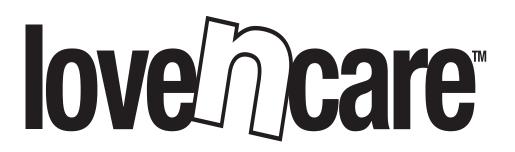

CARE AND MAINTENANCE

ALL LOVE N CARE PRODUCTS HAVE ONE YEAR WARRANTY FROM THE DATE OF PURCHASE.

TO PROLONG THE LIFE OF YOUR NURSERY PRODUCT KEEP IT CLEAN AND DO NOT LEAVE IT IN DIRECT SUNLIGHT FOR EXTENDED PERIODS OF TIME. DO NOT DRY CLEAN OR USE BLEACH.

ALL ITEMS ON THE ROCKER/WALKER CAN BE CLEANED USING WARM WATER WITH A HOUSEHOLD SOAP OR A MILD DETERGENT. ALLOW IT TO DRY FULLY BEFORE USING.

CLEAN THE BASE BLOCKS REGULARLY TO ENHANCE THE STOPPING PERFORMANCE.

REMOVE BATTERIES BEFORE STORING AWAY FOR LONG PERIODS OF TIME. CHECK THE CONDITION OF BATTERIES PERIODICALLY FOR FLUID LEAKAGE. DISCONTINUE USING THE TRAY IF THERE IS LEAKAGE.

IF THE WHEELS BECOME SQUEEKY USE A SILICON BASED SPRAY TO LOOSEN. IT IS RECOMMENDED TO REGULARLY INSPECT AND MAINTAIN MOVEMENT OF LOCKING DEVICES AND SECURITY OF ESSENTIAL COMPONENTS.

REGULARLY CHECK ALL PARTS FOR WEAR AND TEAR.

DO NOT LEAVE THE ROCKER/WALKER IN DIRECT SUNLIGHT FOR EXTENDED PERIODS OF TIME.

DO NOT STORE THE WALKER/ROCKER IN DAMP OR WET CONDITIONS BUT IN A WELL VENTILATED AREA TO PREVENT MOULD AND MILDEW.

IF ANY OF THE PARTS ARE MISSING OR BROKEN YOU SHOULD CONTACT THE MANUFACTURER AND DISCONTINUE USING THE ROCKER/WALKER UNTIL THEY ARE REPLACED.

Manufactured By:

Love N Care Pty Ltd. 297-299 Canterbury Rd, Revesby

NSW 2212 Australia



Contact Us

Head Office:

Love N Care Pty Ltd. 297-299 Canterbury Rd, Revesby NSW 2212 Australia Contact No: 02 9774 4655

Fax: 02 9774 4633

Email: info@lovencare.com.au Website: www.lovencare.com.au

Brisbane

7-9 Eileen Street Underwood QLD 4119 Australia

Contact No: 07 3290 4217 Fax: 07 3209 5019

Western Australia
5 Modal Crescent
Canning Vale WA 6155 Australia
Contact No: 08 9455 4972

Fax: 08 9455 4728

Ireland

DMG House Deansgrange Industrial Estate

Deansgrange Co. Dublin Phone: +3531 2190254

Fax: +3531 2802734 Website: www.lovencare.ie

let's be friends!

f http://www.facebook.com/lovencare1

http://twitter.com/love_ncare



