



BP2630 Manual

IMPORTANT : Avoid serious injury from falling or sliding out. Always use seat belt .
Never leave child unattended. Child may slip into leg openings and strangle.
Never use in reclined carriage position(s) unless use together with footcover.



Capella

BEFORE USING THE STROLLER

 
1.IMPORTANT: RETAIN FOR FUTURE REFERENCE

THESE INSTRUCTIONS DETAIL THE SAFE USE, OPERATION AND MAINTENANCE OF THE STROLLER.
PLEASE READ THESE INSTRUCTIONS CAREFULLY AND ENSURE THAT THEY ARE FOLLOWED AT ALL TIMES.


2. ⚠ WARNINGS

TO AVOID INJURY OR DEATH :

- Follow the manufacturer's instructions at all times.
- The stroller is designed to carry 1 month to 36 months old with a maximum weight of 15.0 kg.
- Put on the brake whenever you park the stroller.
- Do not be overconfident about brake device when you carry a child on the stroller.
- Do not leave children unattended.
- Do not carry extra children or bags on this stroller, unless in an approved accessory.
- Mind that fingers are not caught in the crevices when you fold or open the strollers.
- Ensure that baby's fingers are safe from any crevice when you reverse the handle.
- Please ensure that the safety harness is adjusted and used at all times.
- Check that the stroller is fully erected and that all safety locks are engaged before placing a child in the stroller.
- Ensure that the bumper bar / tray is fitted when the stroller is in use.
- Do not carry more than 5 kg in the basket or 1 kg in any pocket. (If supplied)
- Do not allow children to stand on the seat or footrest.
- Do not use on stairs or escalators.
- Do not use the stroller near an open fire, barbecue, or exposed flame.
- Use only those replacement parts and accessories which are supplied by the manufacturer, and approved for use with the stroller.
- Do not run or jog with this stroller.
- Engage front wheel swivel lock, to lock front / wheels when traveling on rough or uneven surfaces.
- Do not attempt to lift the stroller by the bumper bar / tray (if applicable), it may be damaged and is dangerous.
- This product is not intended for commercial use.
- Excessive weight for basket may cause a hazardous unstable condition to exist.

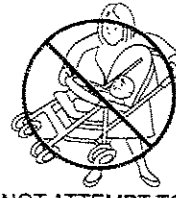

 DO NOT ATTEMPT TO
LIFT THE STROLLER BY
THE BUMPER BAR OR TRAY.

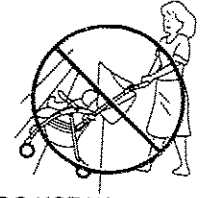


DO NOT USE THIS
STROLLER ON STAIRS
OR ESCALATORS.




DO NOT ALLOW MORE
THAN 1 INFANTS IN
THE STROLLER.



 
PLEASE ENSURE THAT THE
SAFETY HARNESS IS
ADJUSTED AND USED
PROPER WAY AT ALL TIMES.

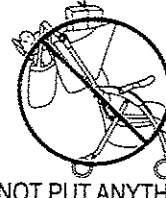

 DO NOT PUT ANYTHING
ON THE CANOPY OR HANG
ON THE HANDLE.

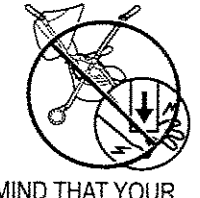

 MIND THAT YOUR
FINGERS ARE SAFE
WHEN YOU OPEN AND
FOLD THE STROLLER .


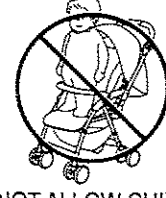


DO NOT ALLOW CHILDREN
TO STAND ON THE SEAT OR
FOOTREST.






DO NOT ALLOW
BABY TO PLAY IN THE
STROLLER WITH BIG
MOVEMENT.

  1.NAME OF EACH PART

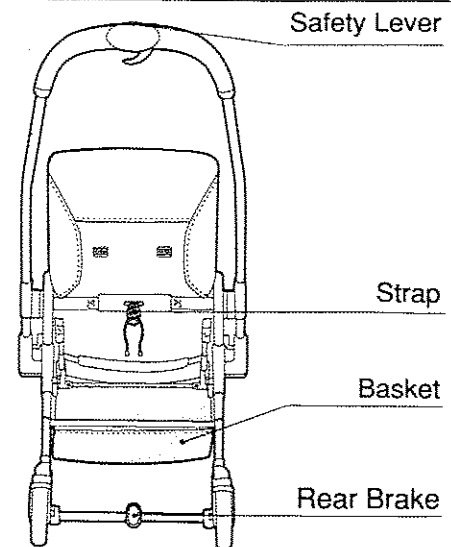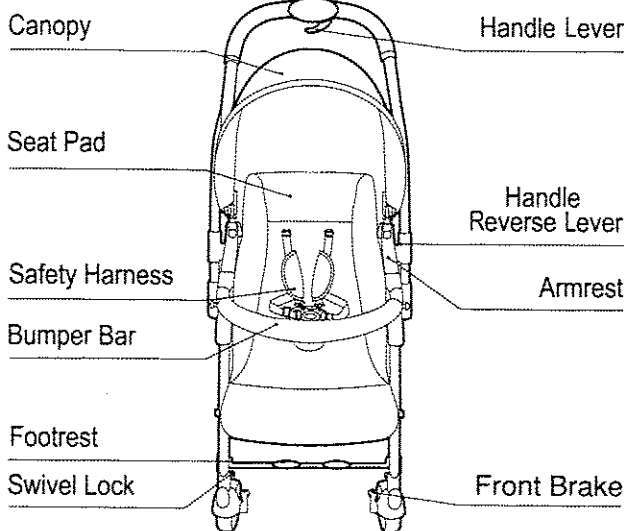

   2.TO OPEN AND FOLD THE STROLLER

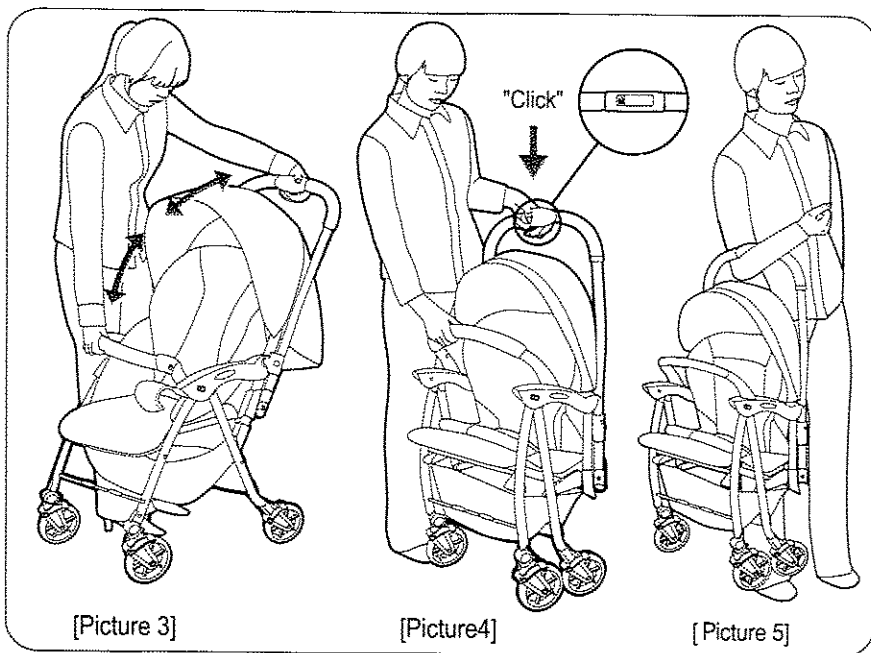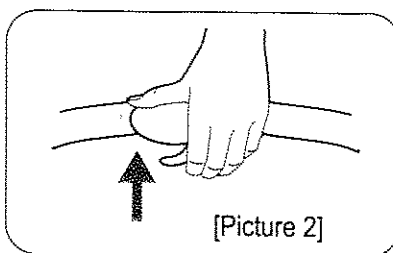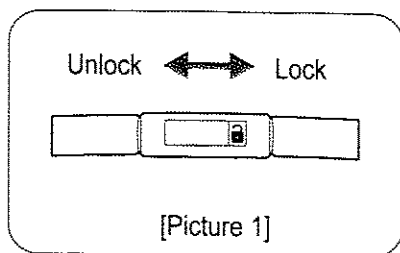

1.To Open Stroller

- Position safety lever on "unlock" (🔓)
- Grab the handle and pull up as shown in [picture 2] Then, Open the stroller using your both hands as shown in [Picture 3].

2.To Fold Stroller

- Fold the canopy before you fold stroller.
- Grab the handle and pull up the handle lever as shown in [Picture 3]. Then, fold the stroller using your both hands as shown in [Picture 4].
- Please push the handle down, hear "Click" sound to lock the stroller and position safety lever on "lock" (🔒) after fold stroller.

3.To Lift And Carry The Stroller

- Lift and carry the stroller with your arm as shown in [Picture 5].

◆ TO USE SAFETY LEVER



- Safety Lever is placed with blue sticker. (You can not open/fold the stroller)
- Place safety lever "LOCK" while you are in drive.



 
- Safety Lever is placed with red sticker. (To Open/ To Fold the stroller).
- Do not put safety lever "UNLOCK" while you are in drive.



WARNING



- Position safety lever on 'Lock' (🔒) while in use. Place this lever to 'Release' (🔓) position only when you open and fold. It may cause an accident if the lock is released when you use the stroller.
- Keep the proper usage in mind because functions of both levers are different.
- Ensure that the safety lever is engaged when lifting or carrying the stroller.

3.TO USE SWIVEL LOCK

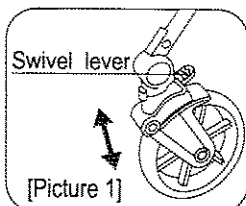

1. To release a swivel lock
 - Pull up a swivel lever as illustrated in picture above.
2. To fix a swivel lock
 - Push down a swivel lever as illustrated in picture above.

  4.TO USE BRAKE

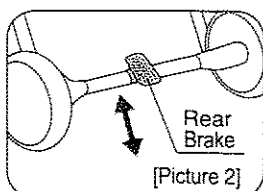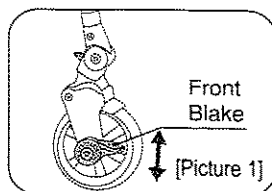


1. To use brake
 - Push the (front / rear) brake lever down.
2. To release brake
 - Lift up the (front / rear) brake lever.



WARNING

- Always set brake when stroller is not used to avoid an accidental rolling.
- Do not leave a stroller in an inclined road too long time with brake on.
- Make sure that brake is set properly.
- Set a wheels direction properly to avoid an accident and for smooth strolling.

 5. TO REVERSE A HANDLE (When you want to stroll looking at your baby, you can reverse a handle.)

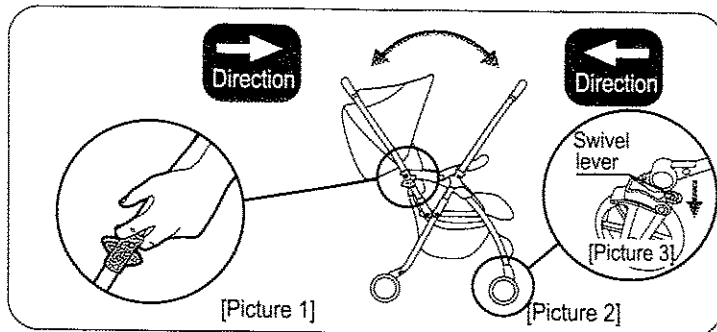


- Please release safety lock in a handle part.
- Please pull up both handle levers as Picture 1.
- After pull up handle lever, please reverse a handle to the direction as Picture 2 until you hear sound "Click".
- Please fix the swivel lock when you reverse the handle as Picture 3.
- When you stroll behind your baby, please fix front wheel in right direction as Picture 4.
- When you stroll facing to your baby, please fix front wheel in right direction as Picture 5.

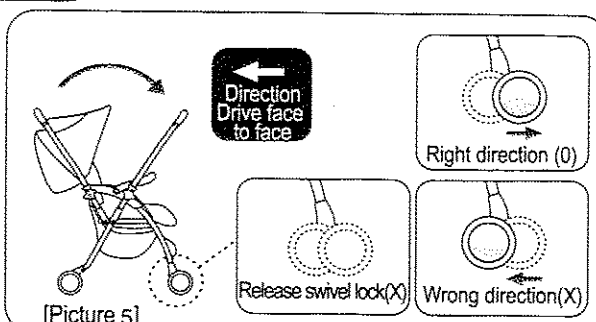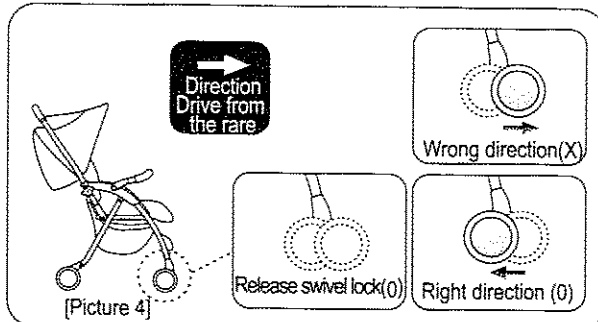  

WARNING

- Ensure that baby's fingers are safe from any crevice when you reverse the handle.
- Do not reverse handle during driving.

 6. TO USE SEAT BELT

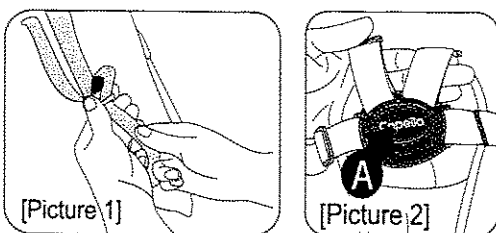


- Adjust the belt length in order to make it suitable for your baby's body.
- Press a belt button as illustrated in 'A' to unbuckle it.

WARNING

- Fasten the seat belt firmly and buckle up to prevent injuries.
- Always use seat belt when your baby is in a stroller. Avoid serious injury from falling or sliding out. Always use seat belt.

 7. TO USE WRIST STAP

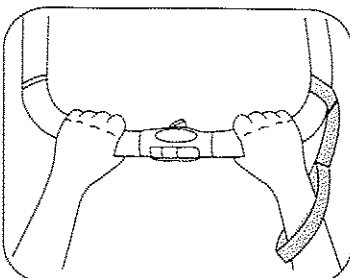


- Put your hand through the wrist stap to stop the stroller rolling away.

WARNING

USE THIS STRAP TO STOP THE STROLLER ROLLING AWAY.

 8. TO ADJUST A BACKREST

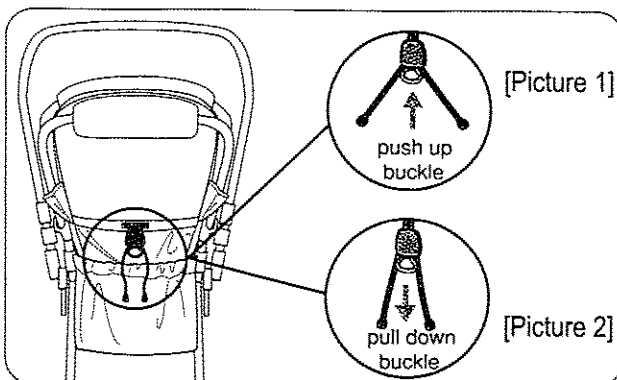

Upper position [Picture 1]

- Push up the buckle and backrest at the same time.

 
 
Low position [Picture 2]

- Pull down the buckle and adjust backrest to the correct position.

WARNING

- Please be careful of baby's body not to be caught in the stroller body.
- Only one baby is available to stay in the stroller with any backrest position.
- Do not adjust the backrest while your baby is in the stroller.

9. TO USE A FRONT BUMPER BAR

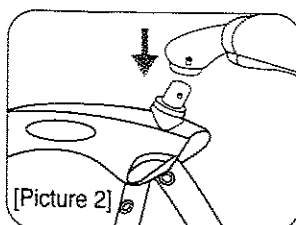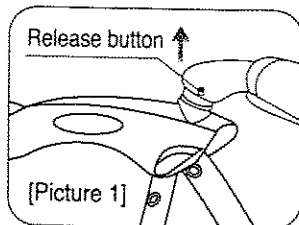


- In order to detach the bumper bar, press release button both side of guardrail, hold the bumper bar at both ends and pull out to the arrowed direction at the same time. [picture 1]
- When you install bumper bar, insert to the armrest until you hear "click" sound. [Picture 2]

WARNING

- Do not apply too much pressure on a bumper bar.
- Do not lift up a stroller while a baby in it. It may cause an accident.

 10. EXTENSION SEAT


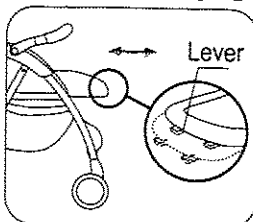


- Please pull the lever under the seat.
- Please put the extension seat in when you don't use.

WARNING

- Please do not have your baby step up extension seat.
- Please do not sit on the extension seat. It may cause an accident.

  11. CANOPY

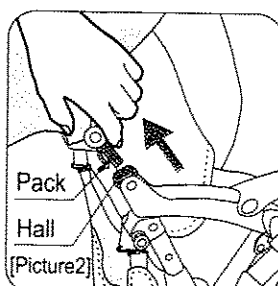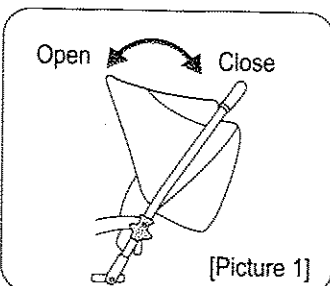

1. To use a canopy

- When you fold or open canopy, push up or down canopy lever as illustrated in the picture above.

 
 
 
2. To detach and attach canopy

- When you want to detach a canopy, please pull a pack out as Picture 2.
- When you attach it, please put a pack in the hall as Picture 2.

WARNING


- Please carefully open and fold when you use canopy lever.
- Do not keep a stroller long time in a hot place like a trunk.
- Please detach canopy then keep it in a shade when you do not use.
- Please fold a canopy before you fold a stroller.

12. TO USE A FOOTCOVER (IF PROVIDED)

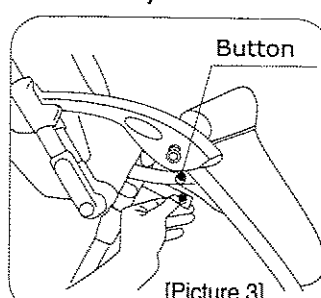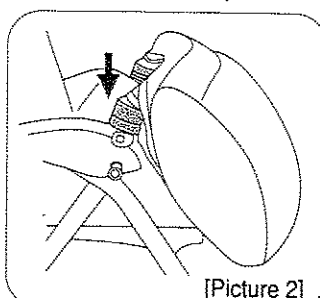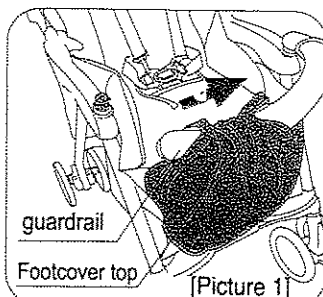

- * After inserting the bumper bar into top of footcover, please make both side of bumper bar to be out as on the picture 1.
- * When you install bumper bar, insert to the armrest until you hear "click" sound as on the picture 2.
- * Attaching snap buttons of PP tape by PP tape coiling over rear legs as on the picture 3.

 13. TO FOLD A FOOTCOVER (IF PROVIDED)

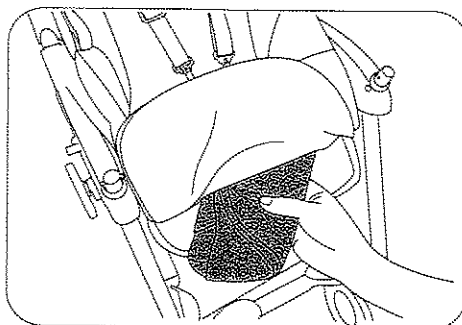

- * Put footcover by folding under the seat when you don't use it as shown picture.

WARNING

- Please make sure that the footcover is folded when you fold the stroller, otherwise you can't correctly fold the stroller.

14. HOW TO HANDLE BABY STROLLER

○ It is important to care a stroller normally. Especially if you do not care for movable spot of the wheel part, it is difficult to have suitable performance. For long and clear use, please care for the baby stroller as below:

1. How to care for the wheels

① When it get dirty

- Please wash out dirt on wheels by clean fabric.
- For serious dirt, please wash out with water and quickly wipe out with clean fabric.
- After you wipe out, please put some oil between wheel and shaft.

② When wheels do not work properly

 
- Please check wheel parts if there are something to disturb for wheel rotation.
- If there's nothing to disturb for wheel rotation, please put some sewing machine oil.

③ When you feed oil in wheels.

- Please use lubricating oil or sewing machine oil.
- Please drop some oil and do not put too much oil.
- After you drop some oil, please rotate a wheel to spread oil.

2. How to detach a seat.

- If you would like to detach a seat, please follow as below.

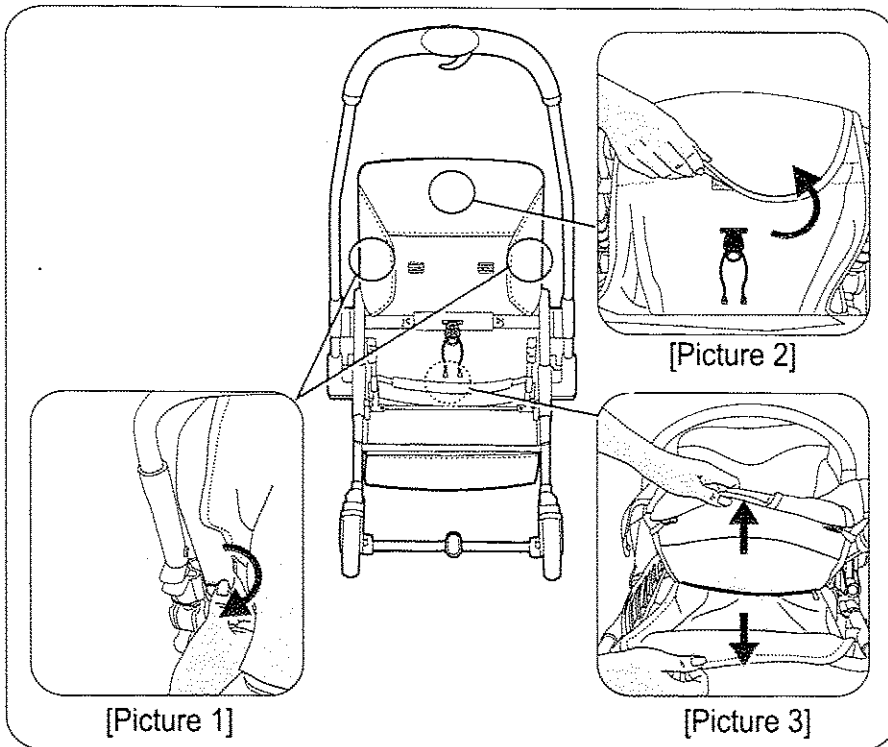


1. After detach a canopy, please detach velcro tape on the rear wing as Picture 1.

2. Please detach velcro tape as Picture 2.


3. As the top view Picture 3, please detach the main seat and backrest.

4. Please take snap button off as Picture 4.

 5. Detached the elastic band to seat-side hook as Picture 5.

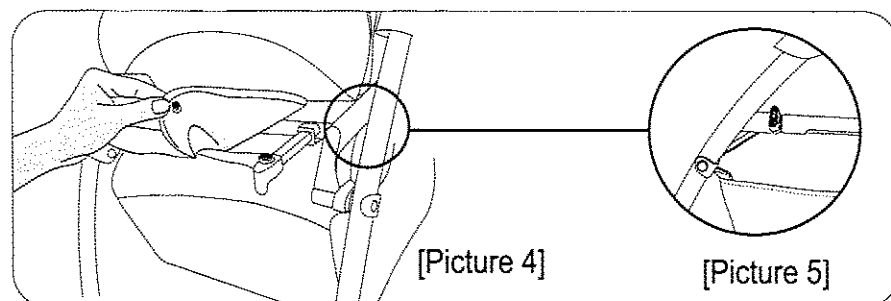


 15. HOW TO ADJUST THE SEAT BELT

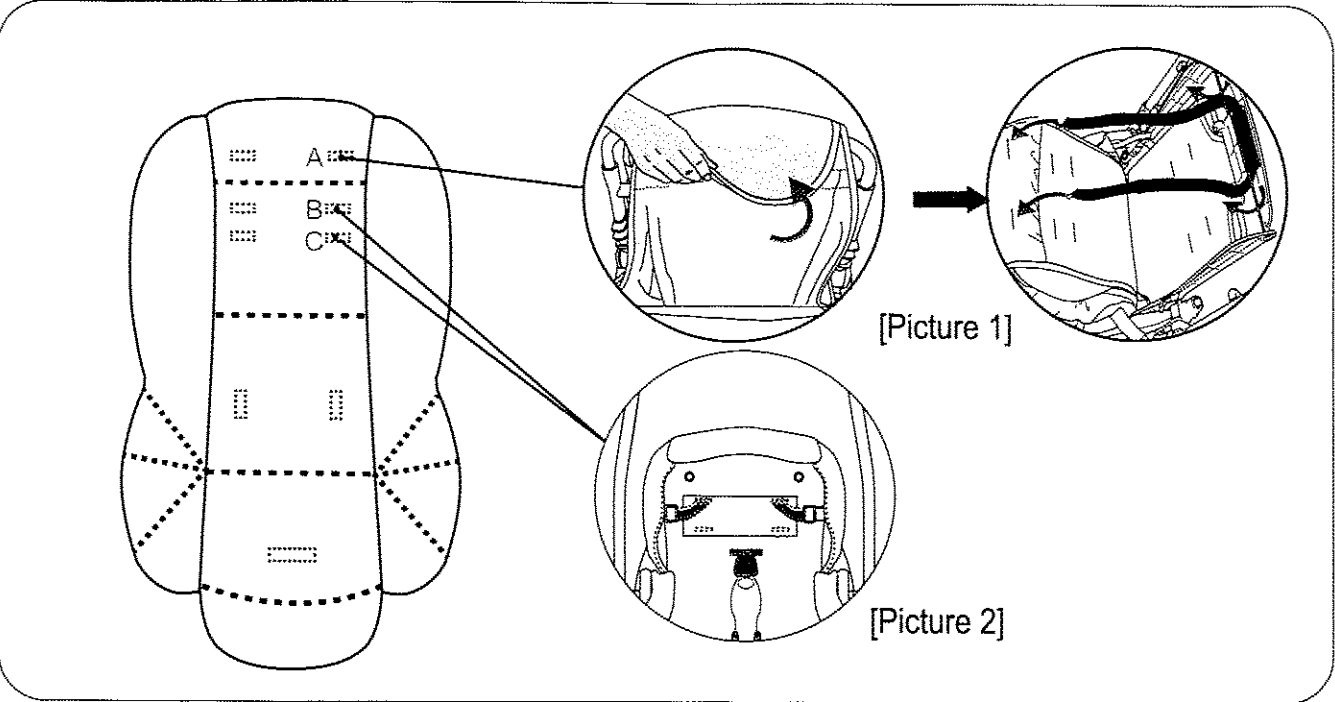

- Please follow the instruction of picture 1 when the safety harness adjusted to point A.
- Please follow the instruction of picture 2 when the safety harness adjusted to point B or C.

 16. HOW TO WASH A SEAT PAD

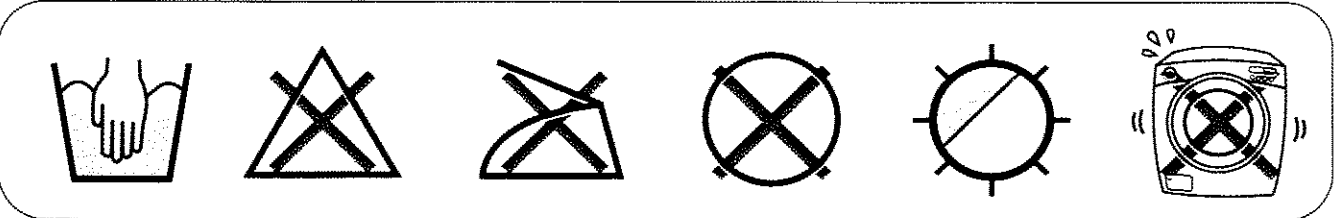

- Do not use a washing machine .
- Please wash seat pad by hands in cold water with neutral detergent and dry it in a shady and well ventilated area.
- Please refrain from using a laundry machine,dehydrator,or dryer as it may cause damage.

IMPORTER: LOVE N CARE PTY LTD, 297 CANTERBURY RD REVESBY NSW 2212

CONTACT: 1300 732 599

READ THESE INSTRUCTIONS CAREFULLY BEFORE USE AND KEEP THEM FOR FUTURE REFERENCE. YOUR CHILD'S SAFETY MAY BE AFFECTED IF YOU DO NOT FOLLOW THESE INSTRUCTIONS.



WARNING

CONFORMS TO
AS/NZS 2088:2013

TO AVOID INJURY OR DEATH, PUT ON ALL THE BRAKES WHENEVER YOU PARK THE STROLLER. ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY. DO NOT LEAVE CHILDREN UNATTENDED. SECURE THE CHILD IN THE HARNESS AT ALL TIMES. DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER. MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER, OTHERWISE THEY MAY BE INJURED. USE THE HARNESS AT ALL TIMES. WHEN NOT IN USE DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAP AND/OR BUCKLE. MAKE SURE CHILDREN ARE CLEAR OF MOVING PARTS IF YOU ADJUST THE STROLLER, OTHERWISE THEY MAY BE INJURED. NEVER LEAVE A HARNESS BUCKLED WHEN NOT FITTED TO A CHILD IN THE STROLLER BECAUSE THE HARNESS CAN FORM LOOPS WHICH MAY POSE A STRANGULATION HAZARD.

- Make sure that the stroller is securely erected before letting your child sit on it.
- Suitable for babies aged beginning 1 month after birth until 36 months old who weight less than 33LBS(15.0KGS).
- For a child under 6 months old, please adjust the seat angle to be more than 130 degree.
- Beware about the usage of the safety belt,brake and other auxiliary equipment of the stroller and properly use ther to the instruction.
- There is potential for fingers or parts of the body to be injured when the vehicle is being folded or unfolded, and that due care should be exercised.
- Vehicle is designed for use on flat or gently sloping surfaces and may unstable on higher sloping and uneven surface; and user should be made aware of the possibility of the vehicle tipping over.
- Do not exceed 5 KGS weight in basket.Excessive weight in the basket may cause hazardous and unstable conditions.
- Overloading will result in over-turning of the stroller and affect stability of chassis/structure.
- When using the stroller,always give attention to your child safety and fasten seat belt.
- Make sure to remove your child from the stroller, fold and secure the stroller properly before using any escalator c staircase.
- Check the screws,fabric seat and all parts from time to time.If necessary,repair it or replace it.
- Regular inspection and maintenance, e.g. lubrication, freedom of movement of locking devices, and security of essential components.
- Only use replacement parts and accessories(e.g. Seat,hook,rain cover,etc.) supplied by manuafacturer. It may be unsafe to use any parts other than that manufactured,approved or recommended by manufacturer.
- Mild soap water and dampedclothed are used to the product .Adequate freshwater is used to.clean and re-lubrica afterwards.
- Always make sure that the stroller is properly lock,secure and store away when not in use.