



# 4 IN 1 WALKER/ROCKER Instruction Manual BP 8670

**IMPORTANT: RETAIN FOR FUTURE REFERENCE** 



Congratulations on your new quality Love N Care product from our exclusive range of baby products. This exceptional design combines the most unique features that any baby product offers.

We are confident that you will appreciate its many highlights, including its reliability and durability. Your new product has been manufactured to comply with the Highest Quality Standards and comes with a 12-month warranty.

As you will soon learn there are many more great features about your new Love N Care product.





Safety guidelines and instructions must always be followed before making use of this product, please retain these instructions for future reference.



READ ALL INSTRUCTIONS BEFORE ASSEMBLY AND USE OF THE WALKER. KEEP INSTRUCTIONS FOR FUTURE USE.

NEVER LEAVE CHILD UNATTENDED.

ALWAYS KEEP CHILD IN VIEW WHILE IN WALKER.

TO AVOID BURNS, KEEP THE CHILD AWAY FROM HOT LIQUIDS, RANGES, RADIATORS, SPACE HEATERS, FIREPLACES, ETC.

USE ONLY ON FLAT SURFACE FREE OF OBJECTS THAT COULD CAUSE THE WALKER TO TIP OVER.

#### **WARNING - STAIR HAZARD**

AVOID SERIOUS INJURY OR DEATH BLOCK STAIRS/STEPS SECURELY BEFORE USING WALKER.

NOT SUITABLE FOR CHILDREN WHO ARE UNABLE TO SIT UP UNAIDED.

NOT SUITABLE FOR CHILDREN WHO ARE ABLE TO WALK.

NOT APPROPRIATE FOR CHILDREN AGED LESS THAN 6 MONTHS.

MAXIMUM WEIGHT LIMIT OF 11KG AND LESS THAN 82CM.

DO NOT USE THE WALKER IF IT IS DAMAGED OR BROKEN.

IT IS RECOMMENDED THAT THE WALKER/ROCKER BE USED ONLY FOR SHORT PERIODS OF TIME EG. 20 MIN.

TO AVOID INJURIES MAKE SURE THE CHILD IS NOT IN THE ROCKER/WALKER WHEN FOLDING OR UNFOLDING.

DO NOT ADJUST OR CARRY THE ROCKER/WALKER WITH THE CHILD IN IT.

ENSURE THAT THE CHILD CAN TOUCH THE FLOOR WITH BOTH FEET AFTER ADJUSTING THE HEIGHT OF THE WALKER (IF USING AS A WALKER)

DO NOT USE OR STORE OUTDOORS.

DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN.


IF USED ON CARPETS THE BASE BLOCKS MAY REDUCE THE WALKER SPEED.


DO NOT USE ACCESSORIES OTHER THAN THOSE SUPPLIED OR APPROVED BY LOVE N CARE.

ADJUST THE HEIGHT OF THE WALKER SO THAT BOTH FEET OF A CHILD IN THE WALKER SHOULD BE ABLE TO TOUCH THE GROUND.

ALWAYS USE THE SAFETY LOCKS ONCE THE WALKER HEIGHT IS ADJUSTED.

## PARTS LIST

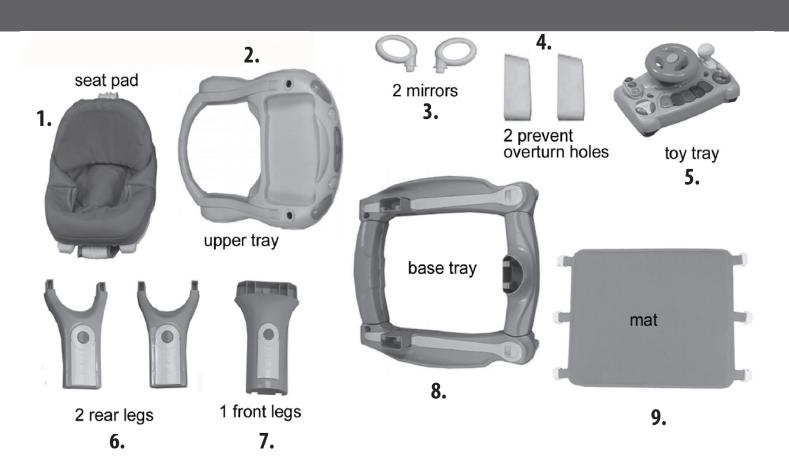

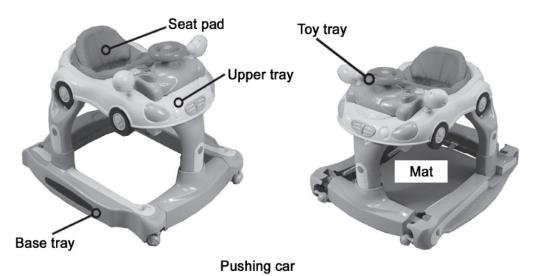


### WHEN YOU OPEN YOUR ROCKER/WALKER CARTON PLEASE ENSURE YOU HAVE ALL THE ITEMS:

- 1. SEAT PAD
- 2. UPPER TRAY
- 3. X2 MIRRORS
- **4. X2 PREVENT OVERTURN HOLES**
- 5. TOY TRAY
- 6. X2 REAR LEGS
- 7. FRONT LEG
- 8. BASE TRAY
- 9. MAT

### **INSTALLING THE SIDE MIRRORS**


Insert the mirrors (3)(a) into the designated holes located on the upper tray (2)(b) as the arrows indicate. Ensure that the mirrors can rotate 360 degrees in both directions.

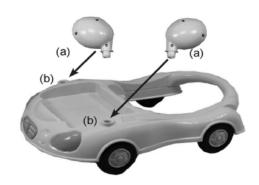

### **INSTALLING THE PREVENT OVERTURN POLES**


Insert the prevent overturn poles (4)(a) into the upper tray of the prevent overturn holes (b), Press them as the arrows indicates to align the hooks into the button holes.



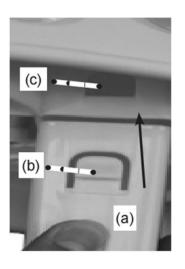


### **INSTALLING THE FRONT AND REAR LEGS**


Turn the upper tray (2) upside down, Align the front (7) and rear legs (6) into the upper tray slots until they click into place.

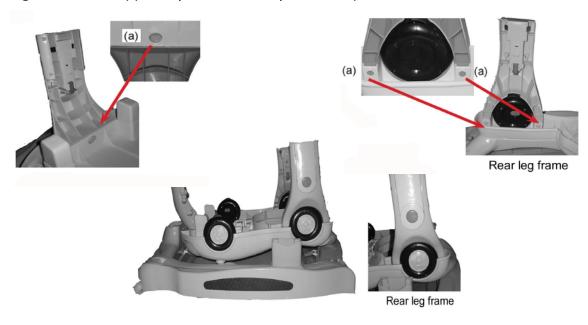

### ATTACHING THE UPPER TRAY TO THE BASE TRAY

 
Place the upper tray (with the attached front and rear legs) over the base tray (8). Align all the legs into the designated slots in the base frame. Click on the circular buttons on the legs to lock the safety lock.



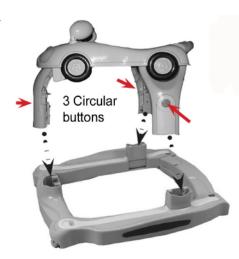

#### **INSTALLING THE SEAT**

Place the seat pad (1) over the backrest. Align all the plastic tabs on the seat pad to the designated button holes on the upper tray (2). Put all plastic tabs right through as shown below. After installing all the plastic tabs ensure that the seat is in a stable position. Hook the clip on the back of the seat to the handle of the uppertray.

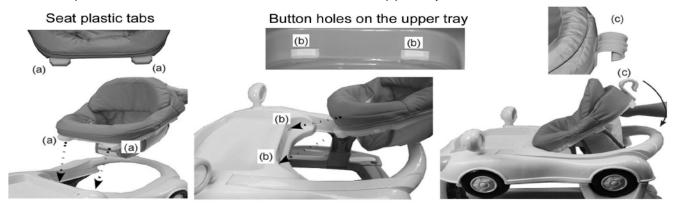

### **INSTALLING THE TOY TRAY AND BATTERIES**

Gently remove the toy tray (5) from the upper tray (2). Use a screwdriver (not provided) to remove the battery cover. Insert 3x AA (1.5V) Alkaline batteries with the correct polarity.

 
Place the tray back on and screw the cover on. **NOTE: Non-rechargeable batteries are not to be recharged.** 

 
Do not mix old and new or different types of batteries.

Remove exhausted batteries from the toy tray.

The supply terminals are not to be short-circuited.








### HOW TO ADJUST THE HEIGHT OF THE ROCKER/WALKER

Open the safety lock and push it up, press the circular buttons located on the legs, either pull up or down on each leg to the desired position. The walker can be adjusted to three positions.


**WARNING:** when raising or lowering the walker make sure all the legs are in the same position. Once the desired level has been selected make sure you lock the safety lock and lock the clutch.

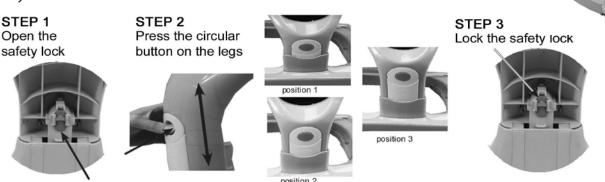


### **ACTIVATING ROCKING FUNCTION AND ATTACHING THE MAT**

To activate the rocking function pull the button (c) located of the front of the base tray (8) at the same time, turn the right side of the frame downwards until it engages in the holes underneath the front castors. Repeat the same for the left side. Hang the mat (9) on the button tray. Align all the plastic tabs on the rug to the desired holes on the base tray (8).

To place back into walker function pull the button (c) on the front of the base tray and pull the legs upwards. Repeat for both sides. They should snap into the sides. **WARNING:** When raising or lowering the walker, adjust one position at a time. Do not adjust the walker with child inside. Remove the mat when using as a walker.

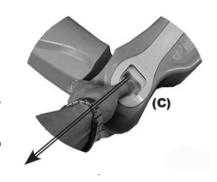

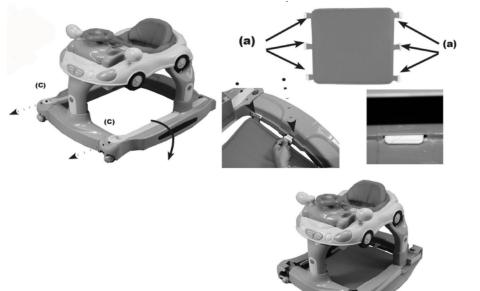



### **REMOVING THE LEGS AND SEAT**

To remove the seat pad (1) unclip the hook from the handle and push the seat upwards then pull the seat out of the button holes.


To remove the legs open the safety lock and push it upwards, press the circular buttons located on the legs, lift the upper tray upwards. The upper tray (2) and the base tray (8) will become seperated. Turn the upper tray upside down then press the circular button (a) then pull the legs upwards.



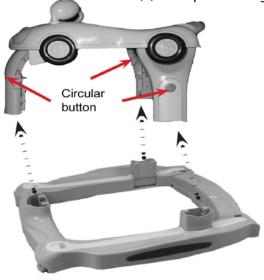

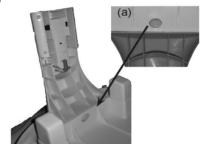




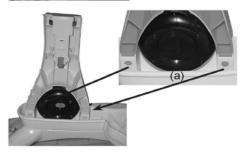


### **USING AS A WALKER PUSH CAR**

 Open the rotation button (a) on the upper tray (2), the rotation button is parralel to the rotation holes, then press the clutch button (b), at the same time push the handle upwards then loosen the button (b) until the handle and the clutch are tightened.





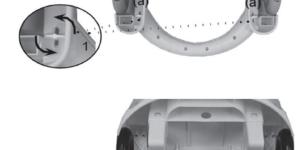





### CARE AND MAINTENANCE

ALL LOVE N CARE PRODUCTS HAVE ONE YEAR WARRANTY FROM THE DATE OF PURCHASE.

TO PROLONG THE LIFE OF YOUR ROCKER/WALKER KEEP IT CLEAN AND DO NOT LEAVE IT IN DIRECT SUNLIGHT FOR EXTENDED PERIODS OF TIME. DO NOT DRY CLEAN OR USE BLEACH.

ALL ITEMS ON THE ROCKER/WALKER CAN BE CLEANED USING WARM WATER WITH A HOUSEHOLD SOAP OR A MILD DETERGENT. ALLOW IT TO DRY FULLY BEFORE USING.

CLEAN THE BASE BLOCKS REGULARLY TO ENHANCE THE STOPPING PERFORMANCE.

REMOVE BATTERIES BEFORE STORING AWAY FOR LONG PERIODS OF TIME. CHECK THE CONDITION OF BATTERIES PERIODICALLY FOR FLUID LEAKAGE. DISCONTINUE USING THE TRAY IF THERE IS LEAKAGE.

IF THE WHEELS BECOME SQUEEKY USE A SILICON BASED SPRAY TO LOOSEN. IT IS RECOMMENDED TO REGULARLY INSPECT AND MAINTAIN MOVEMENT OF LOCKING DEVICES AND SECURITY OF ESSENTIAL COMPONENTS.

REGULARLY CHECK ALL PARTS FOR WEAR AND TEAR.

DO NOT LEAVE THE ROCKER/WALKER IN DIRECT SUNLIGHT FOR EXTENDED PERIODS OF TIME.

DO NOT STORE THE WALKER/ROCKER IN DAMP OR WET CONDITIONS BUT IN A WELL VENTILATED AREA TO PREVENT MOULD AND MILDEW.

IF ANY OF THE PARTS ARE MISSING OR BROKEN YOU SHOULD CONTACT THE MANUFACTURER AND DISCONTINUE USING THE ROCKER/WALKER UNTIL THEY ARE REPLACED.

Manufactured By:

Love N Care Pty Ltd. 297-299 Canterbury Rd, Revesby

NSW 2212 Australia

#### WARRANTY AGAINST DEFECTS.

All Love n care products are guaranteed for twelve months from the date of purchase.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This covers against faults which develop through faulty materials and workmanship. Misuse, accidental damages, normal wear and tear or neglect are not covered.

If a fault becomes apparent, please return the item to the store of purchase with your receipt. You must inform the store what the defect is. We will then arrange for its repair or it will be assessed for replacement as expediently as possible. The benefits of this warranty are in addition to other right and remedies under the law in relation to the goods or services to which this warranty relates.

If you are unable to return the item to the store of purchase, you can contact Love N Care on free call 1300 732 599. We will then organise for either somebody to inspect the item or arrange for a courier to pick it up and return it back to you.



For more information, please contact us:

#### Love N Care Pty Ltd.

Email: info@lovencare.com.au Web: www.lovencare.com.au

Ph: 1300 732 599 Fax: 02 9774 4633

X	
Please fill in this section to validate your warranty and send to: 297 Canterbury Rd Revesby NSW 2212.	
Name:	Store Purchased:
Address:	Date Purchased:
Product Name/No:	



### Contact Us

Head Office:

Love N Care Pty Ltd. 297-299 Canterbury Rd, Revesby NSW 2212 Australia Contact No: 02 9774 4655

Fax: 02 9774 4633

Email: info@lovencare.com.au Website: www.lovencare.com.au

Brisbane
7-9 Eileen Street
Underwood QLD 4119 Australia
Contact No: 07 3290 4217

Fax: 07 3209 5019

Western Australia
5 Modal Crescent
Canning Vale WA 6155 Australia
Contact No: 08 9455 4972

Fax: 08 9455 4728

#### let's be friends!

f http://www.facebook.com/lovencare1

http://twitter.com/love\_ncare



