





# Instruction Manual BP 8881 PLEASE KEEP INSTRUCTIONS FOR FUTURE REFERENCE



Congratulations on your new quality Love N Care product from our exclusive range of baby products. This exceptional design combines the most unique features that any baby product offers.

We are confident that you will appreciate its many highlights, including its reliability and durability. Your new product has been manufactured to comply with the Highest Quality Standards and comes with a 12-month warranty.

As you will soon learn there are many more great features about your new Love N Care product.







Safety guidelines and instructions must always be followed before making use of this product, please retain these instructions for future reference.

This product complies with:

AS NZS 4684-2009 - High Chair Standard

EN 14988:2006 Parts 1 and 2 - Childrens Highchair



#### **WARNING: TO AVOID INJURY OR DEATH:**

FOLLOW THE MANUFACTURER'S INSTRUCTIONS.

DO NOT LEAVE CHILDREN UNATTENDED.

THE HARNESS MUST ALWAYS BE USED AND CORRECTLY FITTED-MOST INJURIES FROM HIGH CHAIRS ARE CAUSED BY FALLS.

POSITION THE HIGH CHAIR AWAY FROM SOLID STRUCTURES AND BENCHES TO AVOID INJURIES CAUSED BY FALLS AND BY ACCESS TO DANGEROUS ITEMS.

USE THE HARNESS AT ALL TIMES.

### THE MAXIMUM TOTAL WEIGHT FOR THE HIGH CHAIR IS 17KG

Use the high chair on a flat, even and horizontal floor. Do not elevate the high chair on any structure or table.

To reduce the risk of injury, please position the high chair away from furniture, walls, hot surfaces and liquids, window covering cords, and electrical cords and position the high chair away from furniture when the chair is not being used as a table.

To avoid serious injury always use the harness provided to secure the child. (Adjust the straps to suit the body size of your child) The harness can form loops which may be a strangulation hazard.

Never leave a harness connected when not fitted to a child in the high chair.

The highchair should only be used once the child is capable of reliably and conisitently sitting upright.

Before placing the child in the high chair ensure that the seat is secure.

Do not lift the high chair whilst the child is seated.

Discontinue using the high chair if it is not working correctly and you should contact Love N Care to repair it.

The child should be secured in the high chair at all times by the restraining system either in the upright position. The tray is not designed to hold the child in the chair.

# PARTS LIST






### WHAT YOU SHOULD HAVE:

- 1. SEAT UNIT
- 2. TRAY
- 3. REAR LEG SUPPORT
- 4. FRONT LEG SUPPORT
- 5.4X TOP LEG
- 6. 4X BOTTOM LEGS (FR,FL,RR,RL)
- 7. 5-POINT HARNESS

# ASSEMBLY INSTRUCTIONS Assembling the legs

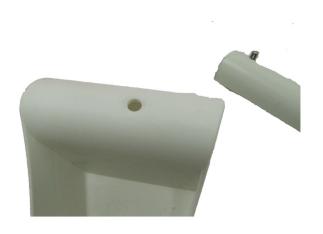


Slot the bottom legs (6) (FR and FL) into the front leg support (4)



Depress the button on the top of the bottom leg to pass it through the front leg support. Do not lock the leg into the leg support yet.



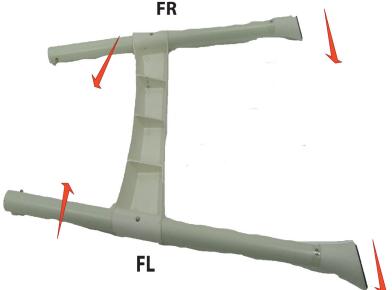


Slot the top leg (5) into the front leg support (4). The top leg (5) and bottom leg (6) can be clipped together. Please ensure that the top button on the top leg is pointing inwards and the front legs are pointing forwards

For the rear legs repeat the sames steps as the front legs

# ASSEMBLY INSTRUCTIONS Attaching the legs to the seat



Place the seat unit (1) on the floor upside down. You can see on the bottom of the seat unit it has markings FL(front left) FR (front right) RR (Rear right) RL (Rear Left). These are marked so you can match the corresponding legs into the right housing.

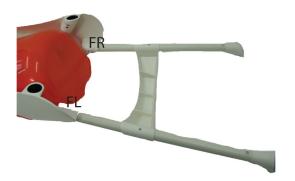

Start by attaching the front legs in the FR and FL positions located on the seat. Depress the pins on the ends and then slide legs through. Ensure that the pins are protruding through the holes in the housing.



You should then attach the rear legs in the RR and RL positions located on the seat. Depress the pins on the ends and then slide legs through. Ensure that the pins are protruding through the holes in the housing.



The assembled legs should look like this.

# ASSEMBLY INSTRUCTIONS Attaching the tray







Locate the slots on the seat on where to place the tray. There are three slots one in the front and 2 on the sides.



Front Slot

Side Slot



Slot the hooks on the side of the tray (2) into the sides of the seat (1).





Slot the ends of the tray until it locks into the tray support.

## HOW TO USE THE HARNESS



#### How to use the Harness

- 1. Place your child into the seat.
- 2. Place the crotch strap between their legs.
- 3. Place the shoulder straps over their shoulders
- 4. Attach the shoulder straps to the waist strap holder.
- 5. Insert the waist buckles into the crotch strap housing.
- 6. Carefully adjust the sliders located on the shoulder, and waist strap. The harness should be snugly fitted to the baby's body tight enough so that the baby cannot wriggle itself free of the straps but loose enough so it doesn't cause it any discomfort.
- 7. To open the harness. To release the buckle squeeze on the side prongs simultaneously and pull apart from the buckle housing.







Insert waist/shoulder strap into the crotch strap housing.

Squeeze the side prongs to release the harness.

**⚠WARNING**USE THIS HARNESS AT ALL TIMES



## Contact Us

Head Office:

Love N Care Pty Ltd. 297-299 Canterbury Rd, Revesby NSW 2212 Australia

Contact No: 02 9774 4655 Fax: 02 9774 4633

Email: info@lovencare.com.au Website: www.lovencare.com.au

Brisbane
7-9 Eileen Street
Underwood QLD 4119 Australia
Contact No: 07 3290 4217

Fax: 07 3209 5019

Western Australia

5 Modal Crescent Canning Vale WA 6155 Australia

Contact No: 08 9455 4972

Fax: 08 9455 4728

### let's be friends!

f http://www.facebook.com/lovencare1







## **CLEANING AND MAINTENANCE**

ALL LOVE N CARE PRODUCTS HAVE ONE YEAR WARRANTY FROM THE DATE OF PURCHASE.

IT IS RECOMMENDED TO REGULARLY INSPECT AND MAINTAIN MOVEMENT OF LOCKING DEVICES AND SECURITY OF ESSENTIAL COMPONENTS.

REGULARLY CHECK ALL PARTS FOR WEAR AND TEAR.

DO NOT USE SPRAY LUBRICANTS, SIMPLY WIPE CLEAN AFTER USE.

THE SEAT LINER CAN BE CLEANED BY SPONGING WITH WARM SOAPY WATER AND A MILD DETERGENT. A MILD DISINFECTANT MAY BE USED IF DESIRED.

STUBBORN MARKS MAY BE REMOVED WITH A NON ABRASICE CREAM CLEANER.

NEVER CLEAN WITH ABRASIVE, AMMONIA BASED, BLEACH BASED OR SPIRIT TYPE CLEANERS.

THE TRAY IS DISHWASHER SAFE

#### **FABRIC CARE**

- HAND WASH ONLY
- DO NOT BLEACH
- DO NOT TUMBLE DRY
- DO NOT IRON
- DO NOT WRING
- DO NOT DRY CLEAN











