


love^hcare™

formulababy

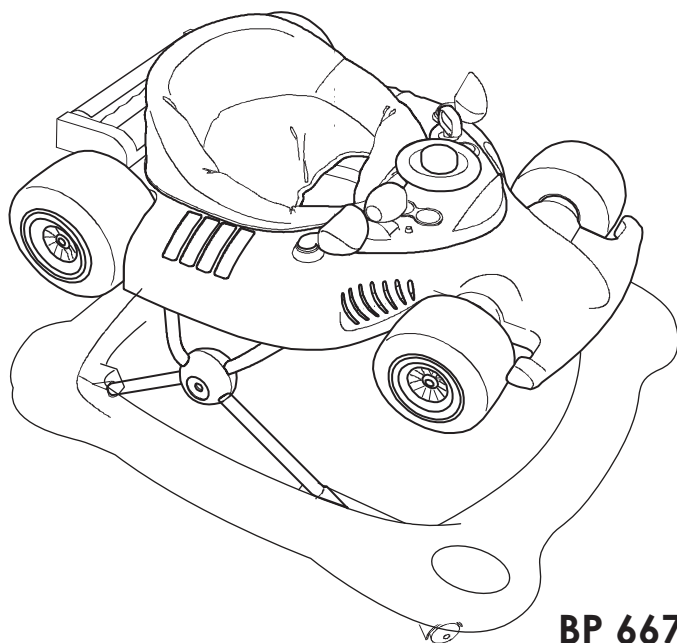


BP 6671

Instruction manual

Please read these instructions carefully and keep for future reference

loveⁿcare™

Congratulations on purchasing your new Love N Care walker
In under an hour you should be able to have this one of kind walker ready to meet your beautiful child :)

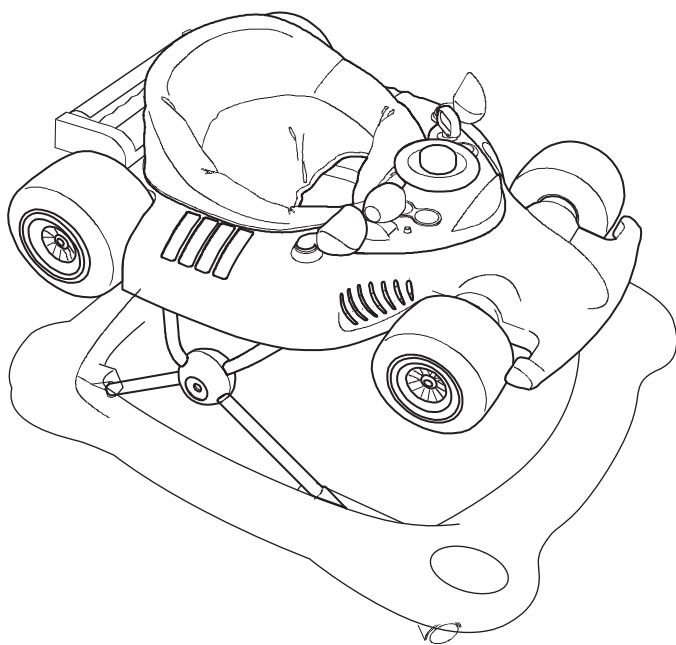



Safety guidelines and instructions must always be followed before making use of this product, please retain these instructions for future reference.

This product complies with ASTM EN1273:2005 AS/NZS ISO8124.1 ASTM F977-03 STANDARDS.

WARNING

READ ALL INSTRUCTIONS BEFORE ASSEMBLY AND USE OF THE WALKER. KEEP INSTRUCTIONS FOR FUTURE USE.

NEVER LEAVE CHILD UNATTENDED.

ALWAYS KEEP CHILD IN VIEW WHILE IN WALKER.

TO AVOID BURNS, KEEP THE CHILD AWAY FROM HOT LIQUIDS, RANGES, RADIATORS, SPACE HEATERS, FIREPLACES, ETC.

USE ONLY ON FLAT SURFACE FREE OF OBJECTS THAT COULD CAUSE THE WALKER TO TIP OVER.

WARNING - STAIR HAZARD

AVOID SERIOUS INJURY OR DEATH BLOCK STAIRS/STEPS SECURELY BEFORE USING WALKER.

NOT SUITABLE FOR CHILDREN WHO ARE UNABLE TO SIT UP UNAIDED.

NOT SUITABLE FOR CHILDREN WHO ARE ABLE TO WALK.

NOT APPROPRIATE FOR CHILDREN AGED LESS THAN **6 MONTHS**.

MAXIMUM WEIGHT LIMIT OF 12KG AND LESS THAN 80CM.

DO NOT USE THE WALKER IF IT IS DAMAGED OR BROKEN.

IT IS RECOMMENDED THAT THE WALKER BE USED ONLY FOR SHORT PERIODS OF TIME EG. 20 MIN.

TO AVOID INJURIES MAKE SURE THE CHILD IS NOT IN THE WALKER WHEN FOLDING OR UNFOLDING.

DO NOT ADJUST OR CARRY THE WALKER WITH THE CHILD IN IT.

ENSURE THAT THE CHILD CAN TOUCH THE FLOOR WITH BOTH FEET AFTER ADJUSTING THE HEIGHT OF THE WALKER

DO NOT USE OR STORE OUTDOORS.

DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN.

IF USED ON CARPETS THE BASE BLOCKS MAY REDUCE THE WALKER SPEED.

DO NOT USE ACCESSORIES OTHER THAN THOSE SUPPLIED OR APPROVED BY LOVE N CARE.

WARNING - BATTERY USAGE

NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.

DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES ARE NOT TO BE MIXED.

EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TRAY.

THE SUPPLY TERMINALS ARE NOT TO BE SHORT CIRCUITED.

BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY.



WARNING - STAIR HAZARD



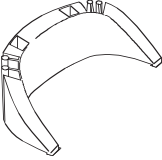
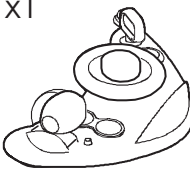
 

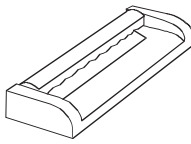
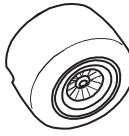
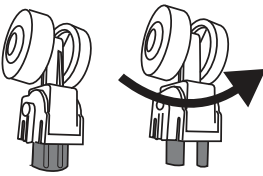
- AVOID SERIOUS INJURY OR DEATH
- BLOCK STAIRS/STEPS SECURELY BEFORE USING WALKER




WARNING

- NEVER LEAVE CHILD UNATTENDED. ALWAYS KEEP CHILD IN VIEW WHILE IN WALKER
- USE ONLY ON FLAT SURFACES FREE OF OBJECTS THAT COULD CAUSE THE WALKER TO TIP OVER
- TO AVOID BURNS, KEEP THE CHILD AWAY FROM HOT LIQUIDS RANGES, RADIATORS, SPACE HEATERS, FIREPLACES, ETC.

parts

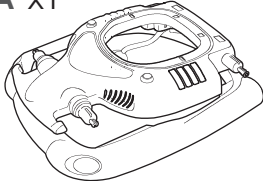A x1 	B x1 	C x1 
D x1 	E x8 	F x2 
G x1 	H x4 	I x 2(sets) 


Tools required

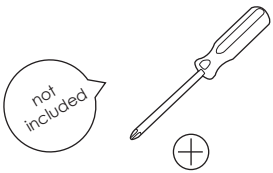


assembly

1. Unpack all contents and check that all parts are present before starting assembly. Please refer to parts list.

To open the baby walker (A), raise the tray to the middle position as shown.

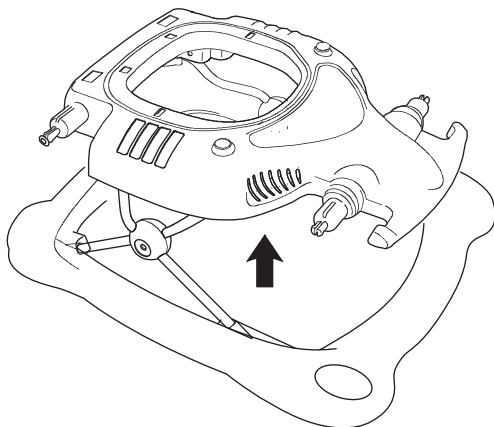

2. Assemble the back panel (C) as illustrated.

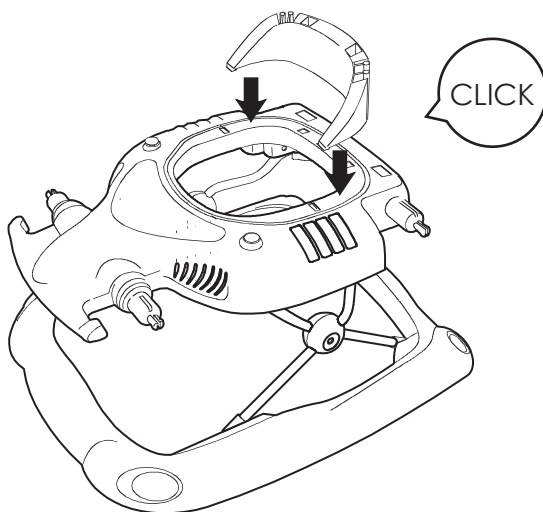


assembly

3. Push the crotch portion of seat pad (B) inside out to form seat, so the fabric is on inside of seat pad.

Insert the 8 round tabs on the seat pad into slots located around the seat ring. Slide tabs through holes. Turn tray up side down, pull tabs and align into grooves.


Note. you may have to push tabs from top of walker to properly fasten.

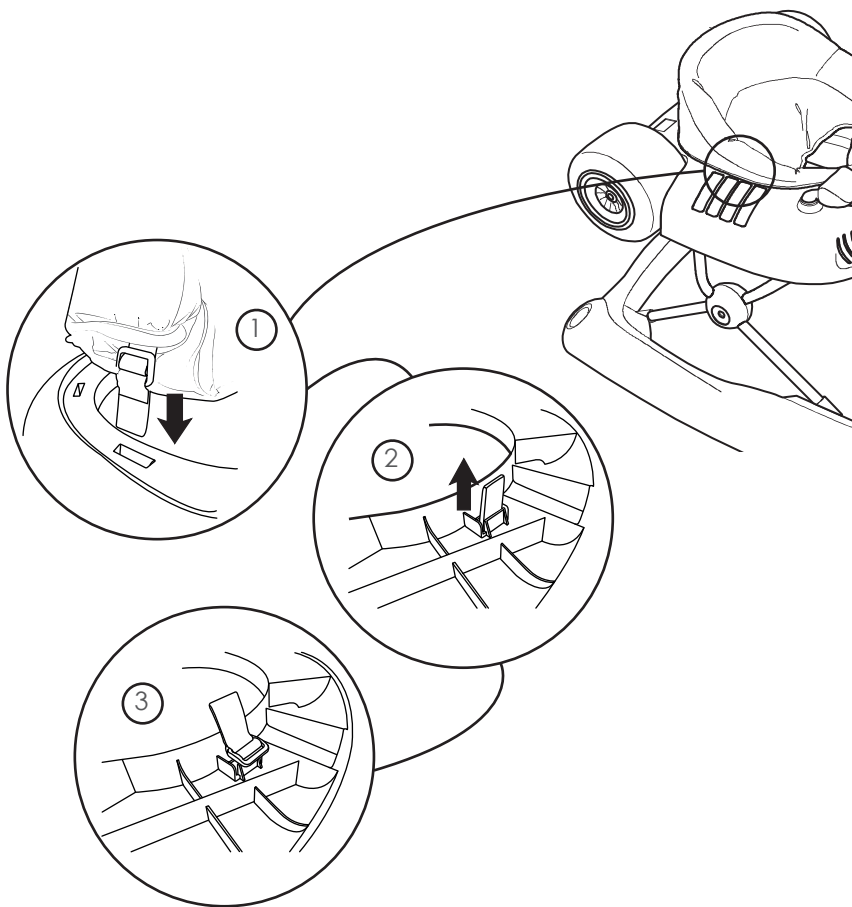

Note. Push down on seating area of seat pad to ensure seat is securely in place. **WARNING.** Do not use walker if all tabs are not secured properly.


assembly

4. Assemble the four wheels. Push wheels (H) firmly onto spoke end until you hear a click.

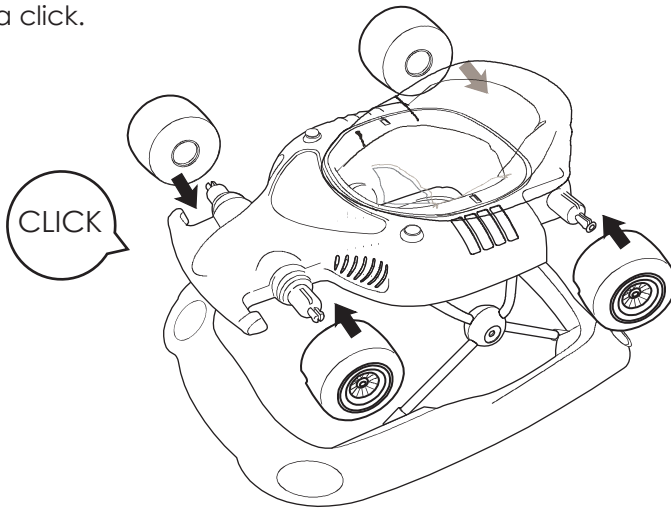

5. Assemble the tail panel (G). Insert into the allocated slots at the rear of the walker and push down firmly until it clicks into place.

Assemble the car mirrors (F). Insert mirror into the allocated slots either side of the walker. Push down firmly until they click into place.

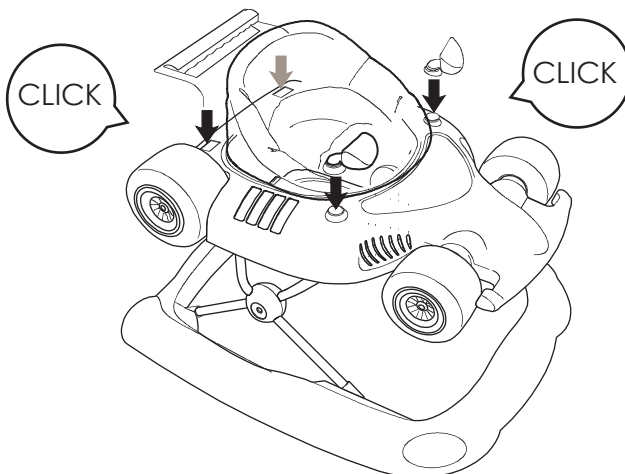


assembly

6. Place walker on a solid flat surface with bottom of base facing upwards. Insert the pins of the wheels into their housing, pressing them until they snap into position.

WARNING. Ensure you have installed the wheels properly before continuing.


7. Next, insert the anti-slip strips (E) into the required holes. Ensure the strips are attached securely before beginning use.

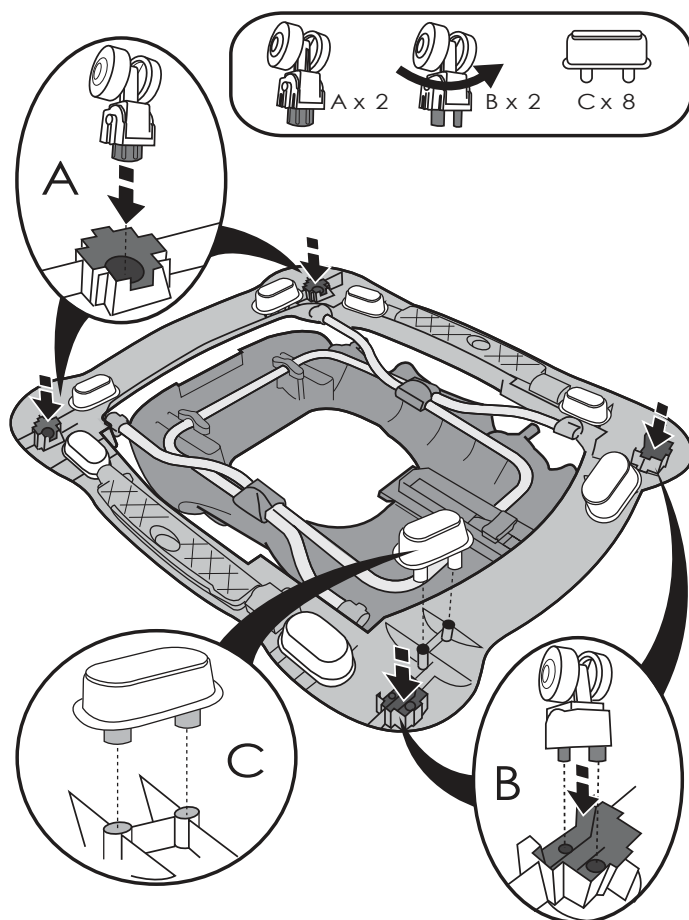

battery

8. The toy tray (D) requires 2 x "AA" batteries (not included). Use a screw driver to unfasten battery cover. Insert batteries. Secure battery cover back into position.

WARNING. Remove battery before storing the toy tray.

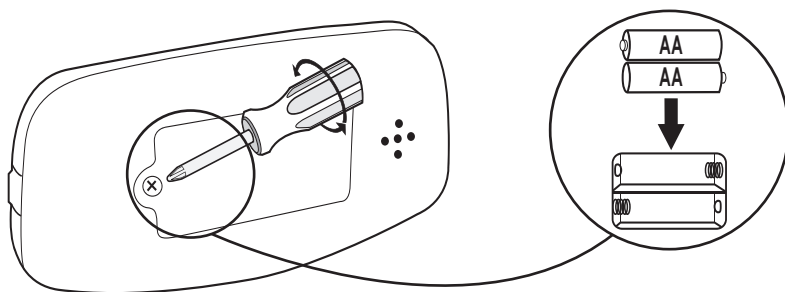

⚠ CAUTION: TO PREVENT BATTERY LEAKAGE:

- Be sure to insert correctly and always follow the toy and battery manufacturer's instructions.
- Never mix old and new batteries (replace all batteries at the same time)
- Never mix Alkaline standard (Carbon Zinc) or rechargeable (Nickel-Cadmium) batteries.
- Use only batteries of the same equivalent type as recommended.
- Do not use RECHARGEABLE batteries.


ATTENTION:

- Batteries should be installed by adult only.
- Do not recharge non-rechargeable batteries.
- Always remove exhausted or dead batteries from the product; do not dispose of in fire.
- Remove batteries from product before extended storage.
- Do not short circuit the supply terminals.
- Batteries may explode or leak if misused.

NOTE: BATTERIES NOT INCLUDED!

assembly

9. Once batteries are assembled, attach the toy tray (D) to the walker. Tray will click when secure.

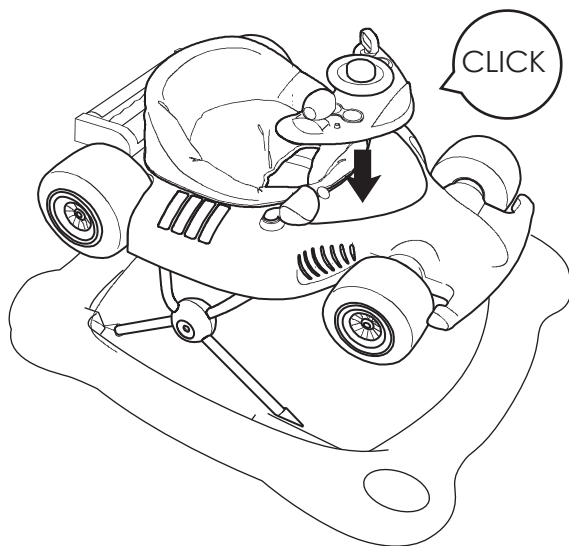


adjusting seat height

10. The baby walker has 3 different heights. To adjust heights, remove baby from walker. Turn the safety button lengthwise and press the safety button until the mechanism is released. Adjust to desired height.

WARNING. When the position has been selected, check the safety button is turned 90° to prevent the accidental release.

Please ensure the baby is not in the walker when you are adjusting height and ensure the mechanism is locked before placing baby in walker.

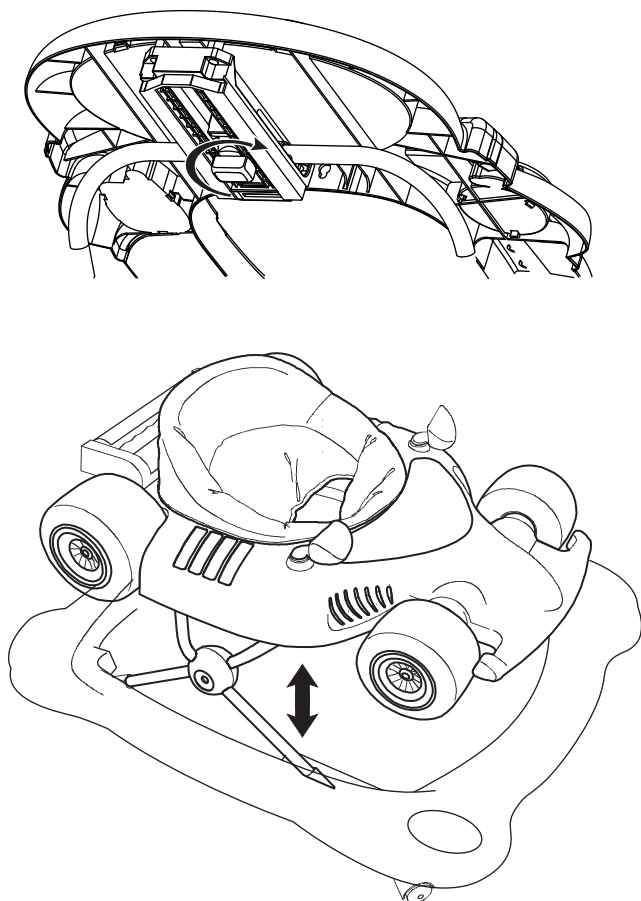

safety

The child may be hurt if you do not follow these instructions.

This product is suitable for a child able to sit unaided, approximately from 6 months of age. It is not intended for children who can walk by themselves or weigh more than 12kg.

⚠ WARNING:

Never leave the child unattended.

The child will be able to reach further and move rapidly when in the baby walking frame.

- Prevent access to stairs, steps and uneven surfaces.
- Guard all fires, heating and cooking appliances.
- Remove hot liquids, electrical flexes and other potential hazards from reach.
- Prevent collisions with glass in doors, windows and furniture.
- Do not use the baby walking frame if any components are broken or missing.
- This baby walking frame should be used only for short periods of time (e.g 20min).
- Do not use the replacement parts other than those approved by the manufacturer or distributor.

Complies with EN 1273 : 2005 + AS/NZS ISO8124.1 ASTM F977-03.

care

Maintenance

This product requires regular maintenance to keep it in good working order.

Regularly check all parts of the product to ensure that they are operating correctly and for signs of wear or damage.

Only replacement parts supplied or recommended by the manufacturer should be used.

Cleaning

Refer to care label on the product for cleaning instructions for fabrics.

Clean metal or plastic components with mild detergent and warm water.

Never use abrasive, ammonia based, bleach based or spirit type cleaners.

Ensure the product is fully dry before use or storage.

WARRANTY AGAINST DEFECTS

ALL LOVE N CARE PRODUCTS ARE GUARANTEED FOR TWELVE MONTHS FROM THE DATE OF PURCHASE.

OUR GOODS COME WITH GUARANTEES THAT CANNOT BE EXCLUDED UNDER THE AUSTRALIAN CONSUMER LAW. YOU ARE ENTITLED TO A REPLACEMENT OR REFUND FOR A MAJOR FAILURE AND FOR COMPENSATION FOR ANY OTHER REASONABLY FORSEEABLE LOSS OR DAMAGE. YOU ARE ALSO ENTITLED TO HAVE THE GOODS REPAIRED OR REPLACED IF THE GOODS FAIL TO BE OF ACCEPTABLE QUALITY AND THE FAILURE DOES NOT AMOUNT TO A MAJOR FAILURE.

THIS COVERS AGAINST FAULTS WHICH DEVELOP THROUGH FAULTY MATERIALS AND WORKMANSHIP. MISUSE, ACCIDENTAL DAMAGES, NORMAL WEAR AND TEAR OR NEGLECT ARE NOT COVERED.

IF A FAULT BECOMES APPARENT, PLEASE RETURN THE ITEM TO THE STORE OF PURCHASE WITH YOUR RECEIPT. YOU MUST INFORM THE STORE WHAT THE DEFECT IS. WE WILL THEN ARRANGE FOR ITS REPAIR OR IT WILL BE ASSESSED FOR REPLACEMENT AS EXPEDIENTLY AS POSSIBLE. THE BENEFITS OF THIS WARRANTY ARE IN ADDITION TO OTHER RIGHTS AND REMEDIES UNDER THE LAW IN RELATION TO THE GOODS AND SERVICES TO WHICH THIS WARRANTY RELATES.

IF YOU ARE UNABLE TO RETURN THE ITEM TO THE STORE OF PURCHASE, YOU CAN CONTACT LOVE N CARE ON FREECALL 1300732599. WE WILL THEN ORGANISE FOR EITHER SOMEBODY TO INSPECT THE ITEM OR ARRANGE FOR A COURIER TO PICK IT UP AND RETURN IT BACK TO YOU.

FOR MORE INFORMATION PLEASE CONTACT: LOVE N CARE PTY LTD
EMAIL: info@lovencare.com.au
WEB: www.lovencare.com.au
PHONE: 1300 732 599
FAX: 02 9774 4633



Contact Us

Head Office:

Love N Care Pty Ltd.
297-299 Canterbury Rd, Revesby
NSW 2212 Australia
Contact No: 02 9774 4655
Fax: 02 9774 4633
Email: info@lovencare.com.au
Website: www.lovencare.com.au

 <http://www.facebook.com/lovencare1>

 http://twitter.com/love_ncare



100 % AUSTRALIAN OWNED SINCE 1984

let's be friends!

lovehncare™
lovencare.com.au