


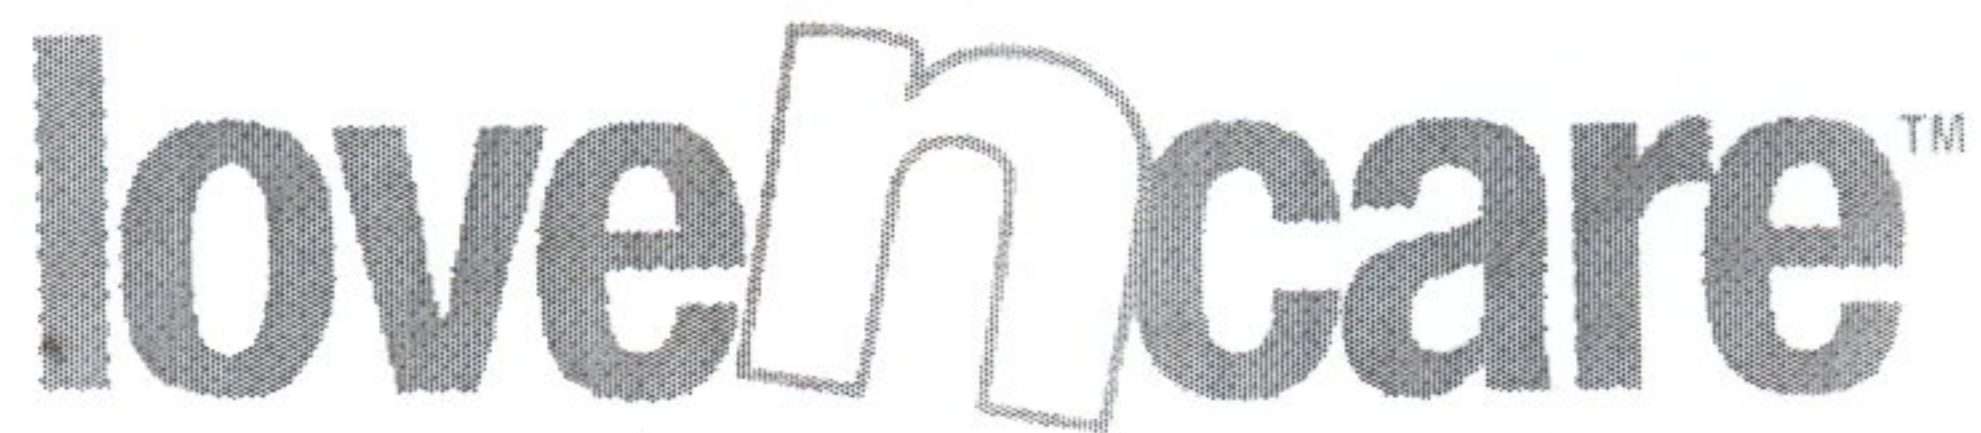

## **Instructions for Hi-Rise Tandem BP 1821**

[info@lovencare.com.au](mailto:info@lovencare.com.au)  
[www.lovencare.com.au](http://www.lovencare.com.au)





Congratulations on your new quality Love N Care product from our exclusive range of baby products. This exceptional design combines the most unique features that any baby product offers.

We are confident that you will appreciate its many highlights, including its reliability and durability. Your new product has been manufactured to comply with the Highest Quality Standards and comes with a 12-month warranty.

As you will soon learn there are many more great features about your new Love N Care product.

Safety guidelines and instructions must always be followed before making use of this product, please retain these instructions for future reference:

#### WARNING:

- Always make sure the stroller is completely opened and locked before using.
- Never leave your child unattended in the stroller
- Do not use the stroller on stairways or escalators.
- Maximum weight should not exceed 20kg.
- This stroller is not a toy, do not allow children to climb into the stroller unassisted as this may cause the stroller to tip over and cause injury to your child.
- To avoid serious injury always use the harness provided to secure child.
- Periodically check the restraint system to make sure it is secured.
- Care should be taken while folding and unfolding stroller to prevent finger entrapment.
- Ensure your child's fingers, hands and all other body parts are clear from any moving part when adjusting the seat or handle on your stroller.
- Discontinue use of the stroller should it become damaged.
- Missing parts and damaged parts should be replaced immediately to prevent any injuries.

#### CARE AND MAINTENANCE:

To ensure your stroller lasts a long time you must maintain it. To maintain the stroller follow the below steps:

- Wipe all vinyl parts of the stroller with mild soap mixed with a water solution, to dry leave the stroller outside but directly under the sun, to avoid fading.
- Use oil caster bolts and wheel grease to maintain the wheels on your stroller to ensure they move smoothly.

Add a contents list showing each part with the name next to it.

Make sure the above is changed on the instructions; also the back page should be changed to match as follows. The rest of the instruction is fine.



## ASSEMBLY & OPENING



Child's tray



 
Canopy




Front wheels



Foot rest

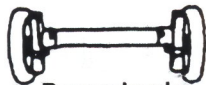

Rear wheels

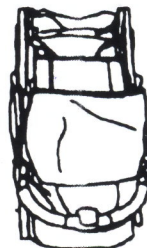

Stroller

Remove the stroller from the carton. The front wheels, rear wheels, child's tray, footrest and front canopy all need to be installed prior to use.

Unfold your stroller:





1. Lean the stroller so that the handle and rear frame tubes are resting on the floor and the front wheel tubes are pointing upward.
2. Position the front wheel assemblies so that the large hole will slide over the front leg tubes.
3. Push down on each assembly so that it locks into place on each front tube.

(IMPORTANT: Pull firmly on each wheel and test that it is locked securely in place.)

4. Lean you stroller forward to rest on the front wheels.
5. Install the rear wheel assembly, positioning it so that the brake levers are facing away from the stroller.
6. Place the wheel housings over the wheel tubes. Press each of the spring loaded buttons in turn and simultaneously push the corresponding housing downward over the tube until it locks into place.


(IMPORTANT: Pull firmly on the rear assembly and test that it is locked securely in place.)

7. Snap the footrest onto each of the front legs just below the seat.
8. Push downward on the footrest until it snaps onto the "U" shaped frame cross member.

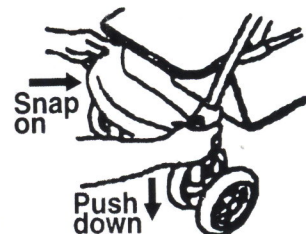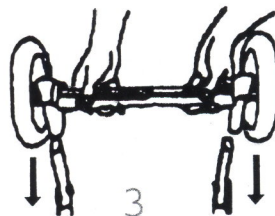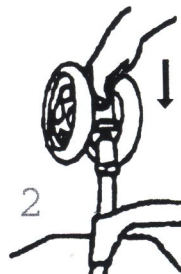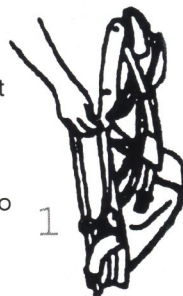

## INSTALLING THE FRONT TRAY

1. Line up and insert the side channels in the tray with the front leg tubes and insert.
2. Swing the latch on either side around the tube and lock into place.
3. To remove the tray simply reverse this procedure.

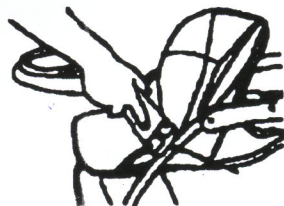

**IMPORTANT WARNINGS:** The front child tray is not a restraint device. Always secure your child with the harness restraint systems provided.

**DO NOT** lift the stroller by the front child tray.

**ALWAYS** use care when attaching the front tray with a child in the stroller.


## INSTALLING THE FRONT CANOPY

1. Line up the square male fittings of the canopy with the female fittings in the armrest housing.
2. Push each fitting downward until each snaps into place.



## SEAT ADJUSTMENT


1. The front seat can be reclined to 2 positions. Lift the trigger bar in the rear of the front seat and move the seat to the required position.
2. To adjust your seat in either the upright, or recline position, pull up on the metal bar at back of seat and adjust to desired position.

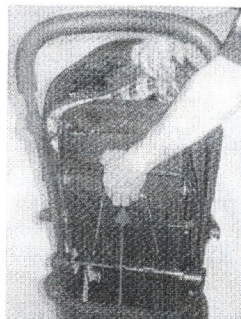

**IMPORTANT WARNING:** The fully upright positions should only be used for a child that is at least six months of age.

## SECURING YOUR CHILDREN IN THE STROLLER

**IMPORTANT WARNINGS:** When putting a child or children in the stroller it is important to avoid possible tipping back of the stroller due to weight imbalance. When using the stroller with only one child, always place the child in the front seat. When using the stroller with 2 children, always place the heavier child in the front seat. Always place the child in the front seat first. When removing the children, always remove the child in the rear seat first.

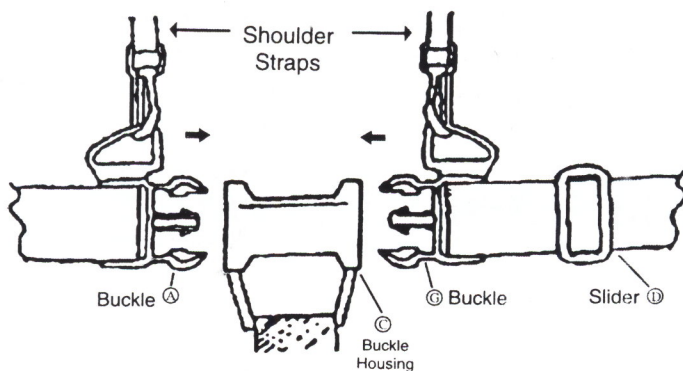

### TO SECURE YOUR CHILD IN THE HARNESS:

1. Insert Buckles (A) and (B) into either side of the Buckle Housing (C). keep inserting until they click into place securely.
2. Carefully adjust the harness straps to snugly fit your child by adjusting the Sliders (D) located on all Shoulder Straps, Waist Straps and Crotch Strap.

The harness should be snugly fitted to the baby's body, tight enough so that the baby cannot wriggle itself free of the straps but loose enough so as not to cause the baby any discomfort.

### TO OPEN THE HARNESS:


1. Release the Buckle Prongs Squeeze on the top and bottom prongs simultaneously and pull apart from the Buckle Housing.

This process may be difficult as your buckle system has been designed to meet very stringent safety standards to ensure that a child cannot release the harness unaided.



## USING YOUR BRAKES

1. To lock, simply press down on the the brake lever until each individual brake's pins engage into the corresponding wheel cog, *The stroller may require a slight forward or rearward movement in order to line up the brake pins in the cogs.*
2. To unlock, release the brake pin from the wheel cogs by lifting the brake lever.

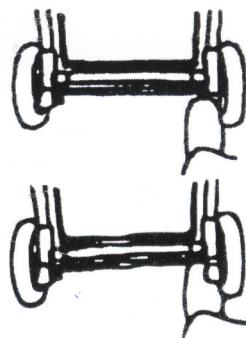


**IMPORTANT WARNING:** Always check that the brakes have engaged in the wheel cogs by testing that the wheels cannot rotate. Always set the brakes when the stroller is not in motion so that it will not roll away, Extra caution is required when on an incline or hill.

## FOLDING / OPENING YOUR STROLLER


Close the canopies by:

1. Pull the rear canopy back up against the handle.
2. Fold the front canopy *backward* until it is flat to the stroller body.
3. Press the release button in the centre of the handle while simultaneously squeezing the fold button in the centre of the handle. The stroller should then begin to fold.
4. Release the handle and pull up on the front tray until the stroller is fully folded.
5. Secure the stroller in the folded position by swinging the fold latch, located on the right side of the stroller handle, over the extended rivet head on the armrest.

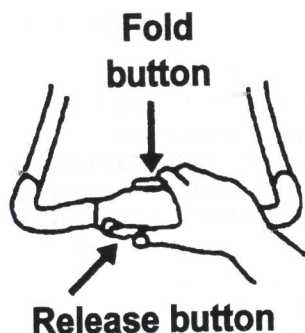

To open your stroller.

1. Release the folding latch.
2. Standing behind the stroller, lift up the stroller handle with both hands until the frame is fully erect and locken into the open position,

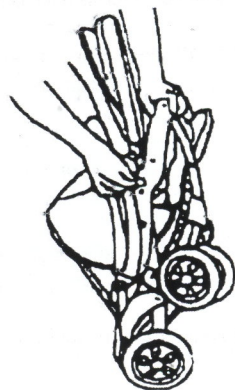

**IMPORTANT:** Always test that the frame is fully locken prior to placing your child (ren) in the stroller.

# love<sup>n</sup>care™

Another reliable product from Love N Care  
Excellence ♥ Intelligence ♥ Caring

**Contact Us:**

1300 732 599