


# love<sup>h</sup>care™

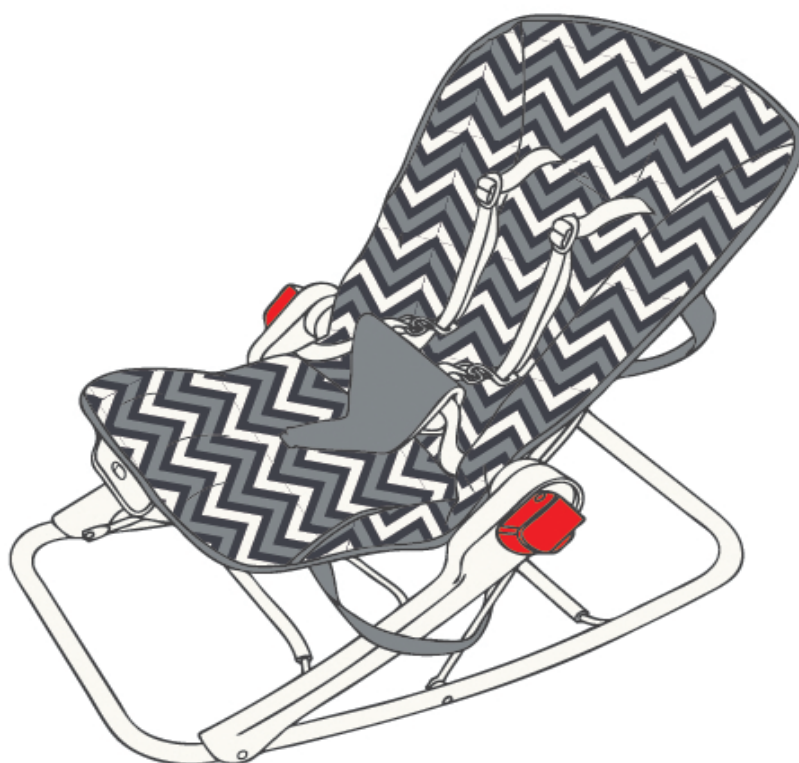

## jessyrocker

# instruction manual BP 6611

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

# love<sup>n</sup>care™

Congratulations on your new quality Love N Care product from our exclusive range of baby products. This exceptional design combines the most unique features that any baby product offers.

We are confident that you will appreciate its many highlights, including its reliability and durability. Your new product has been manufactured to comply with the Highest Quality Standards and comes with a 12-month warranty.

As you will soon learn there are many more great features about your new Love N Care product.



# WARNING

Safety guidelines and instructions must always be followed before making use of this product, please retain these instructions for future reference.

Suitable for a child who can not sit up unaided about 6 months or 6kg

NEVER leave the child unattended.

NEVER use the toy bar to carry the bouncer.

NEVER use the bouncer on an elevated surface.

NEVER use the bouncer as a replacement for a cot or bed.

DO NOT use the bouncer once your child can sit up unaided.

DO NOT use for long periods of sleeping

DO NOT use near an open fire or a heater.

DO NOT move the bouncer if the child is seated in it.

DO NOT use near stairs or steps.

DO NOT use replacement parts or accessories which are not approved by Love N Care.

DO NOT use if any part are broken or missing. Contact Love N Care immediately.

ALWAYS use the restraint system. Make sure it is assembled correctly at all times.

## maintenance and care

To ensure your Bouncer lasts a long time it is important that you try and maintain it.

### **General Maintenance:**

Wipe it down with a damp cloth and use a mild soap solution if needed. Do not use abrasive cleaners.

Always store this Bouncer in a clean and dry place.

For removable covers ensure all metal parts are removed before washing

Always check parts regularly for tightness.

To maintain the safety of your bouncer, seek prompt repairs for broken, torn or damaged parts.


Use only the parts and accessories approved by Love N Care.

Ensure that the frame is correctly reassembled before use,


If you have any difficulties in assembling your bouncer you can contact our service department on 1300 732 599.

# Instructions - Unlocking frame and seat


1.

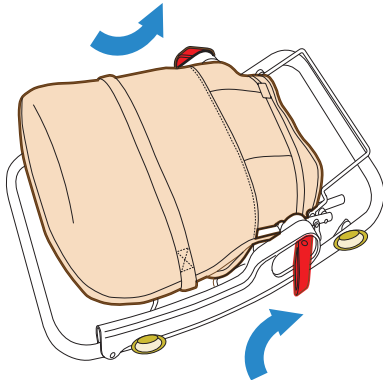


2.

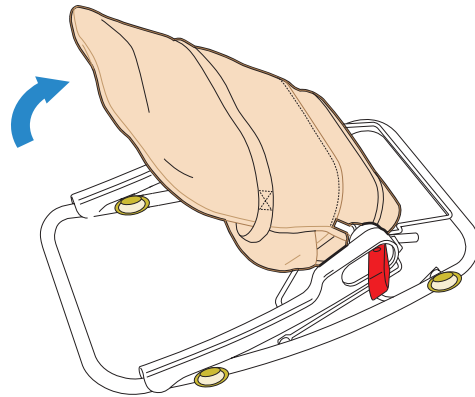

3.

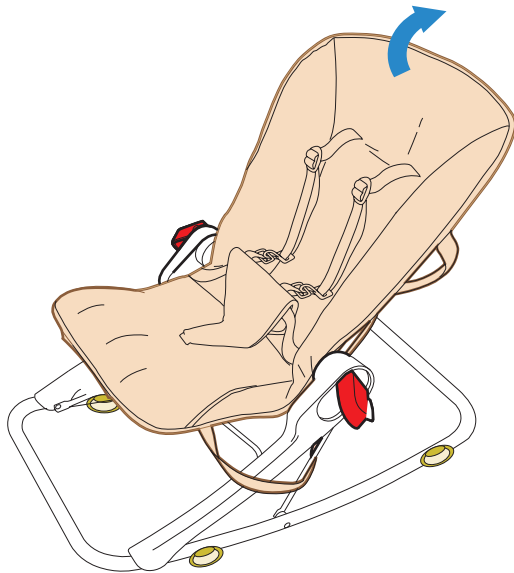


4.

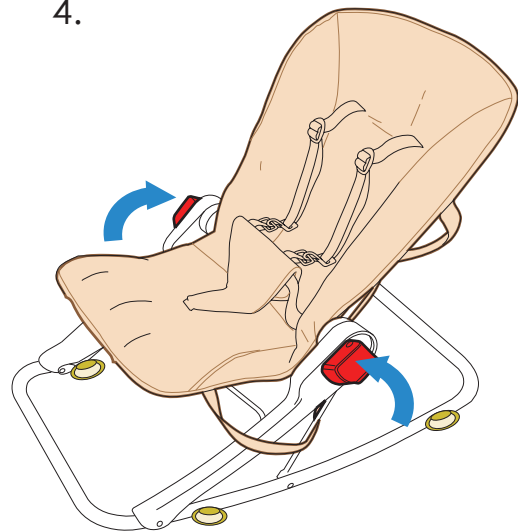


1. Open the latches located on each side of the rocker.
2. Push the seat upwards to open the frame.
3. Adjust the seat into the required position.
4. Close the latches on each side of the rocker to make it secure.

# Instructions - using the harness

5.

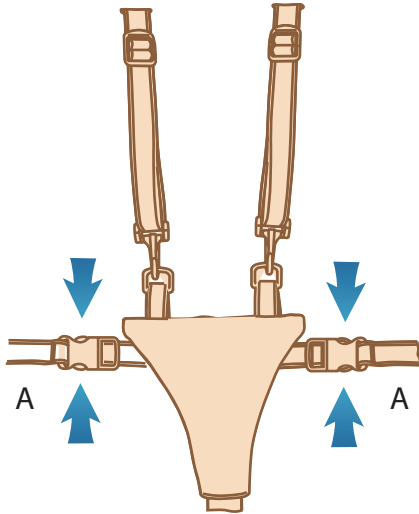

6.

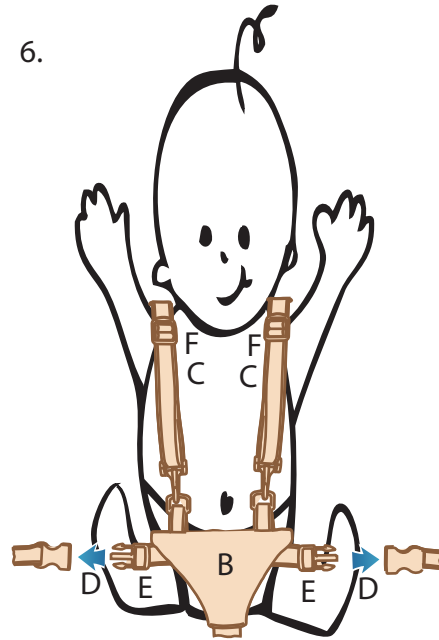

**⚠ WARNING**

**USE THIS HARNESS AT ALL TIMES**

5. This Rocker has been designed with a five point harness for the safety of your child.

A. Release the harness by pressing the fasteners inwards to release the waist strap from the crotch and shoulder straps.

B. Carefully place your child into the seat, place the crotch strap between your child's legs.

C. Place the shoulder straps over your child's shoulders, make sure they are positioned correctly to secure the child.

D. Place the fasteners into the clasp to secure the harness.


E. Adjust the strap lengths by using the sliding buckles on the waist strap. The harness should be snug around your child.

F. Adjust the strap lengths by using the sliding buckles on the shoulder strap. The harness should be snug around your child.


**YOUR CHILD SHOULD BE SECURELY HARNESSSED AT ALL TIMES AND SHOULD NEVER BE LEFT UNATTENDED**

# Instructions - adjusting seat position and folding the seat

7.

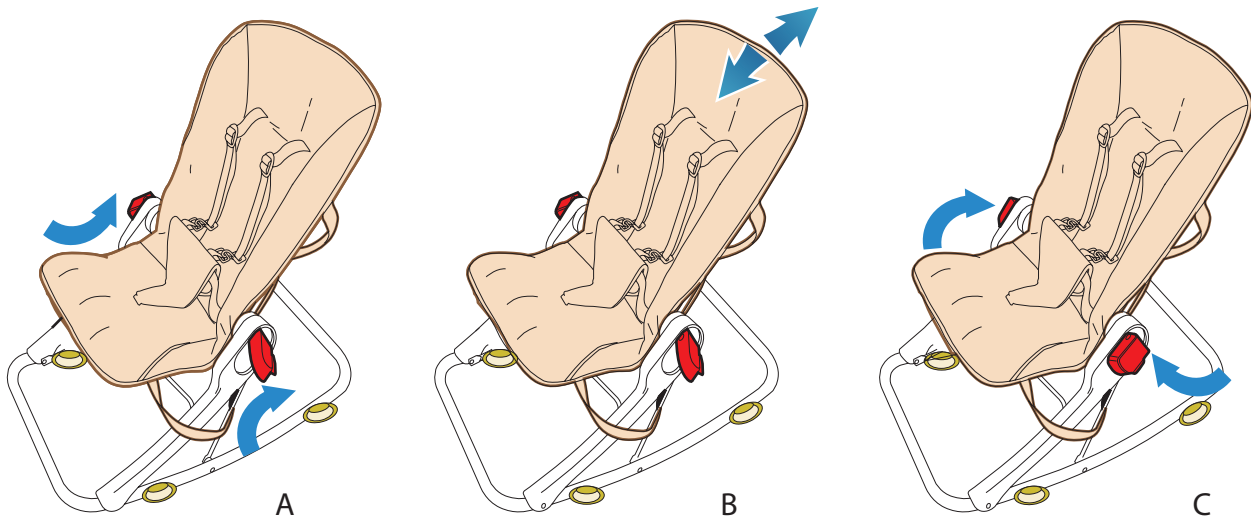

8.

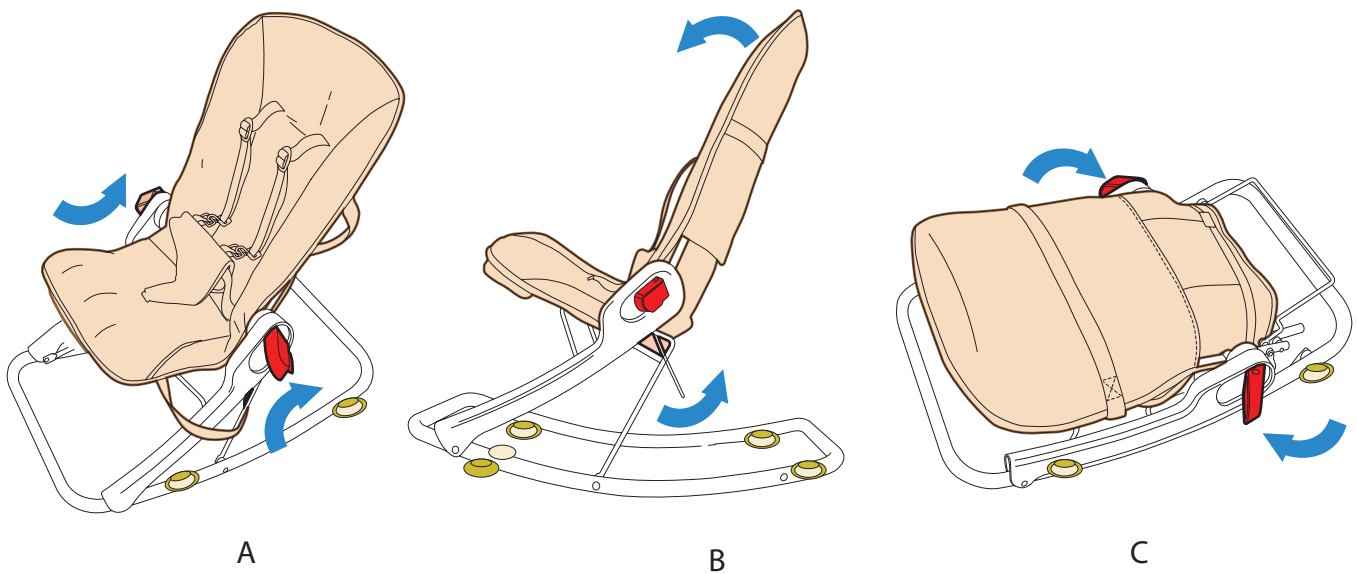

## 7. To Adjust the seat position:


- A. open the adjustment latches on both sides
- B. Move the seat into the required position.
- C. Secure the seat in the position by closing both side adjustment latches.

## 8. To fold the Rocker:


- A. open both side adjustment latches outwards
- B. Push the seat forward and lift the rear bar upwards over the rear frame.
- C. Secure the seat in the position by closing both side adjustment latches.

# Instructions - attaching the canopy/ Toybar/ carrying handle and stabilising the seat


9.

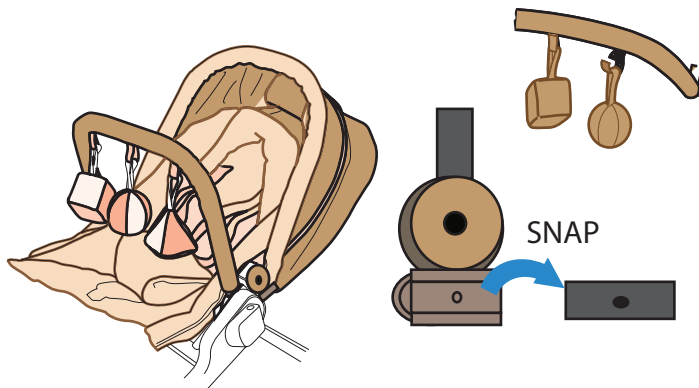

10.

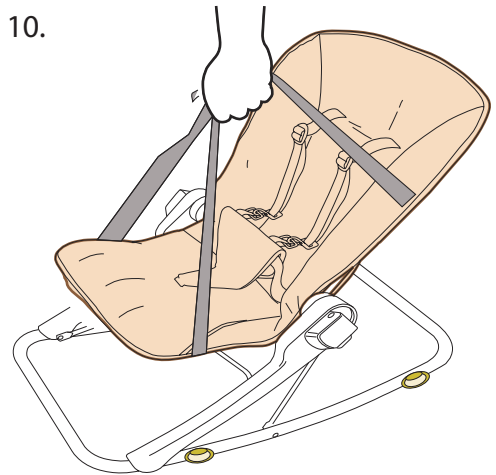

11.

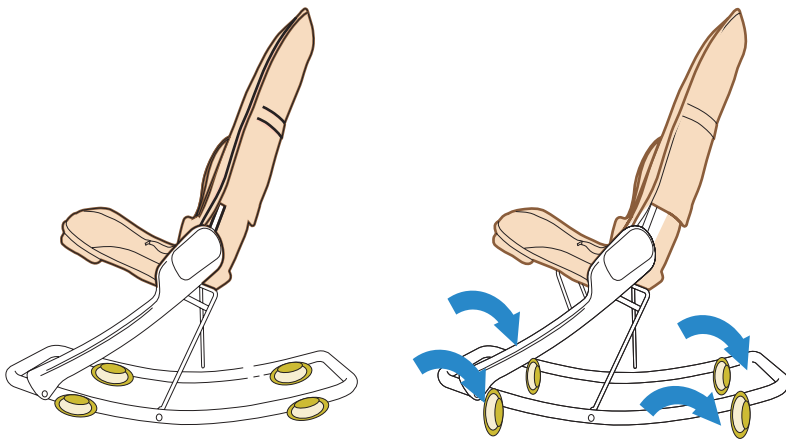

9. Place the canopy fabric over the back of the seat. Then snap each canopy clip into the side bars of the frame, located above the side adjustment latches. Move the canopy into the desired position. Snap the toy bar into the opening on the rocker frame (under adjustment latches). The toy bar should then be locked onto the frame. Each toy is attached by a tab to the toy bar cover. Pass the tab through each loop of each toy to secure it to the toy bar.

**DO NOT USE THE TOY BAR AS A HANDLE TO LIFT THE ROCKER**

10. In order to use the handles of the rocker make sure the child is secured in the safety harness. Carefully and slowly pick up the rocker using both carry straps. Place the handles behind the back of the seat when not in use.

11. To allow the rocker to rock, make sure the 4 stabilisers are parallel with the frame. (across the frame). To stabilise the rocker push the 4 stabiliser in the downward position so that they rest on the ground.



## WARRANTY AGAINST DEFECTS.

All Love n care products are guaranteed for twelve months from the date of purchase.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This covers against faults which develop through faulty materials and workmanship. Misuse, accidental damages, normal wear and tear or neglect are not covered.

If a fault becomes apparent, please return the item to the store of purchase with your receipt. You must inform the store what the defect is. We will then arrange for its repair or it will be assessed for replacement as expediently as possible. The benefits of this warranty are in addition to other right and remedies under the law in relation to the goods or services to which this warranty relates.

If you are unable to return the item to the store of purchase, you can contact Love N Care on free call 1300 732 599. We will then organise for either somebody to inspect the item or arrange for a courier to pick it up and return it back to you.

For more information, please contact us:



**Love N Care Pty Ltd.**

Email: [info@lovencare.com.au](mailto:info@lovencare.com.au)

Web: [www.lovencare.com.au](http://www.lovencare.com.au)

Ph: 1300 732 599 Fax: 02 9774 4633



-----  
Please fill in this section to validate your warranty and send to: 297 Canterbury Rd Revesby NSW 2212.

Name: \_\_\_\_\_

Store Purchased: \_\_\_\_\_

Address: \_\_\_\_\_

Date Purchased: \_\_\_\_\_

Product Name/No: \_\_\_\_\_





## Contact Us

### Head Office:

Love N Care Pty Ltd.  
297-299 Canterbury Rd, Revesby  
NSW 2212 Australia  
Contact No: 02 9774 4655  
Fax: 02 9774 4633  
Email: [info@lovencare.com.au](mailto:info@lovencare.com.au)  
Website: [www.lovencare.com.au](http://www.lovencare.com.au)

Brisbane  
7-9 Eileen Street  
Underwood QLD 4119 Australia  
Contact No: 07 3290 4217  
Fax: 07 3209 5019

Western Australia  
5 Modal Crescent  
Canning Vale WA 6155 Australia  
Contact No: 08 9455 4972  
Fax: 08 9455 4728

let's be friends!

 <http://www.facebook.com/lovencare1>

 [http://twitter.com/love\\_ncare](http://twitter.com/love_ncare)



100 % AUSTRALIAN OWNED SINCE 1984

**lovehncare™**  
[lovencare.com.au](http://lovencare.com.au)