

lovencare

mirage Instruction Manual BP 2756

love Care

Congratulations on your new quality Love N Care product from our exclusive range of baby products. This exceptional design combines the most unique features that any baby product offers.

We are confident that you will appreciate its many highlights, including its reliability and durability. Your new product has been manufactured to comply with the Highest Quality Standards and comes with a 12-month warranty.

As you will soon learn there are many more great features about your new Love N Care product.



Safety guidelines and instructions must always be followed before making use of this product, please retain these instructions for future reference.

This product complies with product standard AS/NZS 2088:2000



WARNING: TO AVOID INJURY OR DEATH:

FOLLOW THE MANUFACTURER'S INSTRUCTIONS. PUT ON ALL THE BRAKES WHENEVER YOU PARK THE STROLLER. ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY. DO NOT LEAVE CHILDREN UNATTENDED. SECURE THE CHILD IN THE HARNESS AT ALL TIMES. DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.

MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER, OTHERWISE THEY MAY BE INJURED.

USE THE HARNESS AT ALL TIMES.

WHEN NOT IN USE DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAP AND/OR BUCKLE.

The harness can form loops which may be a strangulation hazard. Never leave a harness connected when not fitted to a child in the stroller.

To avoid serious injury always use the harness provided to secure the child. (Adjust the straps to suit the body size of your child)

THE MAXIMUM WEIGHT FOR THE STROLLER SEAT IS 22KG. THE MAXIMUM WEIGHT FOR THE BOTTOM BASKET IS 5KG.

It is unsafe to use accessories other than those supplied or approved by Love N Care. Care should be taken if the stroller is to be used on stairs or escalators.

This stroller should not be used near an open fire or an exposed flame.

Care should be taken whilst folding and unfolding stroller to prevent fingers being trapped.

Ensure your child's fingers, hands and all other body parts are clear from any moving part when adjusting the seat or handle on your stroller.

CLEANING AND MAINTENANCE

ALL LOVE N CARE PRODUCTS HAVE ONE YEAR WARRANTY FROM THE DATE OF PURCHASE.

IT IS RECOMMENDED TO REGULARLY INSPECT AND MAINTAIN MOVEMENT OF LOCKING DEVICES AND SECURITY OF ESSENTIAL COMPONENTS. REGULARLY CHECK ALL PARTS FOR WEAR AND TEAR. DO NOT USE SPRAY LUBRICANTS, SIMPLY WIPE CLEAN AFTER USE. THE SEAT LINER CAN BE CLEANED BY SPONGING WITH WARM SOAPY WATER AND A MILD DETERGENT. A MILD DISINFECTANT MAY BE USED IF DESIRED. STUBBORN MARKS MAY BE REMOVED WITH A NON ABRASICE CREAM CLEANER. NEVER CLEAN WITH ABRASIVE, AMMONIA BASED, BLEACH BASED OR SPIRIT TYPE CLEANERS.

THE FOOD TRAY CAN BE CLEANED WITH A DAMP CLOTH.(MIRAGE MODEL)

FABRIC CARE

- HAND WASH ONLY
- DO NOT BLEACH
- DO NOT TUMBLE DRY
- DO NOT IRON
- DO NOT WRING
- DO NOT DRY CLEAN



PARTS LIST







6.



WHEN YOU OPEN YOUR STROLLER CARTON PLEASE ENSURE YOU HAVE ALL THE ITEMS:

- **1. STROLLER REVERSIBLE HANDLE**
- 2. BOOT COVER
- **3. STROLLER SEAT**
- 4. FOOD TRAY
- **5. TETHER STRAP**
- **6. 4-ALL SWIVEL WHEELS**



ASSEMBLE THE FRAME

1. REMOVE THE STROLLER FROM THE BOX. START WITH THE STROLLER SEAT (NO.3) PULL THE LOCKING CLIP (AS SHOWN IN THE IMAGE) TO RELEASE THE STROLLER.

2. ONCE THE CLIP IS RELEASED YOU SHOULD START TO PULL THE FOOTREST AWAY FROM THE HOOD (AS SHOWN)



3. ENSURE THAT THE LOCKING MECHANISM SNAPS INTO PLACE. YOU SHOULD HEAR IT CLICK.





4. REPEAT ON THE OTHER SIDE ENSURE THAT THE LOCKING MECHANISM SNAPS INTO PLACE. YOU SHOULD HEAR IT CLICK.

> 5. THE ASSEMBLED FRAME



INSERTING THE WHEELS.





PUSH THE WHEELS INTO PLACE. ENSURE YOU HEAR A CLICK. PULL ON THEM BEFORE YOU USE THEM TO ENSURE THEY ARE LOCKED SECURELY.

TO REMOVE EACH WHEEL PUSH THE PIN IN.





ATTACHING THE HANDLE:

WE ARE GOING TO ATTACH PART (1) HANDLE TO THE SEAT FRAME.

THERE ARE 2 OPENINGS ON EACH SIDE OF THE SEAT WHERE THE ENDS OF THE HANDLE WILL SLIDE IN.



ENSURE THE HANDLE IS INSTALLED LIKE THIS



THERE IS A BUTTON WHICH WILL LOCK THE HANDLE INTO PLACE

SLIDE THE HANDLES INTO EACH SIDE AND DEPRESS THE BUTTONS. WHEN THEY ARE DEPRESSED SLIDE THE HANDLE DOWN UNTIL YOU HEAR THEM CLICK INTO PLACE. PULL ON THE HANDLE TO MAKE SURE IT IS LOCKED IN. REPEAT ON THE OTHER SIDE.





ATTACHING THE TETHER STRAP

LOOP THE STRAP THOUGH THE OPENING. UNTIL IT IS TENSIONED. IT SHOULD LOOK LIKE THIS.





ATTACH THE FRONT BAR:



AT THIS POINT WE WILL BE INSERTING THE FOOD TRAY (4) ONTO THE FRAME.



INSERT THE BAR (4) ONTO THE FRAME OF THE SEAT. ENSURE THAT IT CLICKS INTO PLACE. (PULL ON IT TO MAKE SURE IT IS ASSEMBLED CORRECTLY)



TO RELEASE THE BAR. PRESS THE BUTTON LOCATED ON EACH SIDE OF THE SEAT. THEN LIFT THE BAR OUT.



ATTACHING THE BOOT COVER:



WE WILL NOW ATTACH THE BOOT COVER (2) (IF REQUIRED) SLIDE THE CLOSED END OVER THE FOOT REST OF THE PRAM. ATTACH THE TOP WITH THE PRESS STUDS WHICH LOOP AROUND THE FRAME (NOT THE HANDLE) AND THEN LOCK INTO PLACE. REPEAT ON THE OTHER SIDE.



THE ASSEMBLED BOOT COVER SHOULD LOOK LIKE THIS



HOW TO LOCK THE WHEELS/USE ALL SWIVEL MODE:

ALL THE WHEELS CAN BE FIXED OR USED IN ALL SWIVEL MODE. TO HAVE THE WHEELS IN A FIXED MOTION PULL UP THE PLASTIC LEVER ON THE FRONT OF EACH WHEEL AND ALIGN IT WITH THE OPENING.. THIS SHOULD LOCK THE WHEELS.

TO USE THE WHEELS IN SWIVEL MODE PUSH THE LEVER DOWN. THE WHEELS SHOULD BE ABLE TO BE MOVED IN **ALL DIRECTIONS.**



HOW TO USE THE BRAKES:

TO APPLY THE BRAKES: PUSH DOWN ON THE LEVER

TO RELEASE THE BRAKES: PUSH THE LEVER UP





NOTE:

WHEN CHANGING THE DIRECTION **OF THE HANDLE. PLEASE ENSURE** THAT THE BRAKE ENDS ARE IN THE SAME DIRECTION OF THE HANDLE.



HOW TO USE THE REVERSIBLE HANDLE:



LIFT BOTH LEVERS LOCATED ON THE SIDES OF THE HANDLE UPWARDS. THEN PUSH THE HANDLE IN THE DIRECTION DESIRED. THE HANDLE SHOULD SNAP INTO A HOLDER WHERE IT WILL LOCK INTO POSITION. TEST THE HANDLE BEFORE BEFORE USING.



FORWARD FACING POSITION





HOLDER POSITIONS

HOW TO FOLD THE STROLLER:



STEP 1.

MAKE SURE THE STROLLER IS IN THE FORWARD FACING POSITION BEFORE YOU BEGIN TO FOLD

STEP 2.

ON THE HANDLE THERE ARE 2 LEVERS. 1.PRESS DOWN ON THE UPPER LEVER AND 2. PUSH UP ON THE LOWER LEVER SIMULTANEOUSLY STEP 3. PUSH THE HANDLE FORWARD. WITH THE SAME HAND YOU USE!

WITH THE SAME HAND YOU USED TO DEPRESS THE LEVERS PUSH THE SAFETY LOCK TOWARDS THE FRAME WITH YOUR THUMB. THEN CONTINUE TO PUSH THE HANDLE FORWARD UNTIL IT CLICKS AND IS LOCKED.

STEP 4.

MAKE SURE THAT THE LOCK IS WORKING. GIVE IT A SLIGHT TUG TO ENSURE IT IS LOCKED.

STEP 5.

YOU CAN CARRY THE STROLLER WITH THE HANDLE ON THE SIDE.







HOW TO ADJUST THE BACKREST:

THIS STROLLER HAS 4 DIFFERENT POSITIONS FOR LAYBACK. IN ORDER TO ADJUST THE STROLLER TO THE POSITION REQUIRED YOU MUST LIFT THE REAR LEVER UP. WHEN THE LEVER IS UP YOU CAN PUSH DOWN OR UP TO GET THE DESIRED POSITION REQUIRED. MAKE SURE CHILD IS NOT IN THE SEAT WHEN YOU ARE CHANGING THE POSITION.





HOW TO USE ADJUST THE LEG REST:



THE LEG REST CAN BE EITHER IN THE STRAIGHT POSTION OR IN THE LOOSE POSITION. TO ADJUST THE LEG REST YOU MUST PUSH THE LEVER DOWN ON BOTH SIDES. IF IN THE STRAIGHT POSTION ENSURE YOU HEAR IT CLICK.



LOOSE POSITION

HOW TO USE THE 5-POINT HARNESS:





TO RELEASE THE HARNESS

THIS STROLLER HAS BEEN DESIGNED WITH A 5-POINT HARNESS FOR THE SAFETY OF YOUR CHILD.

CAREFULLY PLACE YOUR CHILD INTO THE SEAT AND BRING THE SAFETY HARNESS AROUND THE CHILDS WAIST AND OVER THE CHILDS SHOULDERS. PLACE THE CROTCH STRAP BETWEEN YOUR CHILDS LEGS. TIGHTEN THE HARNESS TO BE SNUG AROUND THE CHILDS WAIST AND OVER ITS SHOULDERS.

ATTACH EACH OF THE SHOULDER STRAPS TO THE CROTCH STRAP BUCKLE WITH EACH END. REPEAT THIS FOR BOTH SHOULDER STRAPS. ONCE EACH SHOULDER STRAP IS ATTACHED ON THE WAIST BUCKLE INSERT THE WAIST STRAP END TO THE BUCKLE. REPEAT FOR BOTH SIDES. THEY SHOULD SNAP IN. (PULL ON THEM TO TEST) TO RELEASE THE HARNESS SQUEEZE THE CENTRE OF THE BUCKLES FOR BOTH WAIST STRAP ENDS.

YOUR CHILD SHOULD BE SECURELY HARNESSED AT ALL TIMES AND SHOULD NEVER BE LEFT UNATTENDED





ADJUST THE STRAP TO BE SNUG



ATTACH EACH SHOULDER STRAP END TO WAIST BUCKLE



ATTACH WAIST STRAP ENDS INTO THE BUCKLE.

HOW TO USE THE FOOT REST:

THE FOOT REST CAN BE USED EITHER UPWARDS (FOR MORE SPACE FOR YOUR FEET), OR WITH THE FOOT REST DOWN (TO REST YOUR FEET). FOR UPWARDS JUST LIFT IT UP. FOR DOWNWARDS PULL IT DOWN.



FOOT REST UPWARDS



FOOT REST DOWN WARDS

love Care

Contact Us

Head Office:

Love N Care Pty Ltd. 297-299 Canterbury Rd, Revesby NSW 2212 Australia Contact No: 02 9774 4655 Fax: 02 9774 4633 Email: info@lovencare.com.au Website: www.lovencare.com.au

Western Australia

Brisbane

5 Modal Crescent Canning Vale WA 6155 Australia Contact No: 08 9455 4972 Fax: 08 9455 4728

7-9 Eileen Street Underwood QLD 4119 Australia Contact No: 07 3290 4217 Fax: 07 3209 5019

Ireland

DMG House Deansgrange Industrial Estate

Deansgrange Co. Dublin Phone: +3531 2190254 Fax: +3531 2802734 Website: www.lovencare.ie