



PORTE BÉBÉ

HIGH CHAIR

ASSEMBLY INSTRUCTIONS



WARNINGS:

FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN A SERIOUS INJURY.

THE CHILD SHOULD BE SECURED IN THE CHAIR AT ALL TIMES BY USING THE FULL FIVE POINT HARNESS.

NEVER LEAVE CHILD UNATTENDED.

ALWAYS KEEP CHILD IN SIGHT WHILST IN THE HIGH CHAIR.

ALWAYS ENSURE THAT THE HIGH CHAIR HAS BEEN ASSEMBLED CORRECTLY BY FOLLOWING THE INSTRUCTIONS SHEET PROVIDED. FAILURE TO DO SO CAN CAUSE DANGEROUS ACCIDENTS.

IF HIGH CHAIR IS DAMAGED IN ANY WAY, PLEASE DO NOT CONTINUE TO USE THIS CHAIR AND YOU MUST CONTACT THE MANUFACTURER IMMEDIATELY OR STORE OF PURCHASE.

ONLY TO BE USED FOR A CHILD THAT IS ABLE TO SIT IN AN UPRIGHT POSITION.

DO NOT ALLOW ANY CHILDREN, ANIMALS OR OTHER OBJECTS TO BE PLACED UNDER OR NEAR THE CHAIR WHILST CHILD IS SEATED IN THE CHAIR.

DO NOT FORCE TRAY INTO CHILD WHEN ADJUSTING TRAY, ALWAYS ALLOW BREATHING SPACE FOR CHILDS COMFORT.

DO NOT ALLOW YOUR CHILD TO STAND UP WHILST IN THE HIGH CHAIR.

CARE AND MAINTENANCE

ALWAYS FOLLOW THE INSTRUCTIONS CORRECTLY WHEN ASSEMBLING THIS HIGH CHAIR.

TO CLEAN ALWAYS WIPE DOWN THIS CHAIR WITH DAMP CLOTHE.

CLEAN TRAY WITH A DISINFECTANT CLOTH AND SPRAY.


WIPE DOWN FRAME ON A REGULAR BASIS FROM DIRT AND DUST.

DO NOT WASH OR REMOVE COVER TO CLEAN.

ALWAYS WIPE DOWN PADDED SEAT ONLY.

A. FRAME ASSEMBLY:


- I. REMOVE FRAME FROM PACKAGING
- II. PLACE IN FRONT OF YOU IN UPRIGHT POSITION.
- III. PRESS BUTTONS ON TOPSIDES OF FRAME. (THIS WILL OPEN AND CLOSE THE FRAME AS PER DIAGRAM BELOW.)

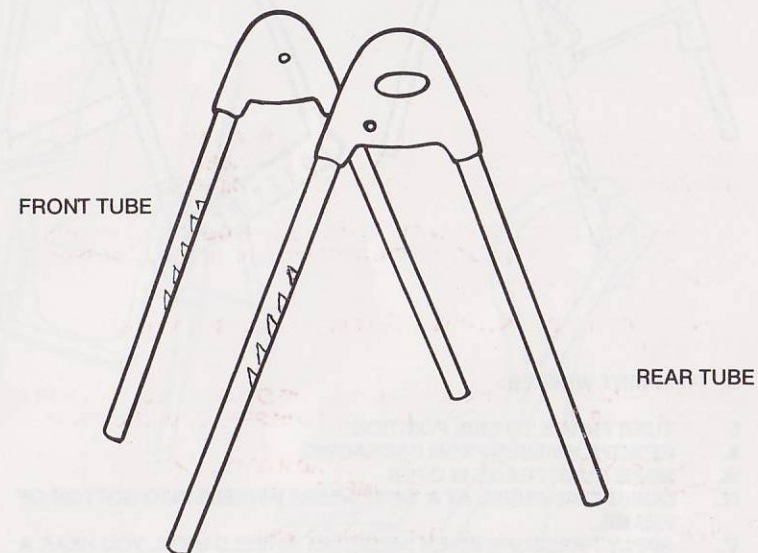

- IV. INSERT THE HEIGHT ADJUSTMENT PARTS THROUGH FRONT TUBE WITH ADJUSTMENT CLIPS FACING INSIDE TUBE OF FRAME, STARTING FROM THE BOTTOM FRONT LEGS.
- V. CONTINUE TO SLIDE THESE UP UNTIL YOU HEAR THEM CLICK INTO PLACE.
- VI. PRESS THE TWO BUTTONS OF THE HEIGHT ADJUSTMENTS AND SLIDE THEM UP TO TOP SEAT POSITION OF HIGH CHAIR FRAME.


(THESE HEIGHT ADJUSTMENTS ARE TO BE USED TO ADJUST THE SEATING POSITION OF THE HIGH CHAIR).

WARNING: ALWAYS ENSURE WHEN HEIGHT IS ADJUSTED ON SEAT THE BOTH SIDES ARE CLIPPED IN CORRECTLY.

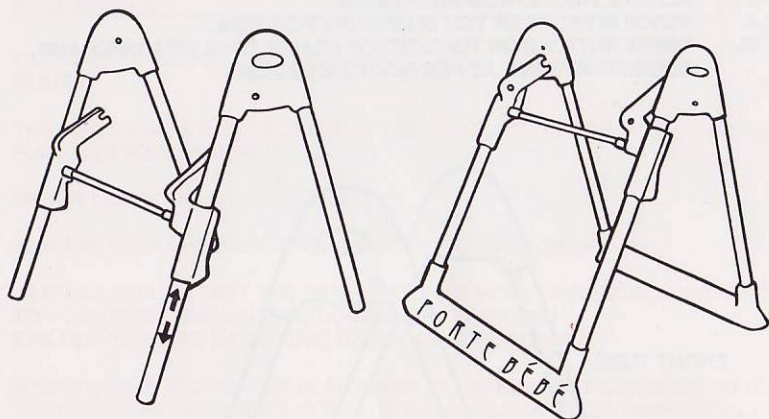

B. TO INSERT WHEELS:


- I. TURN FRAME TO SIDE POSITION.
- II. REMOVE WHEELS FROM PACKAGING
- III. MAKE SURE FRAME IS OPEN
- IV. DOING ONE WHEEL AT A TIME, INSERT WHEELS INTO BOTTOM OF FRAME.
- V. APPLY PRESSURE WHEN INSERTING WHEELS UNTIL YOU HEAR A CLICK.
- VI. BRAKES SHOULD BE FACING BACKWARDS WHEN INSERTING WHEELS.

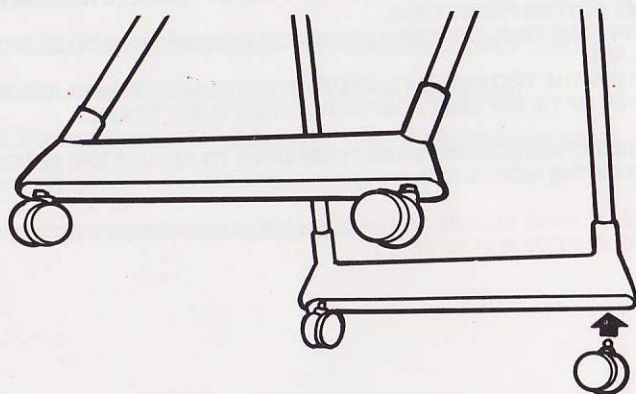

C. SEAT ASSEMBLY:

- I. TO INSTALL THE SEAT TO FRAME FIRST BEFORE INSTALLING FOOTREST.
- II. FIT PADDED INSERT OVER TOP OF SEAT,

(ENSURE THAT RECLINING MECHANISM IS CLEARLY SHOWN THROUGH BACK OF PADDED INSERT WINDOW.)

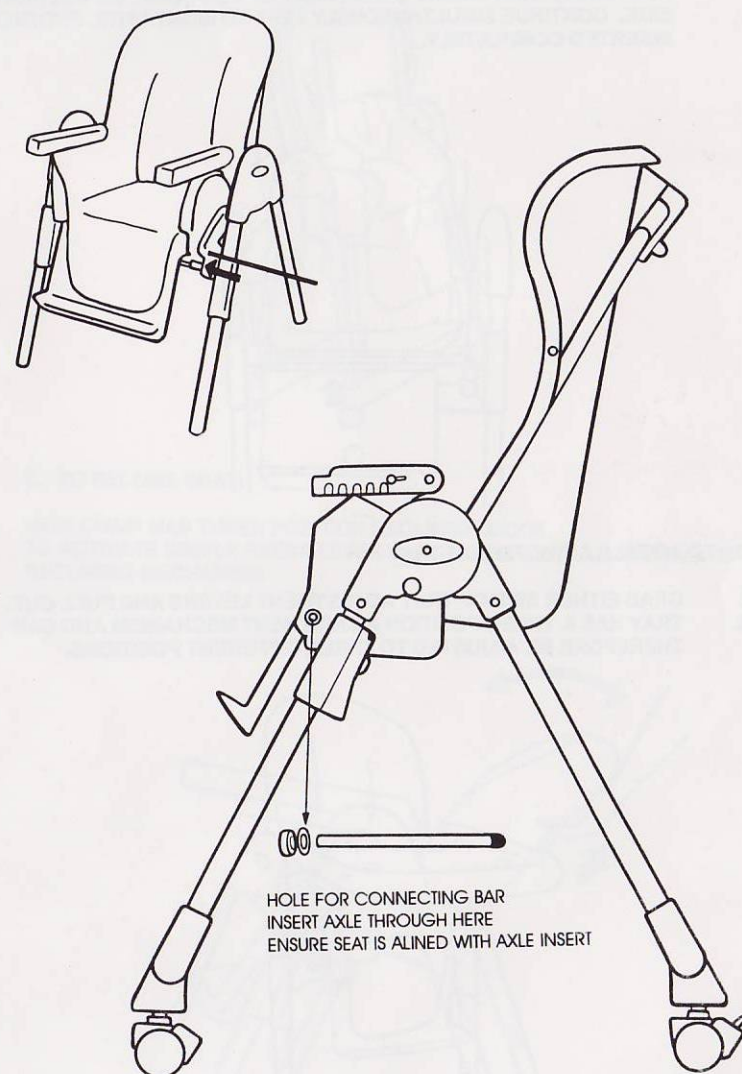


- III. HOOK THE SEAT ONTO THE SEAT SUPPORT LOCATED ON TOP OF FRAME.

(ENSURE THAT TWO FEMALE SLOTS OF SEAT SUPPORT ARE ALINED WITH CORRESPONDING MALE PIECES ON SEAT.)


- IV. SECURE SEAT WITH AXEL AND ATTACH CLIPS ON CORRECT SIDE.

- V. TO INSTALL FOOTREST, STARTING FROM THE LEFT, INSERT PART OF FOOTREST, THEN INSERT OTHER PART OF FOOTREST ON THE RIGHT SIDE. CONTINUE SIMULTANEOUSLY LEFT TO RIGHT UNTIL FOOTREST IS INSERTED COMPLETELY.

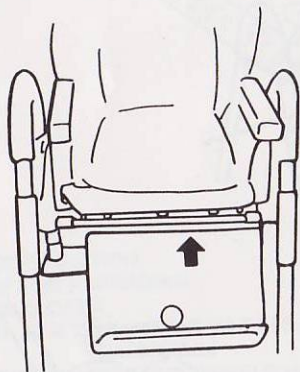


D. TO INSTALL AND OPERATE TRAY

- I. GRAB EITHER SIDE OF TRAY ADJUSTMENT LEVERS AND PULL OUT.
II. TRAY HAS A THREE-POSITION ADJUSTMENT MECHANISM AND CAN THEREFORE BE ADJUSTED TO THREE DIFFERENT POSITIONS.

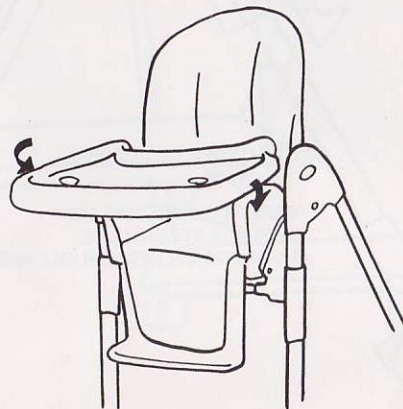

- III. WHEN CLOSING FRAME FOR STORAGE, PRESS BUTTONS ON ARMREST SO TRAY AND ARMRESTS CAN BE LIFTED UPRIGHT.

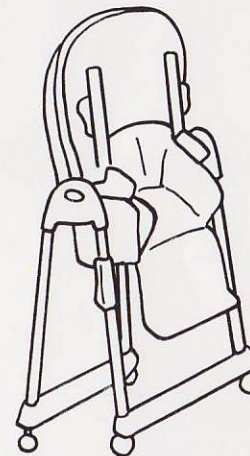

E. TO RECLINE SEAT:

HIGH CHAIR HAS THREE POSITION RECLINING MODE.
TO ACTIVATE SIMPLY PRESS LEVER ON BACK OF SEAT AND ACTIVATE RECLINING MECHANISM.

