

0+

loven^hcare™

Rock My Baby Swing

BP6613



Instruction Manual

www.lovenhcare.com.au

PLEASE RETAIN MANUAL FOR FUTURE REFERENCE

Congratulations!

Congratulations on purchasing your new Love N Care Rock My Baby Swing.

In just a few steps you should be able to assemble this unique product and have it ready to meet your beautiful child :)



loveⁿcare™

Warnings

- Never leave baby in the rocker swing without supervision.
- Do not use the rocker swing once the child can sit up unaided.
- Baby's movements could make the rocker swing tip over. Only ever use the rocker swing on the floor.
- Do not use the rocker swing if any part is broken or missing.
- Always use the safety attachment system.
- Before using, check that all parts are properly locked into position and adjusted correctly.
- Check the suspension system of the rocker swing regularly.
- Only use a 5-point safety harness.
- Do not use the rocker swing without its seat liner.
- It is dangerous to put this rocker swing on any surface high up.
- Always use the rocker swing in a flat, horizontal and uncluttered area.
- Never place the rocker swing on a soft surface (bed, sofa, cushion), as seat may tip over and be dangerous for baby.
- This rocker swing is not designed for baby to spend long periods asleep in it. You are recommended to put your baby in a bed.
- The rocker swing is not a carrycot, nor a car seat. Always use the straps and adjust them properly, even if baby will only be in the rocker swing for a short time.
- Keep the rocker swing well away from any naked flame, source of intense heat, electric sockets, extension leads, cookers etc, or any other object which baby might find within his reach.
- Never lift the rocker swing using the toy bar.
- Never lift or carry the rocker swing with baby in it.
- Keep the plastic bags of the packaging out of reach of babies and young children to avoid any risk of suffocation.
- Never add any pillow, blanket or padding: use only the head cushion supplied with the rocker swing.
- Do not put objects with strings around the neck of your baby, do not hang strings from the rocker swing and do not attach strings to toys. This could lead to strangling.
- Do not put the rocker swing close to a window where the strings of a blind or curtains could lead to strangling.
- Do not allow your baby to play with the rocker swing folded up.
- Do not attach other toys than those supplied. Batteries recommended: 4 x D batteries (not included).
- Keep the batteries out of reach of children.
- Change the batteries when the rocker swing no longer works satisfactorily.
- Batteries must be removed from their housing in the rocker swing when they have run down.
- Remove batteries before storing away your rocker swing for long periods.
- Do not use different types of batteries together, nor new and used batteries.
- Take care to insert the batteries the right way up with respect to the polarity.
- The power terminals must not be short-circuited.
- Never throw batteries into a fire as they could burst or give off harmful substances. Waste Electrical and Electronic Equipment should be disposed of by selective collection. Do not throw electrical and electronic equipment away with un-sorted household waste, but dispose of it at a selective collection point.
- The maximum weight capacity for the rocker is 9kgs.







Parts

What you should find in the box!

Rock my Baby Swing

- tools needed to assemble 1x phillips screw driver

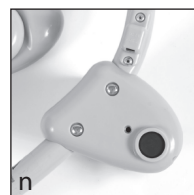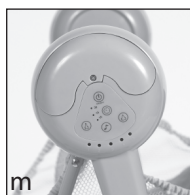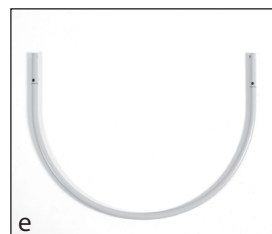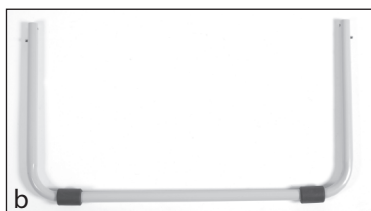

- a. Front leg
- b. Rear leg
- c. Right swing leg
- d. Left swing leg
- e. Front bar
- f. Rear bar
- g. 4x screws (30 mm)
- h. 2x screws (35 mm)

- i. Seat liner cover with 5-point safety harness
- j. Press studs for protective net
- k. Toy bar
- l. Head cushion
- m. Electronic box
- n. Push buttons
- o. Mains adaptor 6 V / 500 mA (Optional)



Step 1



Step 2



Step 3

Assembling the legs


Insert the right part of the rear leg (B) into the right swing leg (c). Make sure the push button of the rear leg (b) is clipped into the opening of the right swing leg (c). To do this correctly, you must hear a 'click'. To fix the two parts insert a 35mm screw (h). Insert the left part of the rear leg (b) in the left swing leg. Make sure the push button of the rear leg (b) clips into the opening of the left swing leg (d) until you hear a click. To fix the two parts, insert a 35mm screw (h). Insert the front right leg (a) into the right swing leg (c) and the front left leg (a) into the left swing leg (d). Press the push button and simultaneously drive home the front leg (a) into the swing legs (c) and (d) until you hear a 'click'.



Step 4




Step 5

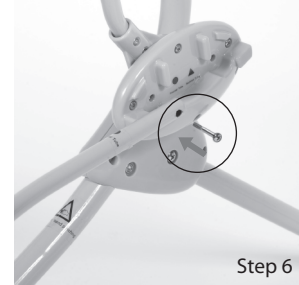

Step 6



Step 7

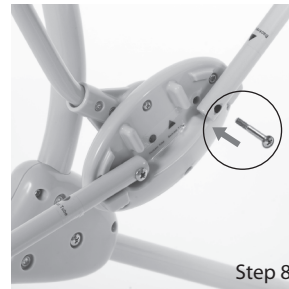

Step 8

Assembling the Seat

Fix the right hand part of the front bar (e) on the right swing leg (c) and the left part of the front bar (e) on the left swing leg (d). To fix the two parts, insert two 30mm screws (g). Fix the right part of the rear bar (f) on the right swing leg (c) and the left part of the rear bar (f) on the left swing leg (d). To fix the two parts, insert two 30mm screws (g).



Step 9



Step 10




Step 11

Fitting the Seat Liner Do not use the rocker swing without it's seat liner


Tilt the bars (e) and (f) upwards until they come together, Cover the bars (e) and (f) with the seat liner (i). Make sure the Love N Care logo is facing upwards to ensure the liner is put on correctly. Separate the two bars (e) and (f) sliding the seat liner (i) along the two bars. To ensure the liner is held firmly fasten the velcro at the bottom edge of the seat liner (i). When the tubes have been covered, fasten the protective nets using the press studs (j).




Step 12

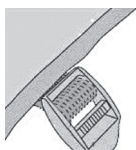


Step 13

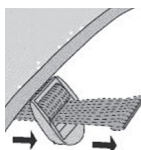

Step 14

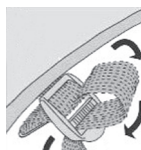


Step 15

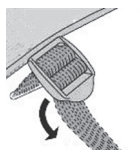

Step 16

Fitting the 5-Point Safety Harness

To access the buckles of the harness, tilt the seat inwards. Fit each strap into the buckle of the harness. Thread the strap through the top slit then the bottom slit. Pull on the straps so that they are quite tight.

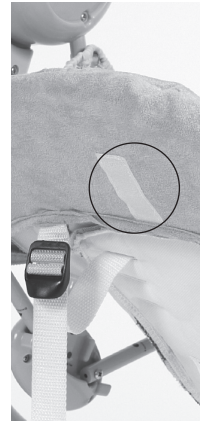

Installing the Toy Bar and Head CuhSION


Never lift the rocker swing using the toy bar. Never add any pillow, blanket or padding; use the head cushion supplied

Insert the toy bar (k) into the slots either side of the seat and listen out for click. Make sure the toys are facing the child. The head cushion (l) is an optional component offering additional support to the baby's head for optimum comfort. This component can be removed from the rocker swing. To attach or remove this head cushion (l) simply use the Velcro fastening behind the seat liner.



Installing the Batteries

The electronic box (m) of the rocket swing must be supplied as 4 x D batteries or can be functioned by plugging in the main adapter (o) to the leg (d). For optimum performance use alkaline batteries. Use the phillips screwdriver to open the electronic box (m) on the right side of the swing leg (c). Insert the 4 batteries in the direction of the markings. Screw back the electronic box (m) with a screw driver. Do not over-tighten. Please note the power supply is an option on this product and might not be supplied.

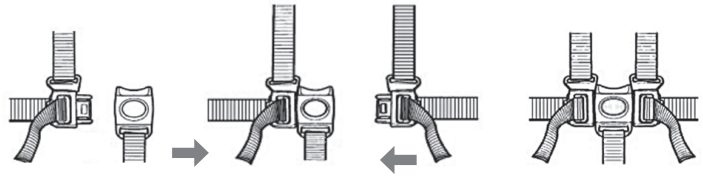


Placing Baby into Rocker Always use 5-point harness and make sure it is not twisted

Fit baby into the rocker swing by either seating or laying them down. Fasten and adjust the 5 point harness.



Inclining and Folding the Rocker Never change the inclination of the seat with child in rocker

Simultaneously press the push buttons (n) either side of the rocker swing and incline the seat to the desired position. Remove the toy bar (k) from the rocker swing. Fold up the seat. Press the two push buttons on the rocker swing by simultaneously bringing together the legs of the rocker swing.

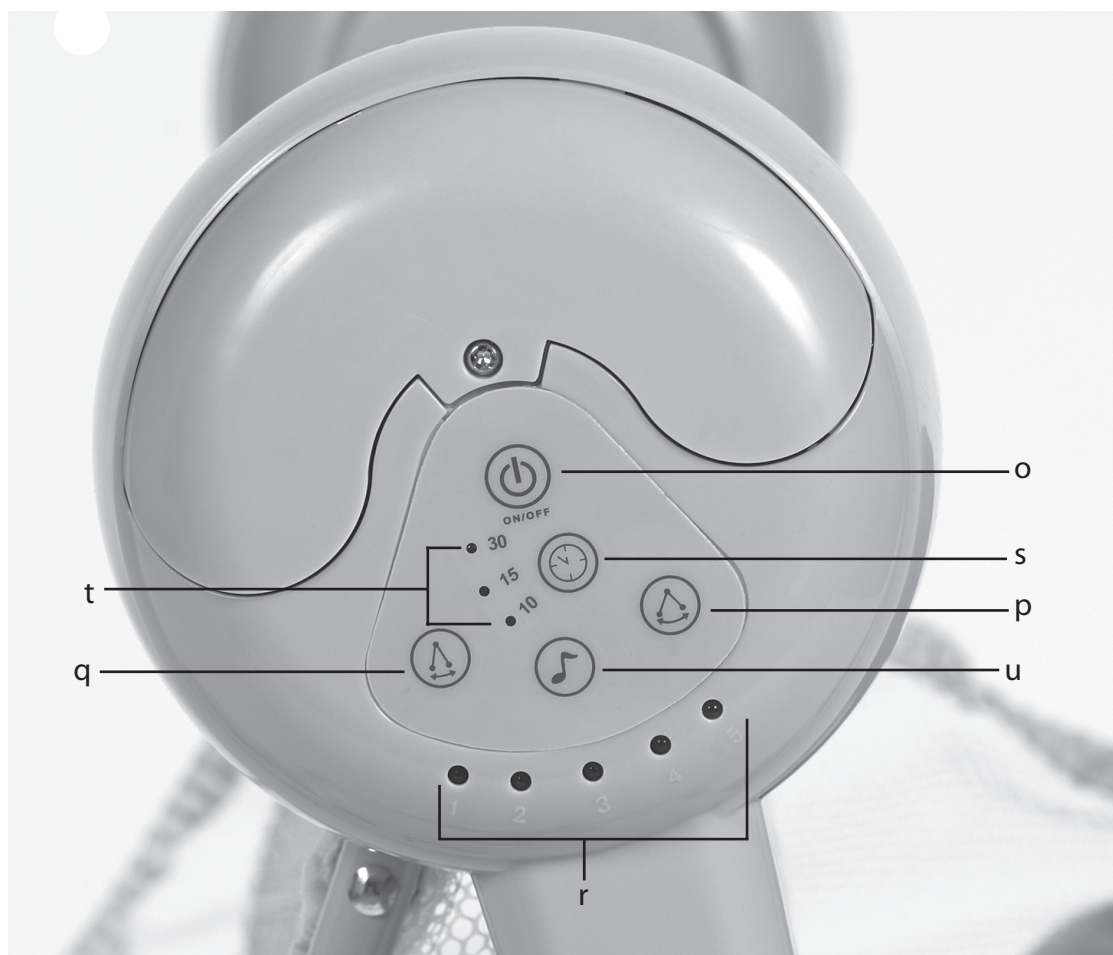

Starting Up the Rocker Swing

On/Off Button (o); Press the on/off button (o) once to start the swing. The rocker swing will always start at the swinging speed with music and loudness level selected the previous time. Press the on/off button again to switch off the rocker swing.

Selection of Swinging Speed; Do not swing the rocker swing by hand, the desired speed will start up within 20 to 45 seconds after selecting the swinging speed. Press button (p) to accelerate the speed. The LEDs (r), underneath (p), show the speed. The faster the swinging the more LEDs will light up. Press the button (q) to slow down the swinging speed.

Timer Button (s); Use the timer to set a swinging time. Press the button (s) to choose a swinging time between 10, 15 or 30 minutes. The three LEDs (t), show the swinging time chosen. If the timer option is not chosen, a 45 minute time will start up automatically.

Button for choice of music and volume level (u);

Press (u) once to start up music

Press (u) twice to increase volume

Press (u) three times to switch off music

Press (u) four times to change the melody, etc.

Care & Maintenance!

Composition

- Aluminium and PVC • Seat: 100% polyester (suedette and canvas).

Care and Maintenance

- Check the rocker swing often for loose screws, worn parts, torn fabrics, or stitching that has come undone.
- Change or repair parts if required. Only use spare parts recommended by Love N Care.
- Clean the rocker swing regularly.
- The surfaces of the head cushion and cover of the rocker swing can be hand washed only. Do not immerse the fabric in water. Do not machine wash or dry clean
- To clean the frame of the rocker swing, only use household soap or a detergent and warm water. Never use bleach.
- Excessive exposure to the sun or heat may cause fading of colours or warping of parts.



loveⁿcare™

Warranty Against Defects

All Love n care products are guaranteed for twelve months from the date of purchase.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This covers against faults which develop through faulty materials and workmanship. Misuse, accidental damages, normal wear and tear or neglect are not covered.

If a fault becomes apparent, please return the item to the store of purchase with your receipt. You must inform the store what the defect is. We will then arrange for its repair or it will be assessed for replacement as expediently as possible. The benefits of this warranty are in addition to other right and remedies under the law in relation to the goods or services to which this warranty relates.

If you are unable to return the item to the store of purchase, you can contact Love N Care on free call 1300 732 599. We will then organise for either somebody to inspect the item or arrange for a courier to pick it up and return it back to you.

For more information, please contact us:

Love N Care Pty Ltd.

Email: info@lovencare.com.au

Web: www.lovencare.com.au

Ph: 1300 732 599 Fax: 02 9774 4633



loveⁿcare™



Contact Us

Head Office:

Love N Care Pty Ltd.
297-299 Canterbury Rd, Revesby
NSW 2212 Australia
Contact No: 02 9774 4655

Fax: 02 9774 4633

Email: info@lovencare.com.au

Website: www.lovencare.com.au

Brisbane

7-9 Eileen Street
Underwood QLD 4119

Contact No: 07 3290 4217

Fax: 07 3209 5019

Western Australia
5 Modal Crescent
Canning Vale WA 6155 Australia

Contact No: 08 9455 4972

Fax: 08 9455 4728

let's be friends!

 <http://www.facebook.com/lovencare1>

 http://twitter.com/love_ncare



100 % AUSTRALIAN OWNED SINCE 1984

lovehncareTM
lovencare.com.au