

loven^hcare™

To view the largest range in baby products please log onto
www.lovenhcare.com.au

♥ Excellence ♥ Intelligence ♥ Caring

Contact Us:

Phone/Email

info@lovenhcare.com.au

NSW/VIC: 1300 732 599

WA: 08 9455 4972

QLD: 07 3290 4217

loven^hcare™



ROYAL ROCKER BP 6610

www.lovenhcare.com.au

info@lovenhcare.com.au



"Congratulations on your new quality Love N Care product from our exclusive range of baby products. This exceptional design combines the most unique features that any baby product offers.

We are confident that you will appreciate its many highlights, including its reliability and durability. Your new product has been manufactured to comply with the Highest Quality Standards and comes with a 12-month warranty.

As you will soon learn there are many more great features about your new Love N Care product."

Important - Please retain these instructions for future use.

WARNING!

Remember a child's safety is your responsibility; failure to follow these safety notes and instructions could result in injury or damage of the product.

- Adult supervision must be maintained at all times
- Do not use on an uneven surface
- Do not carry the rocker while the child is in it
- Recommended for infants only
- Maximum weight capacity should not exceed 10 Kg
- Do not use near heaters, open fire space or other hazardous areas
- Always use the safety harness provided to support your baby
- Discontinue use if you find the product to be faulty in any way.

Features:

- Adjustable footrest
- Carry handles
- Thick padded seat
- Music and vibrator units
- Removable hood & toy bar
- Safety harness and padded crutch support
- Multi position backrest
- Can be used in a fixed or rocking position

Assembly Instructions

To Open the Rocker:

To unfold the rocker locate the trigger handle on the back of the seat and pull upwards. As shown in fig 1.



Fig 1

Attaching the Toy Bar:

Slide the toy bar ratchets into the guides located either side of the rocker. Adjust the toy bar to your desired position. As shown in fig 2.



Fig 2

Adjusting the Back rest:

To adjust the seat to your desired position, pull the trigger handle which is located on the back rest either up or down. As shown in fig 3.



Fig 3

Adjusting the Footrest:

To adjust the footrest to your desired position, press the buttons on either side of the rocker in the direction you prefer. As shown in fig 4.



Fig 4

Fixed or Rocking:

To alternate between a fixed & rocking position, rotate the plastic levers at the base of the unit. As shown in fig 5.



Fig 5

Operating the Music and Vibrator options:

To operate the vibrator and music units located either side of the rocker; simply activate the on/off switch. As shown in Fig 6.



Fig 6

Battery Replacement:

1. Remove the safety screw cover
2. Insert Batteries. (Vibrator requires 1 C type battery, Music requires 2 AA type batteries.)
3. Replace the cover and safety screw when complete.