 


Instruction Manual



loveⁿcare™

IMPORTANT: PLEASE READ INSTRUCTIONS
CAREFULLY AND KEEP FOR FUTURE REFERENCE!

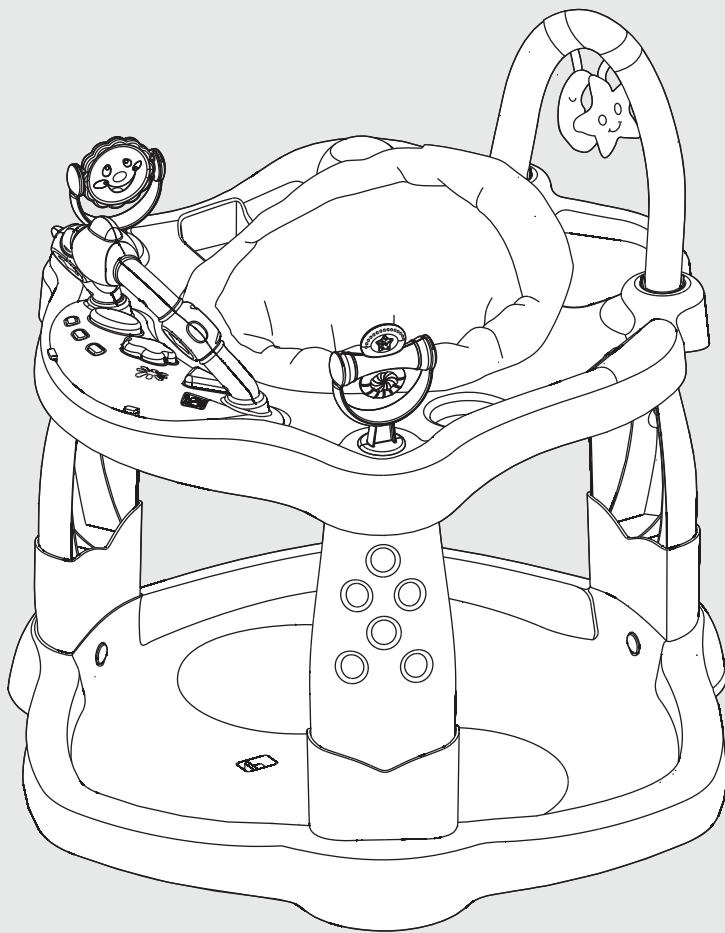

“TREK” Activity Centre

Item:BP 571

WARNING

Read all instructions before assembly and use of the stationary activity center. Keep instructions for future use. DO NOT use the stationary activity center if it is damaged or broken.

WARNING:

 
- Use only for a child who is able to hold head upright unassisted and who is not able to walk or climb out of product.
- Never leave child unattended. Always keep child in view while in product. (or product description).
- Never use near steps.
- To avoid tip over, place product on a flat, level surface.
- Strings can cause strangulation! DO NOT place items with a string around child's neck, such as hood strings or pacifier cords. DO NOT suspend strings over product or attach strings to toys.
- Requires two "AA" (LR6) alkaline batteries (not included) for toy operation.
- **Use only for a child:**
 - who is able to hold head up unassisted.
 - who is not able to climb out.
 - who weighs less than 25 lbs.(11,3kg) and is less than 32 inches (81cm) in height.
- This baby activity center should be used only for short periods of time (e.g.20 mins).
- Do not use replacement parts other than those approved by the manufacturer or distributor.
- **WARNING:** Do not use this activity center as a swing.
- The child will be dangerous of play nearby jumping walker.
- Keep child in the middle of seat correctly.

Cleaning:


- Clean with a damp sponge or cloth and mild detergent. Do not use abrasives or bleach.

Parts list


Base x1

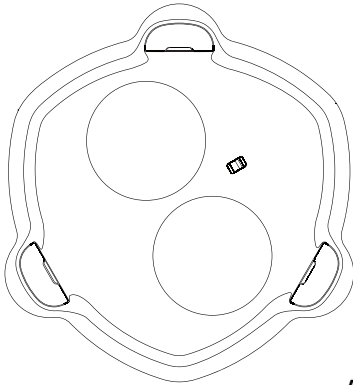


Tray x1

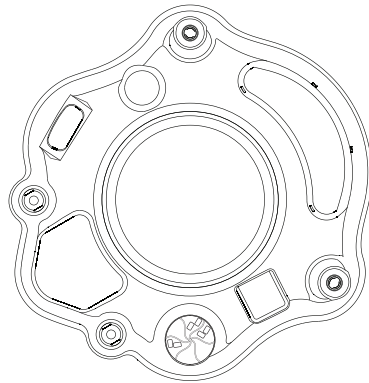 


Legs x3

 


Arch Toy x1

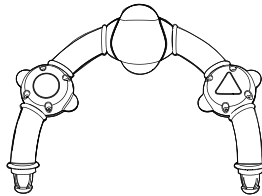 


Plush Arch Toy x1

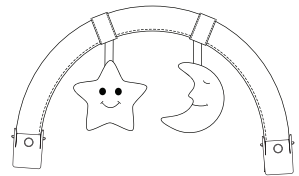 


Music Tray x1

 


Seat Ring x1

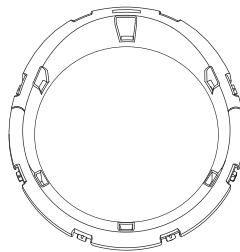 


Seat Pad x1

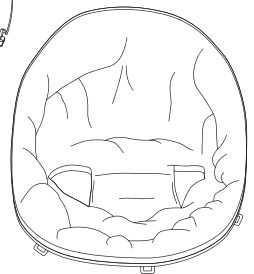 

Spinner Toys x2

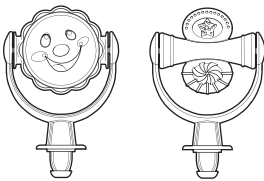 


Seat Back x1

 




Tool Needed:

 1. Phillips Screwdriver (not included)






ASSEMBLE THE LEGS TO THE BASE

   1. Insert a leg into the slot on the base, see diagram
2. Press the leg down into the "Base" until the leg button locks into the base.
3. Repeat steps 1-2 for other two legs.

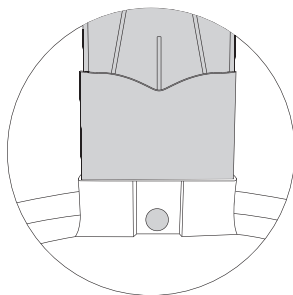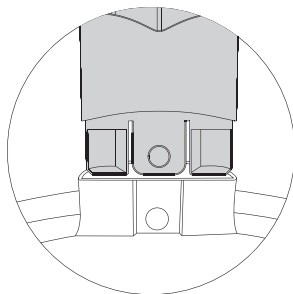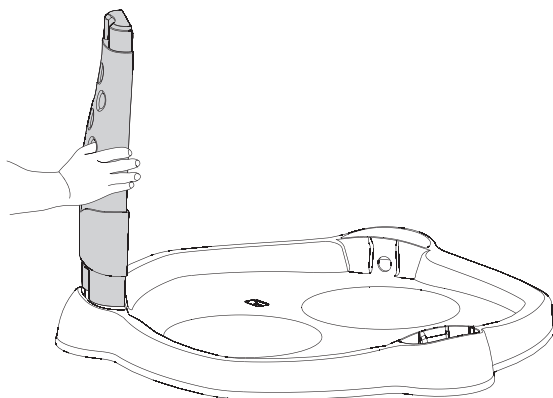



ATTACHING THE LEGS TO THE TRAY

   1. Position the tray on top of the legs, see diagram.
2. Push down and ensure the buttons lock into place.
3. Repeat steps 1-2 for other two legs.

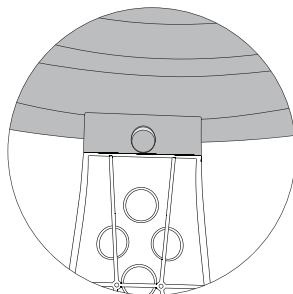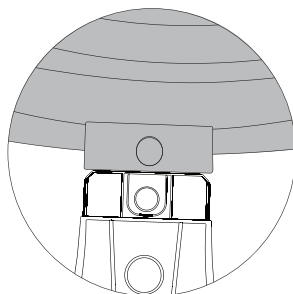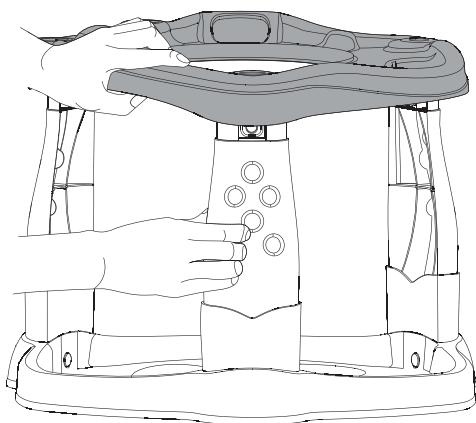


STEP 3

  Position the two spinner toys into the round holes on the tray, see diagram. Push the spinner toys into the holes until the studs on the ends of the spinner toys lock over the housings on the underside of the tray and cannot be pulled off.

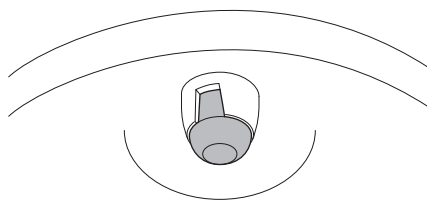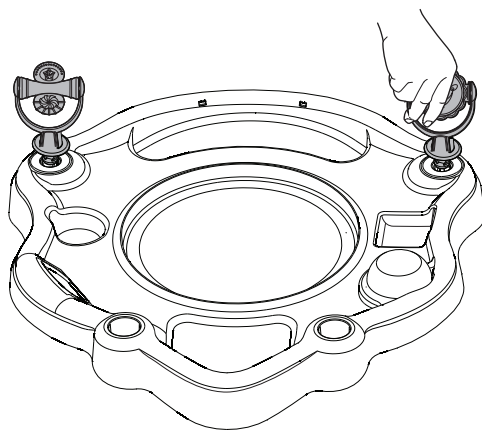


STEP 4

 
Slot the plush arch toy into the round holes on the tray, see diagram. Make sure both lock hooks snap into the lock hook holes.

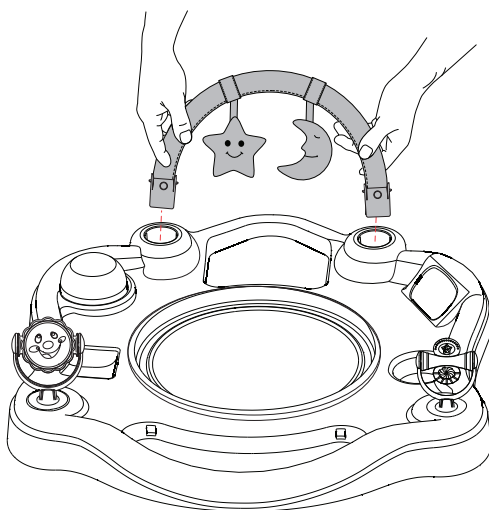

 Before fitting the music insert you will need to fit the batteries. Unfasten the screw in the battery cover using a X-head screwdriver. Insert two 'AA' batteries, ensure that the batteries are fitted the correct way round. Refit the battery cover and tighten the screw.

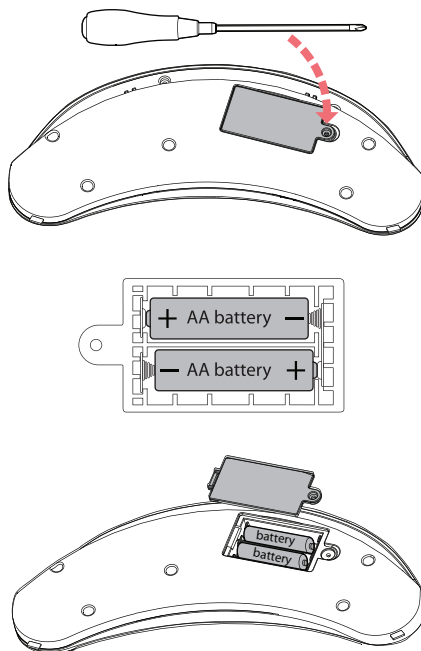


 Slot the plush arch toy into the round holes on the main tray, see diagram. Make sure both lock hooks snap into the lock hook holes.


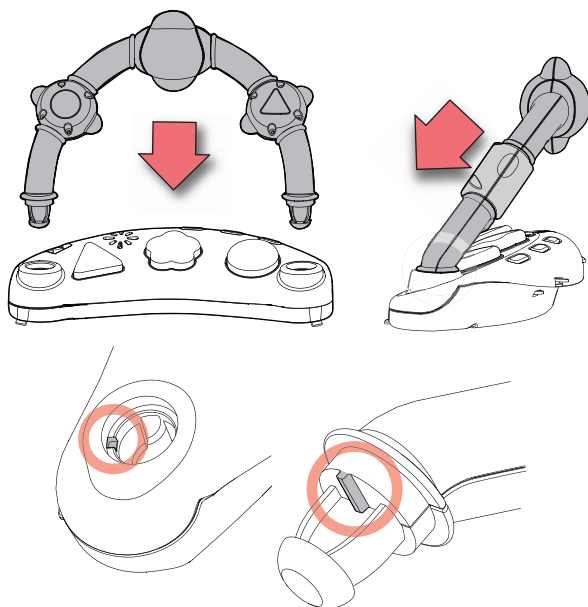


ATTACHING MUSIC TRAY ON THE TRAY

 1. Slot the music tray on the tray, see diagram. Ensure both front locks hook into the openings.
2. Push down on the back of music tray. Ensure that both back locks are securely in place.





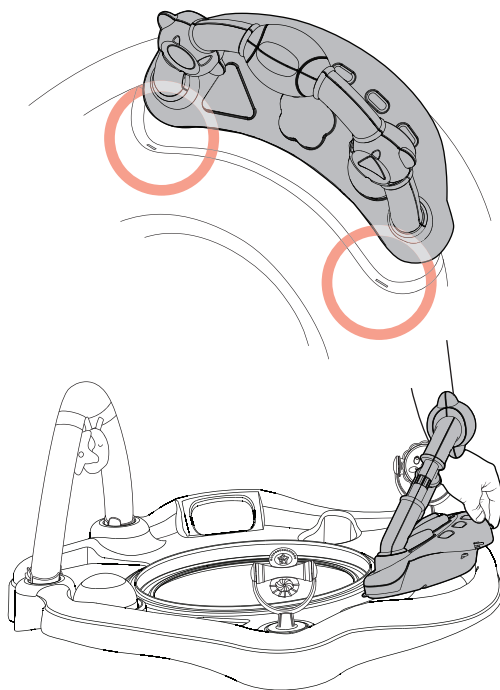


  Slide the switch on the back of the music insert along for either off, quiet music or loud music. Press the flashing shapes on the front of the music insert for eight different tunes.

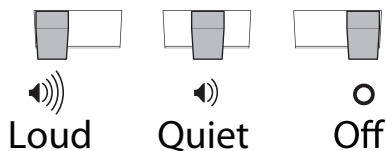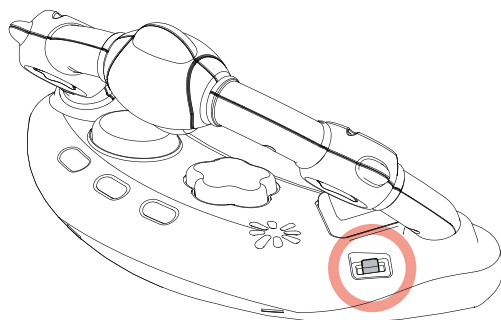

ATTACH THE SEAT PAD

    
 
1. Insert the seat back into the slots on the tray, see diagram. Pull up on the seat back to ensure that it is securely locked into place.
2. Pull the crotch section of the seat pad outwards, the warning label will be at the back and the adjustment strap for the seat pad will be at the bottom.
3. Place seat pad into seat ring located on "Tray". Align it so that the highest point of the seat pad aligns with back of the walker.
4. Slide tabs through holes.

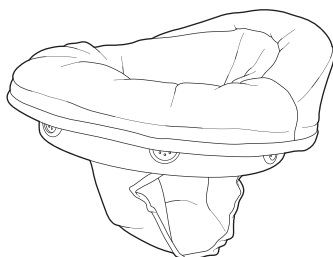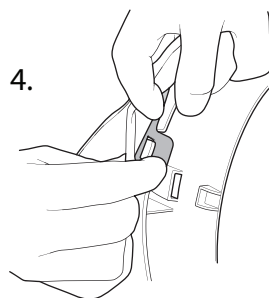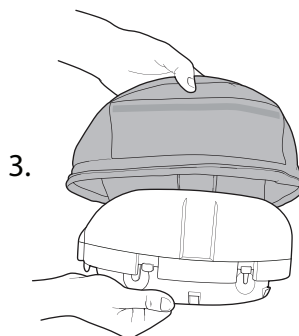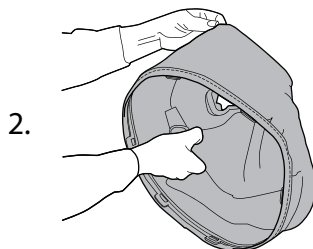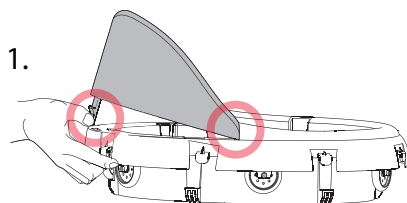

ASSEMBLE THE SEAT UNIT ONTO THE TRAY

1. Slot the assembled seat into the hole in the middle of the tray.
While holding the sides up the tray, push down on the seat ring until the dips on the seat ring lock over the edge of the tray.
2. Turn the seat unit over and check that all of the six latches have locked over the edge of the tray. Also pull up on the seat to ensure that it will not come off.

  
Once fitted the seat will rotate freely.

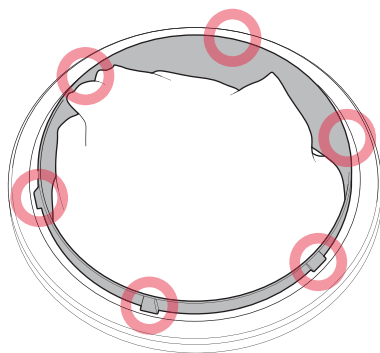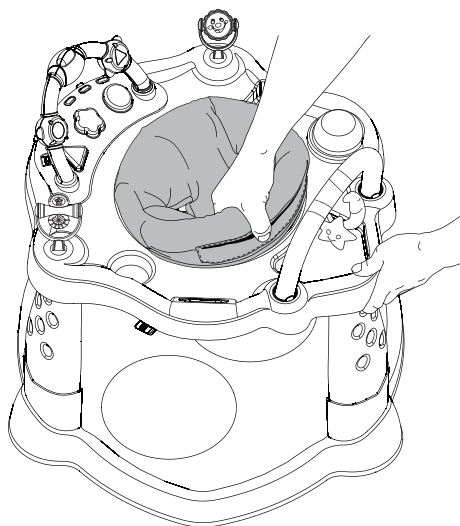

LOCKING SYSTEM FOR SEAT UNIT



There are two locking positions under the seat unit, see diagram.

 Insert the pin to prohibit the seat unit from rotating.

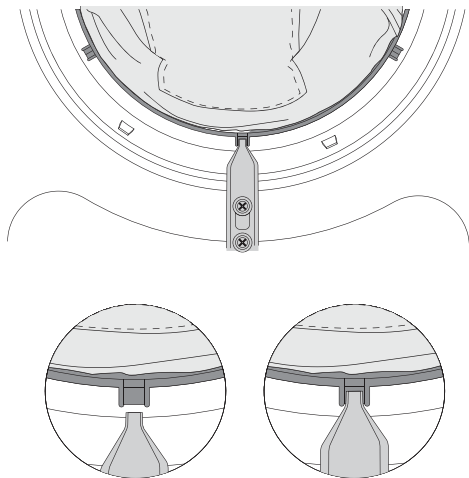

**FUNCTION FOR THE
PEDAL BASE**

  1. You will see two circular pedals on the base for the trek. There is a lock on the base as well.
2. When unlocked, your child can learn to walk by moving on the pedals.
3. When locked the pedals will not move.

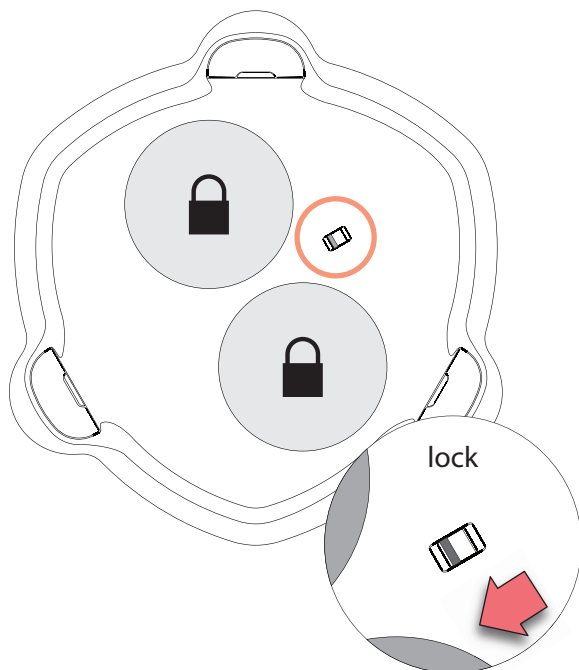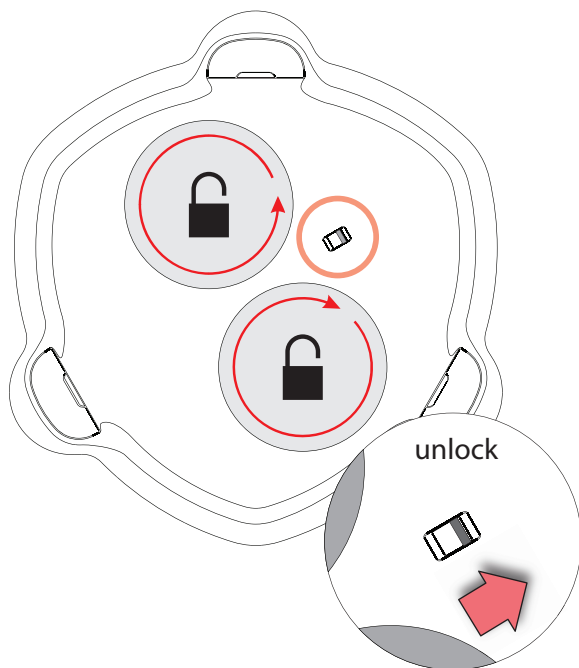



ADJUST THE HEIGHT BY THE SEAT PAD

To raise the height of the seat:

Grip the buckle on the rear of the seat pad. Pull the loose end of the webbing away from the buckle until the correct height is achieved. You may need to place the child in the seat several times before the correct height is achieved.

To lower the height of the seat:

  Push the button on the top of the buckle inwards (A) and hold. Feed the webbing through the buckle (B) until the seat is the correct height. You may need to place the child in the seat several times before the correct height is achieved.

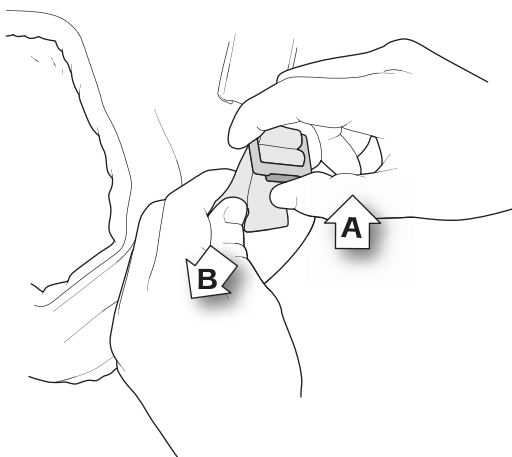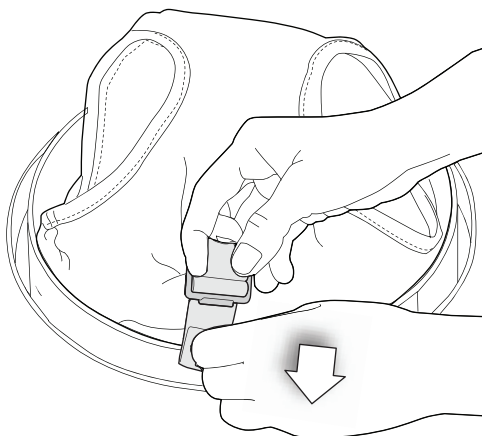

Care & maintenance

1. Wipe plastic parts with a damp cloth using mild soap.
2. Machine wash seat pad in cold water in gentle cycle. Do not use harsh detergents or bleach. Do not dry clean.
3. Air or line dry.
4. To maintain stopping performance, clean friction strips regularly with damp cloth.



Contact Us:

Love N Care Pty Ltd.

297-299 Canterbury Rd, Revesby

NSW 2212 Australia

Contact No: 02 9774 4655

Fax: 02 9774 4633

Email: info@lovencare.com.au

Website: www.lovencare.com.au