

296.00 mm

Contact Us

Head Office:
Love N Care Pty Ltd.
297-299 Canterbury Rd, Revesby
NSW 2212 Australia
Contact No: 02 9774 4655
Fax: 02 9774 4633
Email: info@lovencare.com.au
Website: www.lovencare.com.au

lovehncare™
www.lovencare.com.au

Let's be friends!
<http://www.facebook.com/lovencare1>
<https://www.instagram.com/lovencare1>
 100% AUSTRALIAN OWNED SINCE 1984

lovehncare™ BP 6620

wave



Read all instructions before assembly and use of product. Keep instructions for future use.

210.00 mm

Congratulations

Congratulations on purchasing your new Love N Care Swing. In just a few steps you should be able to assemble this unique product and have it ready to meet your beautiful child :)



1.

WARRANTY AGAINST DEFECTS

All Love N Care products are guaranteed for twelve months from the date of purchase. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This covers against faults which develop through faulty materials and workmanship. Misuse, accidental damages, normal wear and tear or neglect are not covered. If a fault becomes apparent, please return the item to the store of purchase with your receipt. You must inform the store what the defect is. We will then arrange for its repair or it will be assessed for replacement as expeditiously as possible. The benefits of this warranty are in addition to other right and remedies under the law in relation to the goods or services to which this warranty relates.

If you are unable to return the item to the store of purchase, you can contact Love N Care on free call 1300 732 599. Where you send the product directly to the manufacturer then you may be liable for the costs of transportation to and from Love N Care. Love N Care will meet the reasonable expenses incurred by a consumer in making a warranty claim. You can claim expenses incurred in making a claim by contacting our customer service team on 1300 732 599 or by email at info@lovencare.com.au

10.

CARE AND MAINTENANCE

- Keep the product in dry places. In order to keep the product attractive - avoid prolonged sun exposure.
- Check condition of the bouncer regularly. Before each use check if it is assembled regularly.
- Use only parts recommended and provided by manufacturer.
- Clean the swing regularly.
- In order to clean plastic parts and tubes - use damp cloth.
- Padding can be hand washed with a bit of delicate soap. Do not bleach!
- Fabric of the seat pad can be cleaned with a damp cloth.

9.

- Please read this instruction manual carefully before using the swing and keep it together with packaging for future reference.
- Swing set requires 4 x AAAA batteries (not included).
- This swing is intended for children weighing up to 9 kg.
- Actual product may differ from image shown.

WARNINGS

- ⚠ WARNING:** Prevent serious injury or death:
- ⚠ WARNING:** NEVER leave child unattended.
- ⚠ WARNING:** ALWAYS use restraint system.
- ⚠ WARNING:** NEVER use for a child able to sit up unassisted.
- ⚠ FALL HAZARD:** Child's activity may move product. Use only on floor. Never use on an elevated surface.
- ⚠ SUFFOCATION HAZARD:** Never use on a soft surface (bed, sofa, couch), as seat may tip over and cause suffocation.

 
NEVER place a child under 5 lbs. (2.26 kg) or over 20 lbs. (9 kg) in the product.

- All plastic packaging and elements which are not a part of the bouncer set should be removed before going to the child.
- The swing must be assembled by an adult only. The product should be checked by an adult before every use.
- The swing set includes small parts and should be kept away from babies before it is assembled. NEVER leave the child unattended. Never use for a baby who is able to leave the swing on its own.
- Use in reclined position until your child is not able to hold up head unassisted.
- Do not use if your child is able to sit upright unaided or weighs more than 9 kg.
- Never use on a soft surface (e.g. bed), as swing may tip over and cause suffocation.
- Never leave the swing on uneven or sloping surfaces.
- Never use this product on an elevated surface e.g. table - it is dangerous. Always use it on the floor.
- This swing is not intended for prolonged period of sleeping. It does not replace a bed. Should your child need to sleep, then it should be placed in a bed.
- Always use the restraint system while child is in the swing.
- Never lift or move the swing when the baby is inside.
- Never use the swing if there are any parts missing or broken. Never use any accessories or replacement parts unless they are ones approved by the manufacturer. Regularly check the condition of the swing.
- Keep swing away from open fire and other sources of heat.
- If the swing is not used for prolonged period of time - remove batteries. After dismantling - keep parts away from babies.

IMPORTANT! Small parts are included in the box. Product must be assembled by an adult.

2.

Parts List

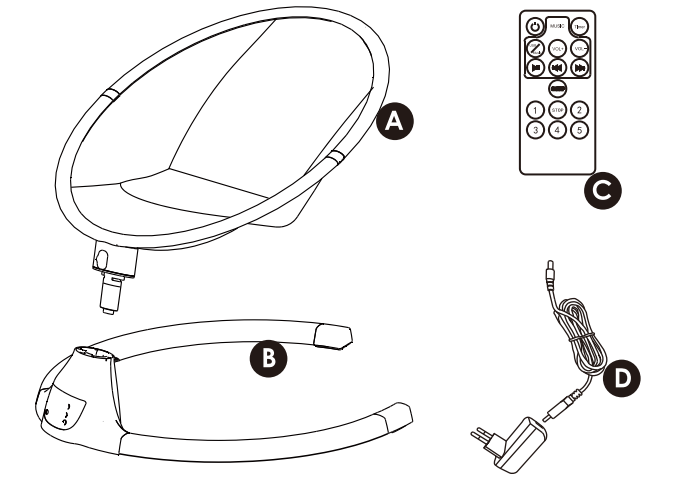

A - Seat Frame
B - Base Frame
C - Remote Control
D - Power Adapter

Please make sure all parts are included before proceeding to assembly.

3.

Instructions for Use

- Power Switch Button:** Touch the one time and the indicator light will turn on, which means the power is on. Press the button a second time and the indicator light is turned off to turn off the power.
- Five swing speeds:** the indicator light stands for the speed gears. The swing angles are 18°/21°/23°/25°/31°.

Notice: the Indicator light will show and the swing will stop automatically when the motor is stuck.

- Timer:** Touch the button of for the first time to set 8 mins swing, touch the second time to set 15 mins and the third time to set 30 mins swing.

The indicator light will show respectively as 8/15/30

- USB:** This product can support a USB disk to play additional music. Insert the USB disk when the button lights up this will indicate that you can play music from the USB.
- Music:** 1. Touch to play built-in music.
2. Touch and hold for two seconds to play the next song.
3. When the USB disk is pulled out, touch to play the built-in music.
- Volume:** Press to increase the volume, press to turn down the volume.
- Bluetooth:** To connect the bluetooth, turn on the bluetooth from the cell phone and connect with "BT-BABY", when the button lights up then you can play music from bluetooth.
- If the swing shakes too much, check the safety lock and place the swing on a flat surface.

8.

Remote Control

	Power on/off		Play/Pause
	Time Setting		Previous Song
	Built in Music/USB		Next Song
	Volume Up		Sleep Mode
	Volume Down		Stop
	1 2 3 4 5		Five Speed Mode

Panel

	Power On/Off		Blue Tooth Mode
	Swing Gear		USB Mode
	Time Setting (8/15/30)		Built in Music
	Volume +/-		Over Input Voltage Warning
	Switch Music		

Adapter

Plug the Power Adapter (D) into the DC jack located on the Base Frame (B). The USB port is also located on the base frame (B). Place the adapter (D) 100-240V 50/60HZ in the AC Outlet. Do Not use a different Voltage.

7.

Product Feature


This product has been certified to comply with EN71-1 EN71-2 EN71-3 and RoHS.

Product Specification

Product Name	Wave Swing
Model Number	BP 6620
Input Voltage	100-240V/50/60HZ
Output Voltage	DC5V 1A
Weight Limit	9kg
Standard	EN71-1 EN71-2 EN71-3
Warning	Do not use a non-matching adapter


Batteries Installation

 The Location for the batteries is on the base. The swing uses 4xAAA batteries.

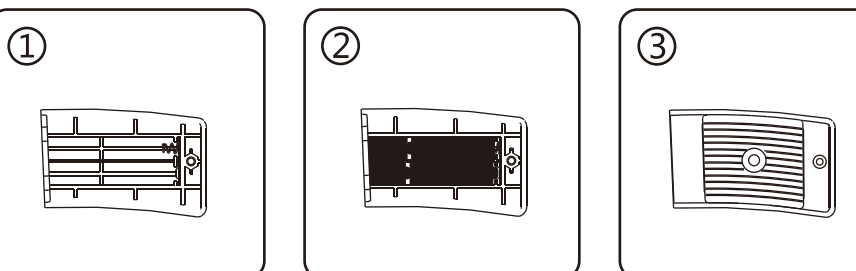

4.

 Using the Harness

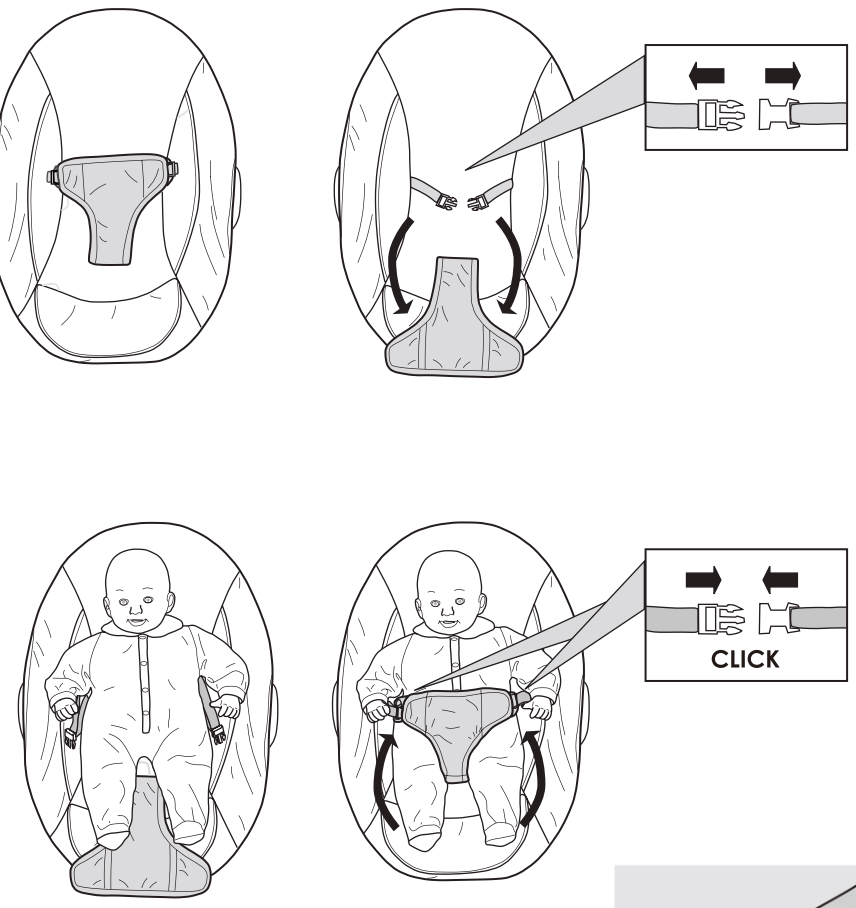


Adjust the straps in the buckles as needed so that the restraint fits snugly (but not too tightly). Be sure the seat restraint is secure by pulling it away from the baby's body. The buckles should remain fastened.

Adjusting the harness


5.

Assembly

 Attach Part A (Seat Frame) to Part B (Base Frame)

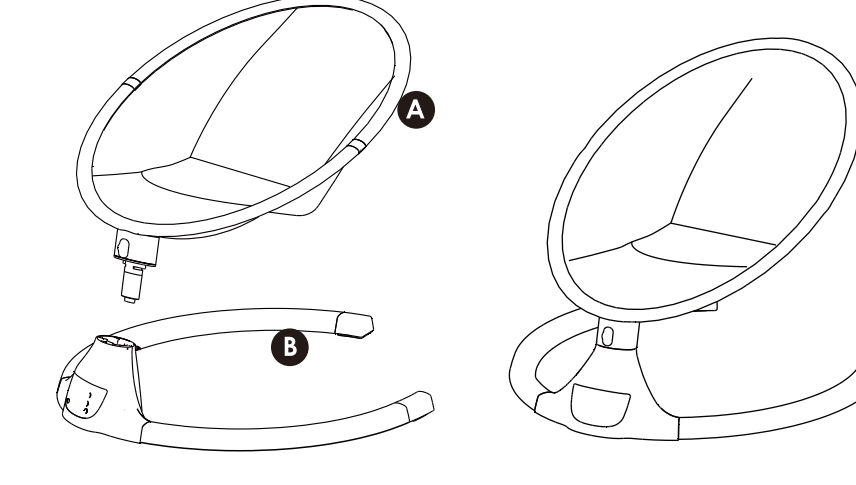

Disassembly

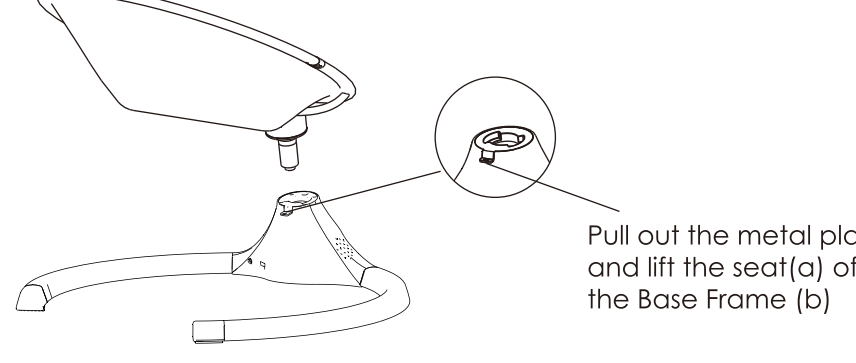 

Pull out the metal plate and lift the seat(a) off the Base Frame (b)

6.

借 (通) 用 件 登 记
描 图
校 描
旧 底 图 总 号
签 字
日 期

					佛山市熊宝宝科技有限公司				产品机型	BB007	
					有限公司				名称	LoveNCare 说明书	
标记	处数	更改文件号	签 字	日期	阶段标记		版本	重量	比例		
设计					S	A	B	A1	1:1		
校对					共 张		第 张		材料		
审核									80g双胶纸		
工艺			日期						图号		
									1BB2230200014		