

loveⁿcare™



Elevator Booster Seat

BP BOOSTS

TRAY AND BACKREST

Take the Elevator Booster Seat out of the box.

1. Press the flange to remove the tray from the lower part of the high chair.
(1.1 and 1.2).
2. Completely unfold the tray legs.
3. Push the backrest of the Booster seat backwards until it reaches the locking mechanism. (3.1)

To fold the backrest of the booster Seat press the flange situated on the lower part, as shown in the photo. (3.2)

FITTING THE BOOSTER SEAT

4. Slot the tray legs onto the base of the booster seat, until you hear the safety clicks.


Fasten the upholstery clips to the tray legs. (4.1)


5. The Elevator booster seat has three height positions; to access them simultaneously press button A and move flange B, as shown in the photo. (5.1, 5.2, 5.3)
6. Position the Booster seat in the centre of an adult's chair.

Pass the side straps A behind the backrest of the adult's chair and fasten the buckles, tighten the straps until it fits perfectly.

Pass the lower straps B under the seat of the adult's chair and fasten the buckles, tighten the straps until it fits perfectly.

Check the stability of the booster before placing the child in the Elevator.

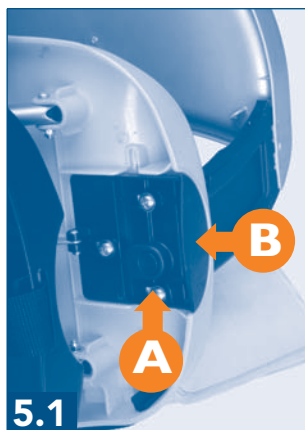

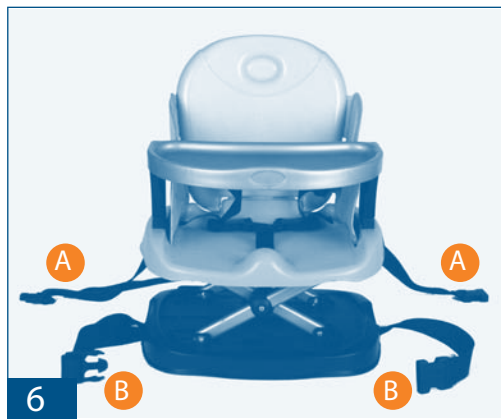

- **Never leave the child unsupervised in the Elevator Booster seat.**
- **Read these instructions carefully before using the product.**
- **The stability of the Elevator Booster seat (fastened on top of a chair for adults) depends exclusively on its correct fastening and on the correct stability of the adult's chair on which it is installed.**
- **The adult's chair on which the Elevator Booster seat is going to be installed should always be positioned on a flat, stable surface.**
- **The Elevator Booster seat should always be installed on an adult's chair that is wider than the actual Lunch.**

WARNING: Always check the stability of the adult's chair before installing the Elevator Booster seat on it.

WARNING: Maximum weight of the seat is 40kg .

WARNING: Before and after placing the child in the Elevator Booster seat always check that it is perfectly fastened to the adult's chair.

WARNING: Not recommended for children under 18 months.

WARNING: Always use the seat belt passing it through the crotch strap.

WARNING: If the Elevator Booster seat is being used as a chair, do the buckles up on the fastening straps that are not being used so that the ends are not loose.

WARNING: Never use the Elevator Booster seat as a chair on raised surfaces without the fastening straps.

WARNING: Do not use the Elevator Booster seat near to objects that the child could push against with his hands or feet.

WARNING: Do not use on swivel chairs or in the car.

WARNING: Do not use on stools, folding or unstable chairs.

WARNING: Never use accessories that have not been approved by the manufacturer.