 


love^hcare™

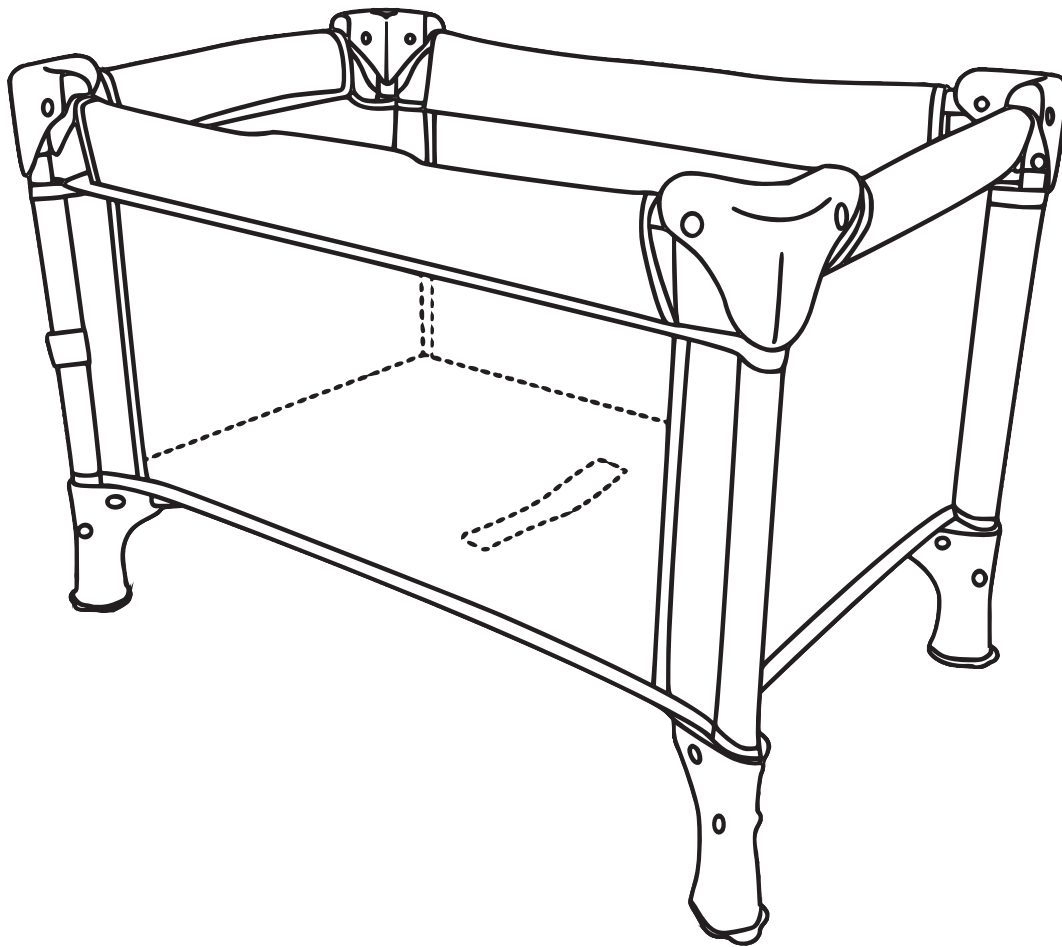

Blossom

Playpen

Instruction Manual HK BLOSSOM

 
PLEASE KEEP INSTRUCTIONS FOR FUTURE REFERENCE

Blossom

love^hcare™

Congratulations on purchasing your
new Love N Care Toy Playpen

In a few minutes you should be able
to have this one of kind playpen ready
to meet your beautiful child :)

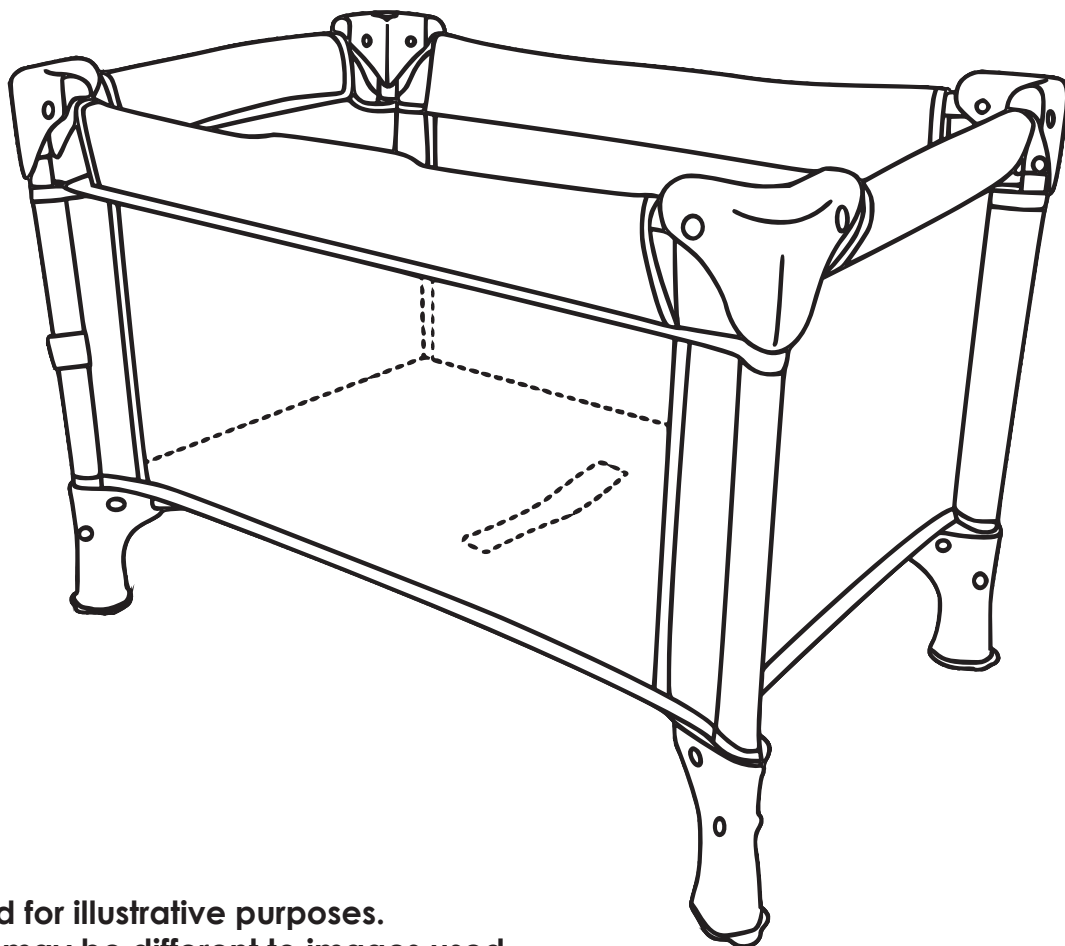

Images are used for illustrative purposes.
The actual item may be different to images used.



Please read these instructions carefully before use and keep them for future reference.

- This product is a TOY playard for dolls and stuffed toys ONLY.
- NEVER use this toy for a baby or child for any purpose whatsoever.
- Death or Serious Injury may occur.
- Maximum weight allowed = 5 lbs.
- The product, including side rails, must be fully erected prior to use. Make sure latches are secure.
- Always provide the supervision necessary for the safety of your child.
- This product requires adult assembly. Be sure the playard is set up completely and properly before use.
- ALWAYS check that each of the four top rails are locked and the center of the floor is pushed down before use.
- Do not use any attachments or items not included in this instruction manual with this playard.
- POSSIBLE PINCHING HAZARD. When setting up the playard, use caution to avoid pinching your fingers on the top corners
- Keep children away from the playard during set-up.
- Discard all packaging materials properly. Do not allow children to play with them.

Maintenance

All of the fittings, locks, rivets, and other hardware and plastic parts on the playard should be inspected periodically to insure that they are secured properly and not damaged or malfunctioning. The straps and fabric items and their stitching should also be inspected periodically to ensure that they are secured properly and not loose, torn or otherwise damaged. All moving parts and hinges should also be checked periodically to ensure they are operating properly.

If using this item at the beach you must clean sand off of ALL the parts before packing it into the travel bag. Getting sand in the top rail locks may damage the function.

Any missing, broken, or worn components should be replaced immediately, and the playard should not be used until they are replaced. Only original manufacturer's components should be used. If needed, please contact Love N Care on our toll-free phone number 1300 732 599.

Cleaning

The fabric material on this product can be cleaned using mild household soap or detergent and warm water on a sponge or clean cloth.

Always allow the fabric to completely air dry before using the product.

The frame should always be kept clean and free of dirt and foreign matter. Use a sponge or cloth dampened with warm water and a mild detergent cleaner to clean these parts if necessary.

 
 
Instructions

1 Assembling and Using your Toy Playard

To ensure safe operation of your toy playard, please follow these instructions carefully.

2 Unpacking the Product from the Box

- Carefully remove toy playard and all parts from the box and plastic bag.
- Remove any cardboard packing materials.
- Identify the parts (toy playard, travel bag, and documents (documents not shown) with the pictures in Fig 1.
- Remove all plastic or packing materials from any areas of the product and discard properly. Do not allow children to play with them.

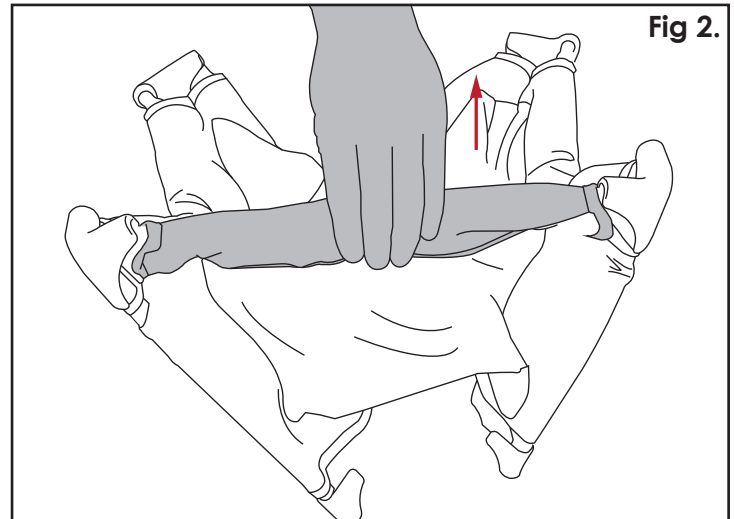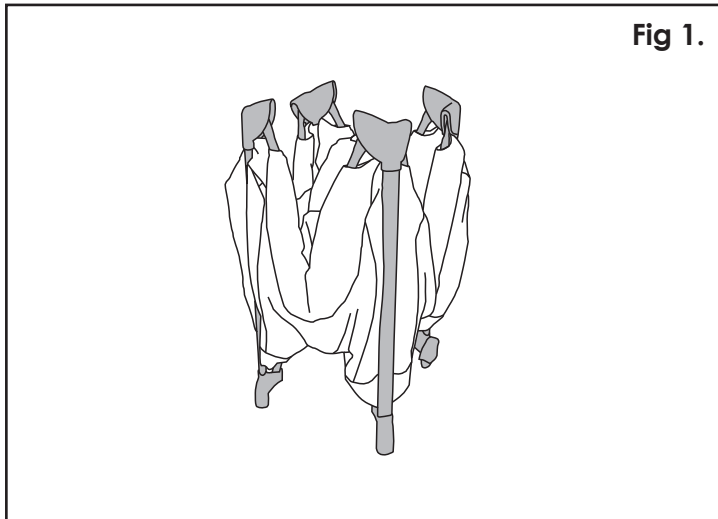

Adult assembly is required for this product. No Tools Required

 
 
3 Unpacking/Assembling the Toy Playard

- Keep children away from playard while unpacking.
- Open the box and remove the toy playard.
- Set the toy playard so it is resting on its feet.
- Pull upward on an upper side rail until it is straight. See Fig 2.
- Then rotate the rail inward to lock. See Fig 3.

NOTE: There is ONE mechanism that locks each rail on all four sides.



- Repeat on the other three rails.
- Once you have locked the side rails in the up position, go back and check each side rail again to be sure they are all locked into position.
- Push down on the center of the floor. See Fig 4.

Instructions

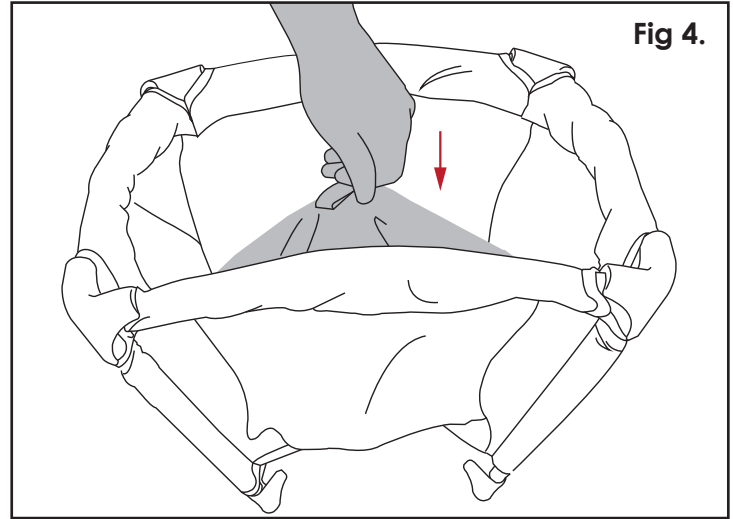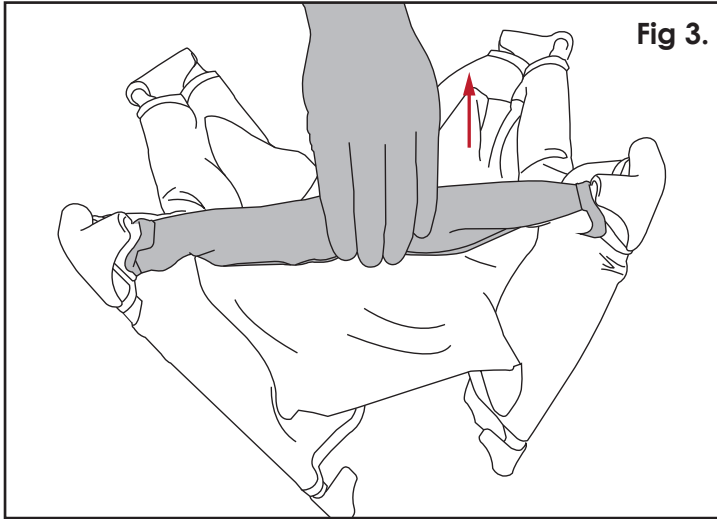

4 Folding/Packing the Toy Playard

  
- Unlock the secondary lock on the underside of the playard then, Pull upward on the webbing loop near the center of the toy playard floor. See Fig 5.
- Then unlock one upper rail by rotating the rail outward and then push down. See Fig 6.
- Repeat on the other three rails until all four top rails have been unlocked and folded.
- Gather the playard together until it is compact and completely folded. See Fig 7.

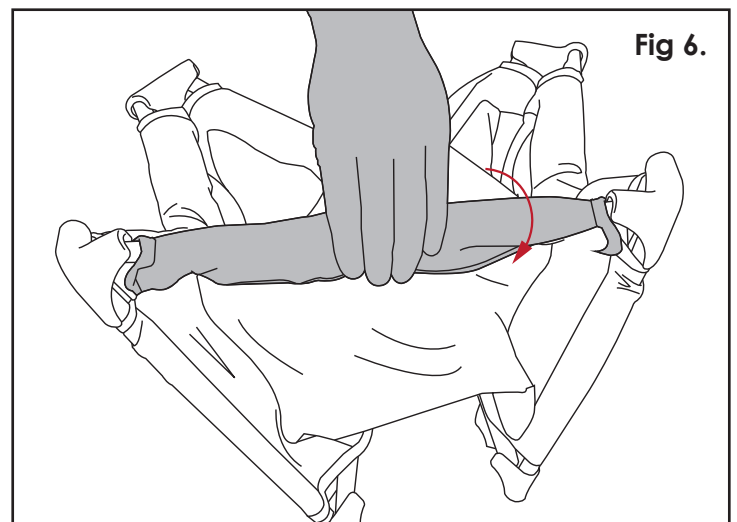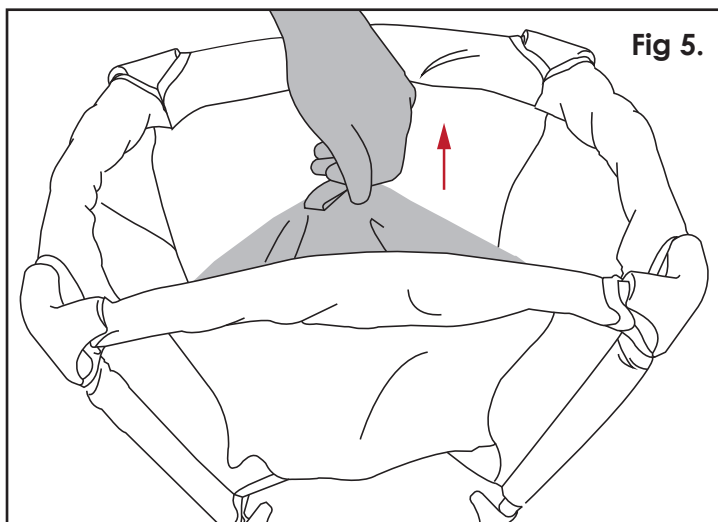

WARNING

Be careful not to pinch your fingers on the top corners during assembly.
ALWAYS ensure that all side rails are locked into position before using this product.
NEVER use items not recommended by Love N Care with this product.

 Instructions

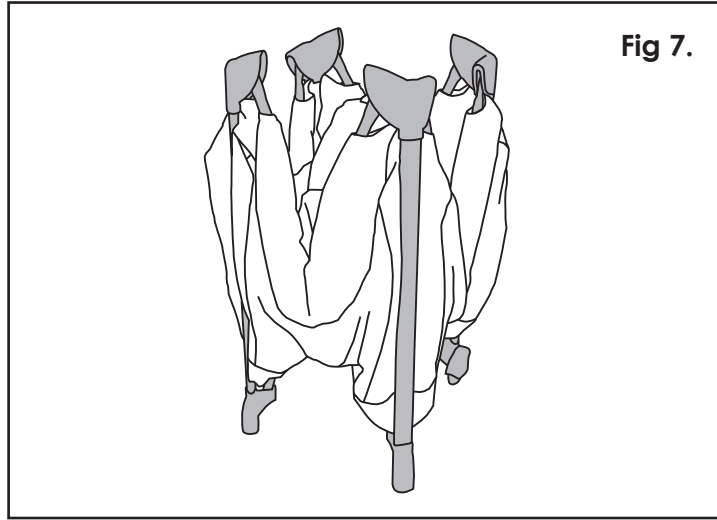

Warranty Against Defects

All Love N Care products are guaranteed for twelve months from the date of purchase. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This covers against faults which develop through faulty materials and workmanship. Misuse, accidental damages, normal wear and tear or neglect are not covered.

If a fault becomes apparent, please return the item to the store of purchase with your receipt.

You must inform the store what the defect is. We will then arrange for its repair or it will be assessed for replacement as expediently as possible. The benefits of this warranty are in addition to other right and remedies under the law in relation to the goods or services to which this warranty relates.

If you are unable to return the item to the store of purchase, you can contact Love N Care on free call 1300 732 599.

Where you send the product directly to the manufacturer then you may be liable for the costs of transportation to and from Love N Care.

Love N Care will meet the reasonable expenses incurred by a consumer in a making a warranty claim. You can claim expenses incurred in making a claim by contacting our customer service team on 1300 732 599 or by email at info@lovenecare.com.au



Contact Us

Head Office:

Love N Care Pty Ltd.

297-299 Canterbury Rd, Revesby

NSW 2212 Australia

Contact No: 02 9774 4655

Fax: 02 9774 4633

Email: info@lovencare.com.au

Website: www.lovencare.com.au

let's be friends!

 <http://www.facebook.com/lovencare1>

 http://twitter.com/love_ncare



100 % AUSTRALIAN OWNED SINCE 1984

lovehncare™
lovencare.com.au