 


**loven<sup>h</sup>care™**

**JOY**

**2-IN-1 BOUNCER**

**BP 8690**

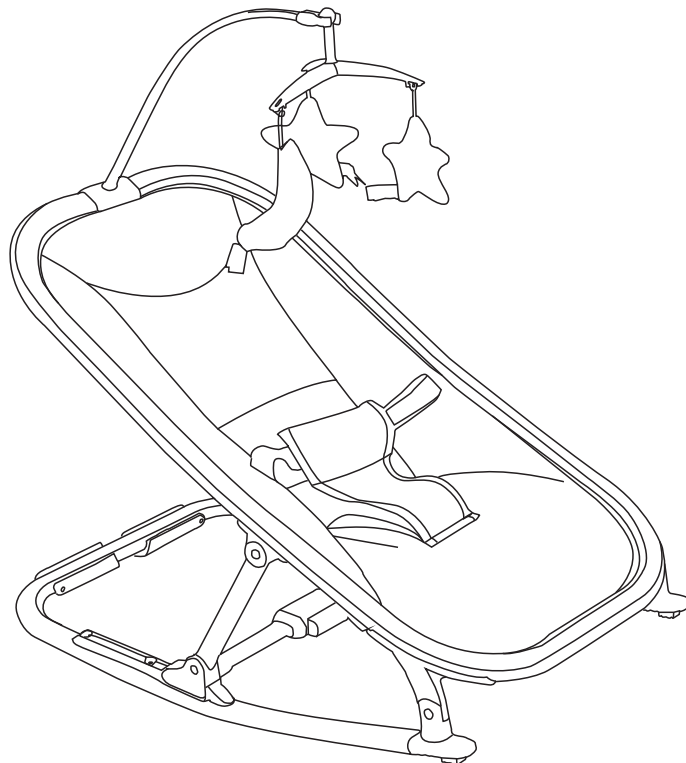


**PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE**

# love<sup>h</sup>care™

Congratulations on your purchase of the Joy 2-in1 bouncer.

This product has been designed and developed with safety, comfort and functionality in mind. Please take the time to read this manual carefully before using this product and keep it in a safe place for future reference

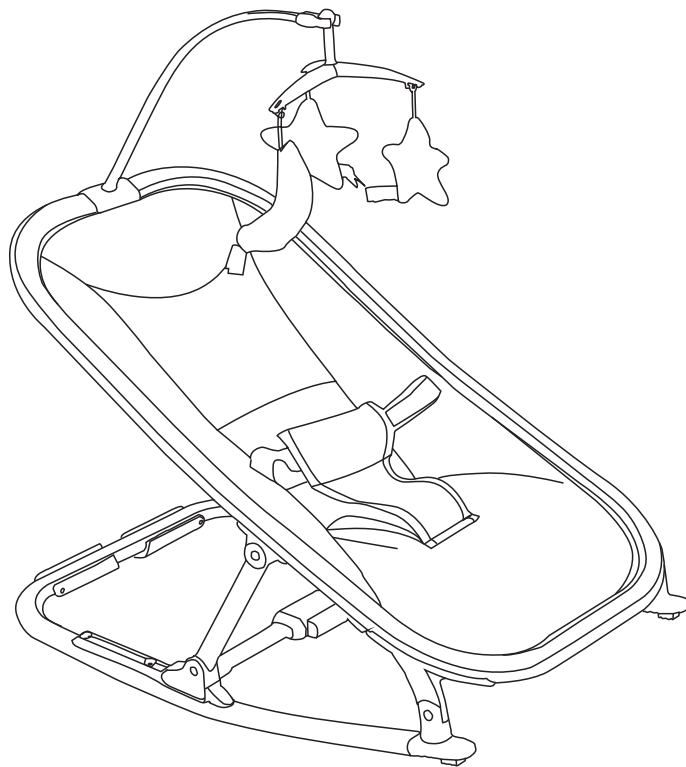

## **IMPORTANT!: READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.**

- Your child's safety may be affected if you do not follow these instructions.
- Use only spare parts delivered by importer for replacing parts or repair.
- Damages caused by overloading or wrong folding are not granted.
- Prolonged exposure to sunshine may cause changes in the colour of materials and fabrics.
- Do not expose this product to extreme temperatures. Extreme sunshine or temperatures may cause colour changes or bent parts.


## **WARNING**

- Never leave the child unattended.
- The use of this reclined cradle is recommended for children from 0-6 months. The maximum weight is up to 9 kg.
- Stop using this product when the child start trying to sit up.
- Never let the child sleep in this product. This product does not replace a cot or a crib. Should the child fall asleep, then it should be placed in a suitable cot or crib.
- Never use reclined cradle as a car seat; it will not protect your baby during an incident.
- Avoid serious injury, always use the restraint system.
- Make sure reclined cradle is fully assembled, check to ensure that the side adjustment latches are closed and secure before each use.
- Before making adjustments to reclined cradle ensure that child's body is clear of any moving parts.
- To avoid injury ensure that your child is kept away when unfolding and folding this product.
- Do not let your child play with this product.
- Do not allow child to stand in reclined cradle.
- Do not use the reclined cradle once your child can sit unaided.
- The use of this reclined cradle is recommended for 1 child only.
- Never use this product on an elevated surface, (e.g. a table).
- Place the reclined cradle on a firm horizontal and rough surface.
- Do not allow any children, animals or other object to be placed under or near the chair while child is seated in the reclined cradle.
- Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires, etc. in the near vicinity of the reclined cradle.
- Avoid hot liquids, power cables and other possible dangers may come within range of a child.
- Do not place items with a string around child's neck (pacifier cords, hood strings etc).
- Do not allow strings to hang into reclined cradle, including blind cords or suspended toys other than what is eventually provided with this product.

## WARNING

Please keep all packaging material away from baby's and children, to prevent suffocation.

- Do not move or lift this product with the baby inside it.
- Never let the child sleep in this product. This product does not replace a cot or a crib. Should the child fall asleep, then it should be placed in a suitable cot or crib.
- Do not use the reclined cradle if any components are broken or missing.
- Replace any damaged parts immediately.
- Do not use accessories or replacement parts other than the ones recommended by the manufacturer.
- Never put reclined cradle near steps or stairs.
- Never use the toy bar to carry the reclined cradle.
- Adult assembly of toy bar and toys required.
- Assure the toy bar is correctly assembled on both sides of the reclined cradle.
- To avoid injury, please remove the toys when the child is able to grab them with hands and/or feet.

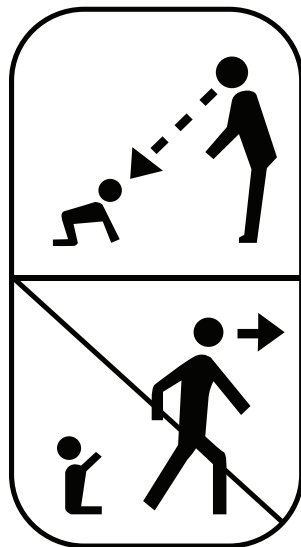


**Never leave child unattended**

## Check if following spare parts are in the box:

- Bouncer with inlay
- Toy bar with 3 pcs. of soft toys

Note that the fabric patterns, colour pictures and stroller accessories on this product in this instruction manual may vary from that of the product that you have purchased. If one or more of the above mentioned spare parts are missing or broken, please contact the store where you bought the product, before using.

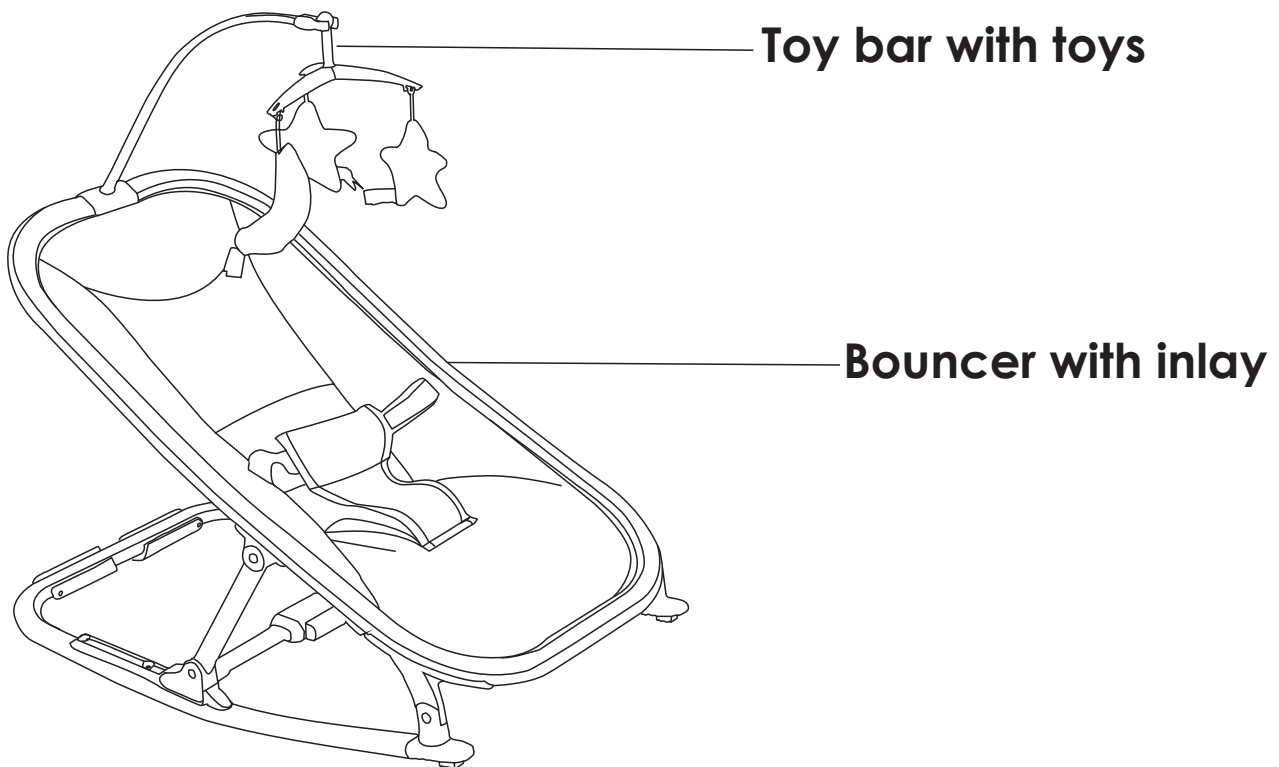

# Assembly Instructions

## Opening the baby bouncer

Open the carton to take out the bouncer, hold the leg frame and lift the backrest frame directly until you hear a "click". (Fig.1-2)



fig 1



fig 2

## Assembling the toy bar

Place the toy bar into the plastic hole on frame as the picture showed (Fig.3-4)  
Warning: Do not move or lift this product with the baby inside it.



fig 3



fig 4

### Adjusting the backrest

There are 3 position backrest.

Push the button 1 to left side and press the button 2 at the same time to low down the backrest as you desired. (Fig.5)

Hold the leg fame and lift the backrest fame to upwards the backrest. (Fig.6)



fig 5



fig 6

### Swinging movement of the baby bouncer

Low down the support part to let it bounce up and down. Do remember to lift up the support wire before rocking. (Fig.7-8)



fig 7



fig 8

# Safety belt

Pass the safety belt through the crotch strap and fit the buckle in place until you hear “click” making sure that it is correctly anchored.

Adjust belt in right length to fit your child.

To open the buckle, press on the two hooks that overhang at the same time and pull on them. (Fig.9)

**WARNING:** Always use the crotch strap along with the safety belt.

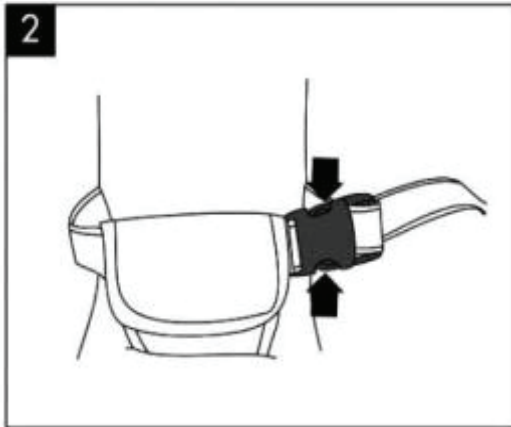


fig 9

# Folding the baby bouncer

Push the button 1 to left side and press the button 2 to low down the backrest, then press button 3 at the same downwards to fold the bouncer. (Fig.10)



fig 10



# Care and Maintenance

To prolong the life of your nursery product, keep it clean and do not leave in the direct sunlight for extended periods of time.

Do not use abrasive cleaners. Do not soak in water.

Removable fabric covers and trims may be cleaned using warm water with a household soap or a mild detergent. Allow it to dry fully, preferably away from direct sunlight.

Always store your product in a clean dry place.

Do not leave in the boot of car.

Avoid exposure to salt water, as this may encourage the formation of rust. If bouncer is used in this environment completely clean your bouncer afterward to remove sand and salt from mechanisms.

Should parts become stiff, squeak or difficult to operate ensure dirt is not the cause.

When storing bouncer, never stack other items on top of it, this may damage the bouncer.

Do not dry clean or use bleach.

Do not machine wash, tumble or spin dry. Inlay and chair may be cleaned using a damp sponge with soap or mild detergent. Allow it to dry completely before folding or storing it away.

In some climates the parts may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.

Always check parts regularly for tightness of screws, nuts and other fasteners, tighten if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts.

Use only parts and accessories approved by the supplier.



# Warranty Against Defects


All Love N Care products are guaranteed for twelve months from the date of purchase. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. This covers against faults which develop through faulty materials and workmanship.

Misuse, accidental damages, normal wear and tear or neglect are not covered. If a fault becomes apparent, please return the item to the store of purchase with your receipt. You must inform the store what the defect is. We will then arrange for its repair or it will be assessed for replacement as expediently as possible. The benefits of this warranty are in addition to other right and remedies under the law in relation to the goods or services to which this warranty relates. If you are unable to return the item to the store of purchase, you can contact Love N Care on free call 1300 732 599.

Where you send the product directly to the manufacturer then you may be liable for the costs of transportation to and from Love N Care. Love N Care will meet the reasonable expenses incurred by a consumer in making a warranty claim. You can claim expenses incurred in making a claim by contacting our customer service team on 1300 732 599 or by email at [info@lovenecare.com.au](mailto:info@lovenecare.com.au)

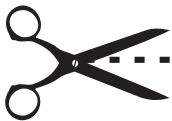

## 12 MONTH WARRANTY

Please fill in this section to validate your warranty and send to: **297 Canterbury Rd Revesby NSW 2212**

Name: \_\_\_\_\_

Store Purchased: \_\_\_\_\_

Address: \_\_\_\_\_

Date Purchased: \_\_\_\_\_

Product Name/No. \_\_\_\_\_



# Contact Us

## Head Office:

Love N Care Pty Ltd.  
297-299 Canterbury Rd, Revesby

NSW 2212 Australia

Contact No: 02 9774 4655

Email: [info@lovencare.au](mailto:info@lovencare.au)

Website: [www.lovencare.au](http://www.lovencare.au)

# love<sup>n</sup>care

Let's be friends!

 <http://www.facebook.com/lovencare1>

 [http://twitter.com/love\\_ncare](http://twitter.com/love_ncare)

 100% AUSTRALIAN OWNED SINCE 1984