 


love^hcare™

AUTO ROCKER


BP 953

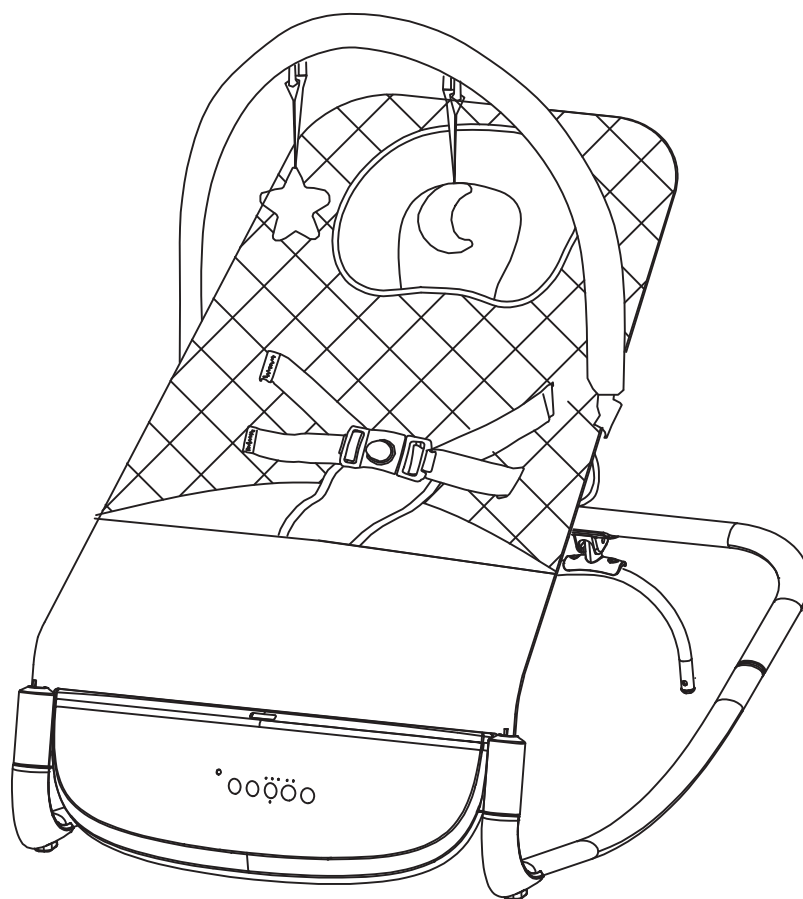

**IMPORTANT! READ AND FOLLOW THESE INSTRUCTIONS CAREFULLY
AND KEEP FOR FUTURE REFERENCE**



Congratulations on your purchase of the Auto Rocker. This product has been designed and developed with safety, comfort and functionality in mind. Please take the time to read this manual carefully before using this product and keep it in a safe place for future reference

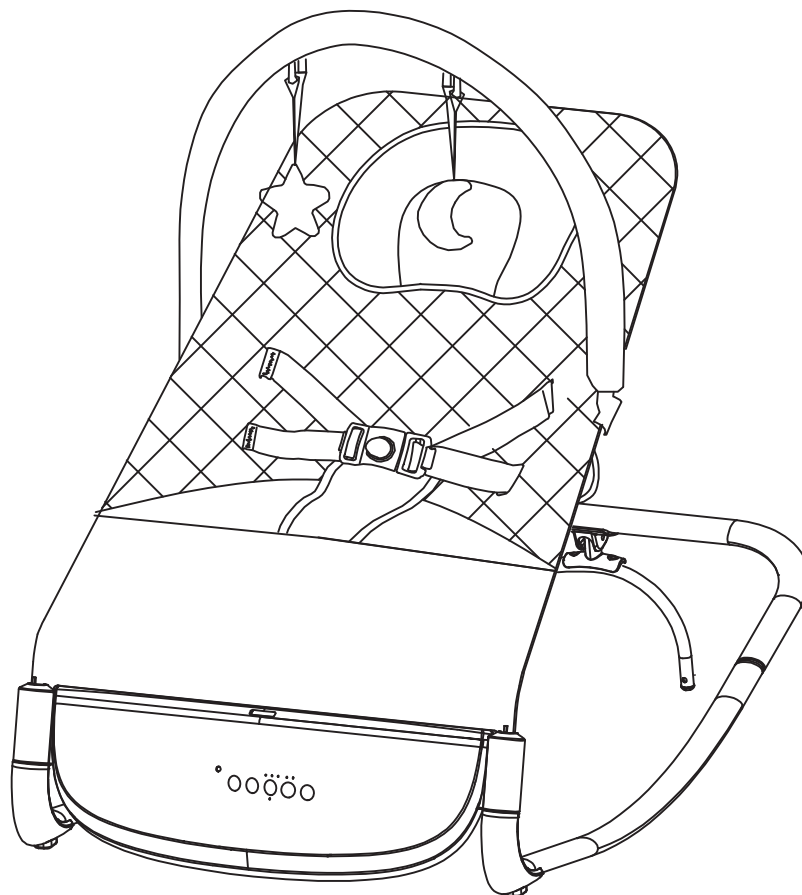

WARNING

- Read all instructions before use of the infant swing seat.
- Keep instructions for future use.
- Do not use this infant swing seat if it is damaged or broken.

FALL and STRANGULATION HAZARDS:

Infants have suffered head injuries falling from swings and have been strangled in straps.

- **Always** use restraints. Adjust to fit snugly.
- **STOP** using product when infant attempts to climb out (approximately 9 months) or the infant's weight reach to 12kg (26lbs), whichever comes first.
- Stay near and watch baby during use. This product is not safe for sleep or unsupervised use. If baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface such as a crib or bassinet.

SUFFOCATION HAZARDS:

Young infants have limited head and neck control. If the seat is too upright, infant's head can drop forward and compress the airway.

- **Always** keep swing seat fully reclined until infant is at least 4 months old AND can hold up head without help.
- **Always** place swing on floor. Never use on any elevated surface.

NEVER add soft bedding or padding.

- CAUTION! NEVER LEAVE THE CHILD UNATTENDED!
- CAUTION! THIS PRODUCT IS NOT INTENDED FOR LONG PERIODS OF USE AND SLEEP.
- CAUTION! NEVER LEAVE THIS PRODUCT ON ELEVATED, SLOPED OR SOFT SURFACES!
- CAUTION! ALWAYS USE THE SAFETY HARNESS!
- CAUTION! TO AVOID INJURY, MAKE SURE THAT THE CHILD IS AT SAFE DISTANCE WHILE MAKING ADJUSTMENTS, UNFOLDING, FOLDING AND STORING THE PRODUCT!
- CAUTION! DO NOT MOVE THE PRODUCT OR LIFT THE PRODUCT WHILE THERE IS A CHILD IN IT!
- CAUTION! DO NOT ALLOW CHILDREN PLAY WITH THIS PRODUCT!
- CAUTION! SET THE SOUND VOLUME LOW TO AVOID DAMAGE TO THE CHILD'S HEARING!
- CAUTION! KEEP AWAY FROM FIRE!

WARNING

Infant should be placed to sleep on a firm, flat surface. Place infant on their back when using this product. Do not put objects or accessories in an infant's sleep environment. Do not place this product near a blind, door, cord, strap or similar item that could become wrapped around an infant's neck. Do not use this product for infant sleep. Do not leave infant in this product unsupervised.

WARNING

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

 **WARNING:** Changes or modification to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Do not use the product for more than one child!
- Do not use the product if there are missing or damaged parts!
- Do not use spare parts or other components, which are not supplied by Love N Care. Love N Care revokes all responsibility in case you have used spare parts different from the approved type or from the recommended by Love N Care.
- Do not make changes or modifications to the structure! If necessary, contact the retailer or an authorized service for advice and repair.
- Do not tie strings or cords to the product to avoid risk of suffocation!
- Use the product only for its purpose.
- Do not allow presence of children under 3 years before assembly is complete to avoid their access to small or disassembled parts!
- Keep the nylon package away from children to avoid risk of suffocation!
- When the product is connected to a music player, ensure that the volume of the music player is set to a low value.
- Transformers used with the product are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they shall not be used;
- The product shall only be used with the recommended transformer.

WARNING: check this product regularly before using it, and do not use it if any part is loose or missing or if there are any signs of damage. Do not substitute parts. Contact the manufacturer if replacement parts or additional instructions are needed

WARNING :

Changes or modification to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1 this device may not cause harmful interference, and
- 2 this device must accept any interference received, including interference that may cause undesired operation

Battery Information

The rocker requires (4) size AA/LR6 (1.5V) alkaline batteries (Not included) .


CAUTION: Follow the battery guidelines in this section. Otherwise, battery life may be shortened or the batteries may leak or rupture.

To prevent battery leaks, which can burn skin and eyes:

- Remove batteries when storing product for a long time.
- Dispose of used batteries immediately.
- Always replace the entire set of batteries at one time.
- Never mix old and new batteries, or batteries of different brands or types.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Always keep batteries away from children.
- Only batteries of the same or equivalent type as recommended are to be used.
- Install the batteries so that the polarity of each one matches the markings in the battery compartment.
- Do not short-circuit the batteries.
- Do not store batteries in areas that have extreme temperatures (such as attics, garages, or automobiles).
- Remove exhausted batteries from the battery compartment.
- Please use the correct disposal method for batteries.
- Weak batteries cause erratic product operation, including distorted sound, dimming or failed light and slow or nonworking motorized parts. Because each electrical component requires a different operating voltage, replace the batteries when any function fails to operate.

Do not dispose of product or batteries in fire, batteries may explode or leak.

This symbol indicates that the product is not to be disposed of in household waste as batteries contain substances that can be damaging to the environment and health. Contact local authority for recycling & collection information.

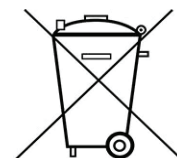

1.Product Information

1.1 Specifications

Model	BP 953
Product Name	Auto Rocker
Max Dimensions	725 x 452 x 580mm
Standard Load Capacity	• Auto rocker mode:0-6months/20lb (9kg) • ManualRocker mode:0-2.5years/40lb (18kg) • Stationary seat:0-40lb (18kg)
Net Weight	Approx. 2.8 kg
Applicable Age	0m-2.5Y
Main Materials	Plastic, Steel, Polyester Fiber

1.2 Features

- 3 - speed automatic rocking
- 3 - position seat backrest adjustment
- 8 built - in soothing tracks (3 nature sounds & 5 gentle melodies)
- Convenient capacitive touch controls
- Motion sensor activation
- 30/60 - minute auto timer

1.3 Power Options

- Batteries: 4 x AA (1.5V, not included).
- Adapter: 5V DC, Type-C connector . Compatible with 100-240V AC wall outlets.

Powered by adapter


- Transformers used with the product are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they shall not be used.
- The product shall only be used with the recommended transformer.

IMPORTANT


- Adult assembly required.
- Please read all instructions before assembly and use of the product.
- Care should be taken in unpacking and assembly.
- Examine product frequently for damaged, missing, or loose parts.
- DO NOT use if any parts are missing, damaged, or broken.
- This product does not replace a cot or a crib. Should the child fall asleep, then it should be placed in a suitable cot or crib.

Parts List


1. Backrest support Tube
2. Metal Seat Frame
3. Toy Bar
4. Control Unit
5. Front Base Tube
6. Rear Base tube
7. Pillow
8. Seat Pad
9. Carpet Stabilizer 1
10. Carpet Stabilizer 2
11. Power Adaptor

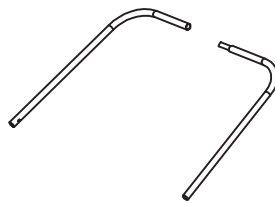


1.

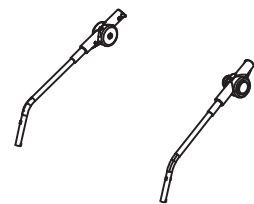


2.

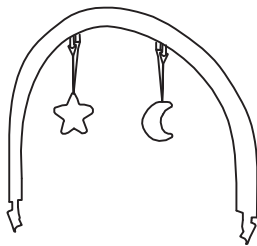


3.

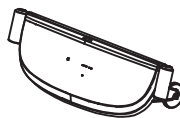

4.

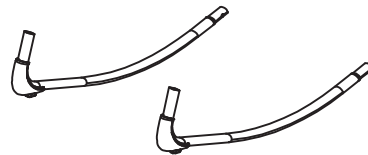


5.

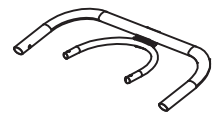


6.




7.

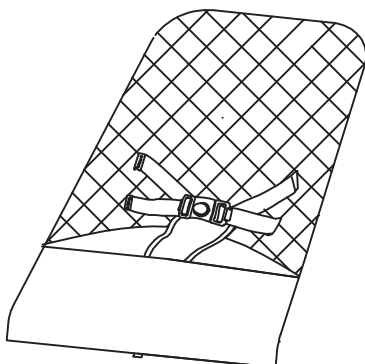


8.

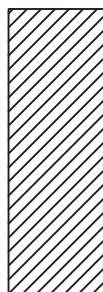

9.

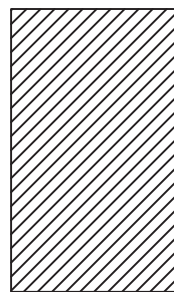

10.

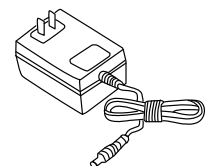


11.

Assembly Instructions

Adult Assembly is required. Please follow these steps carefully.


Step 1. Base Assembly

Place the rear base tube (6) on the ground. Insert the 2 front base tubes (5) into the rear base tube until the spring lock clicks into place. The base assembly is now complete.

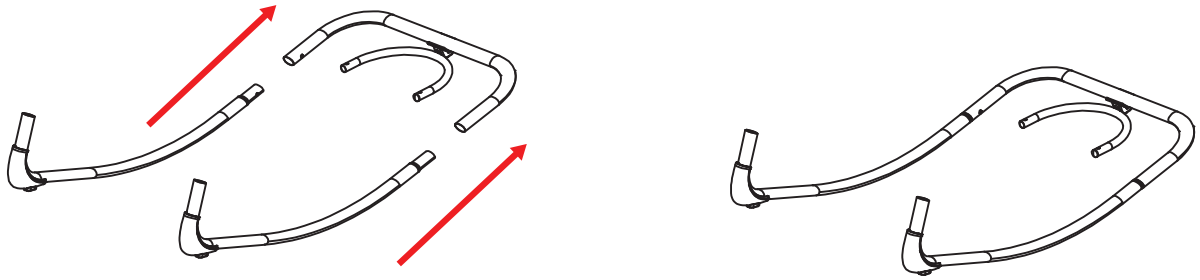


Step 2. Attaching the control Unit

Remove the Control unit (4), Lift up the Auto rocking arm located underneath the control unit.

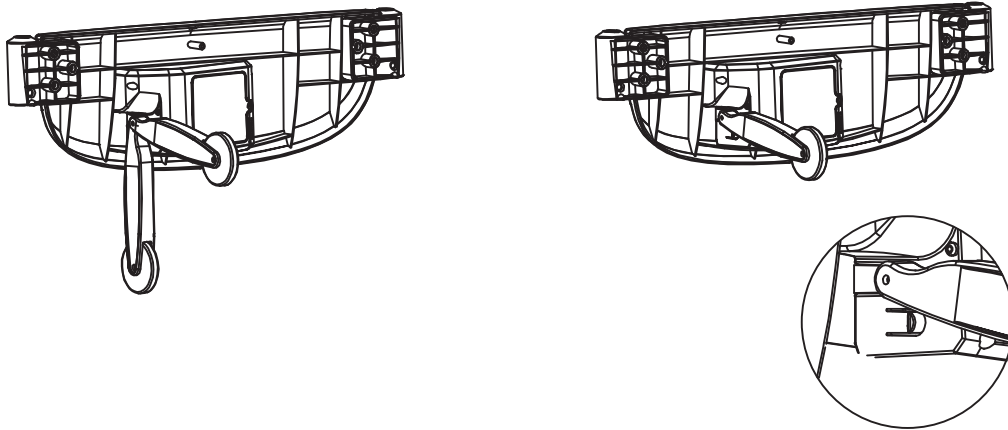


Place the assembled base on the floor, install the control unit (4) onto the base in the direction of the arrow until it clicks into place.

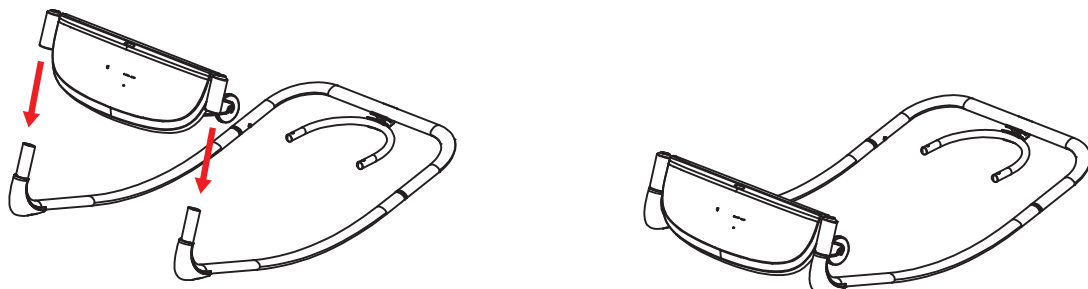


Step 3. Install the seat frame

Take the Metal seat frame (2), insert it into the slots on the control unit in the directions shown below. Ensure the protrusion on the seat frame aligns with the groove in the control units slot. Once inserted rotate the seat frame to lock it into place.

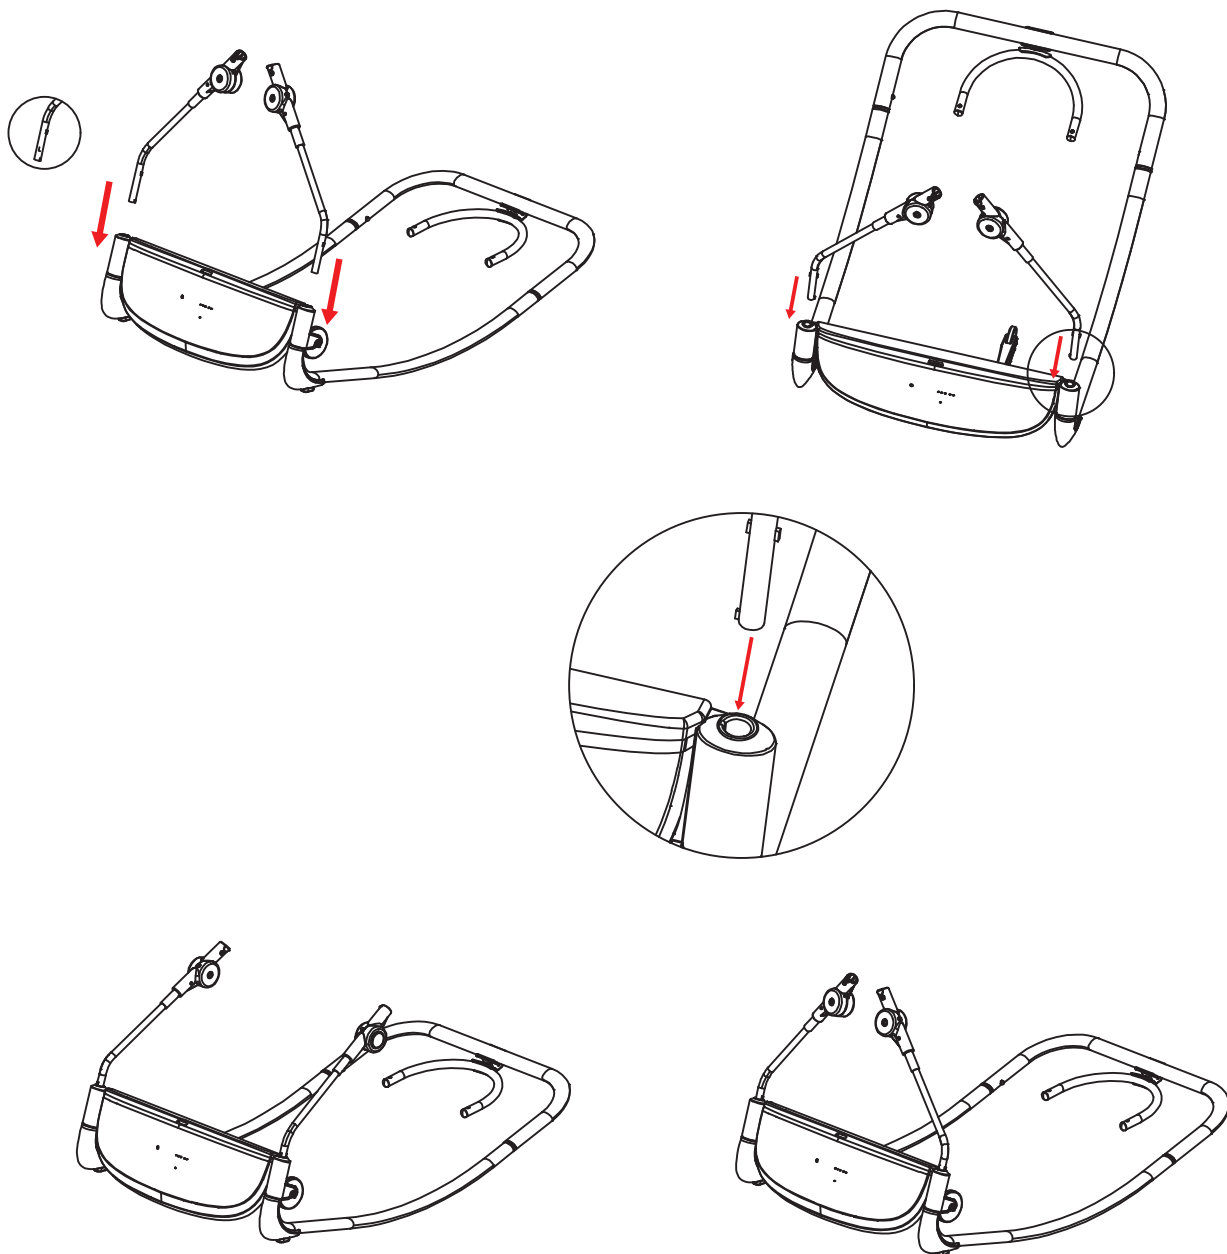


Step 4. Attaching the backrest

Connect the 2 backrest support tubes (1) together. Insert the connected tubes into the metal seat frame until the spring lock clicks.

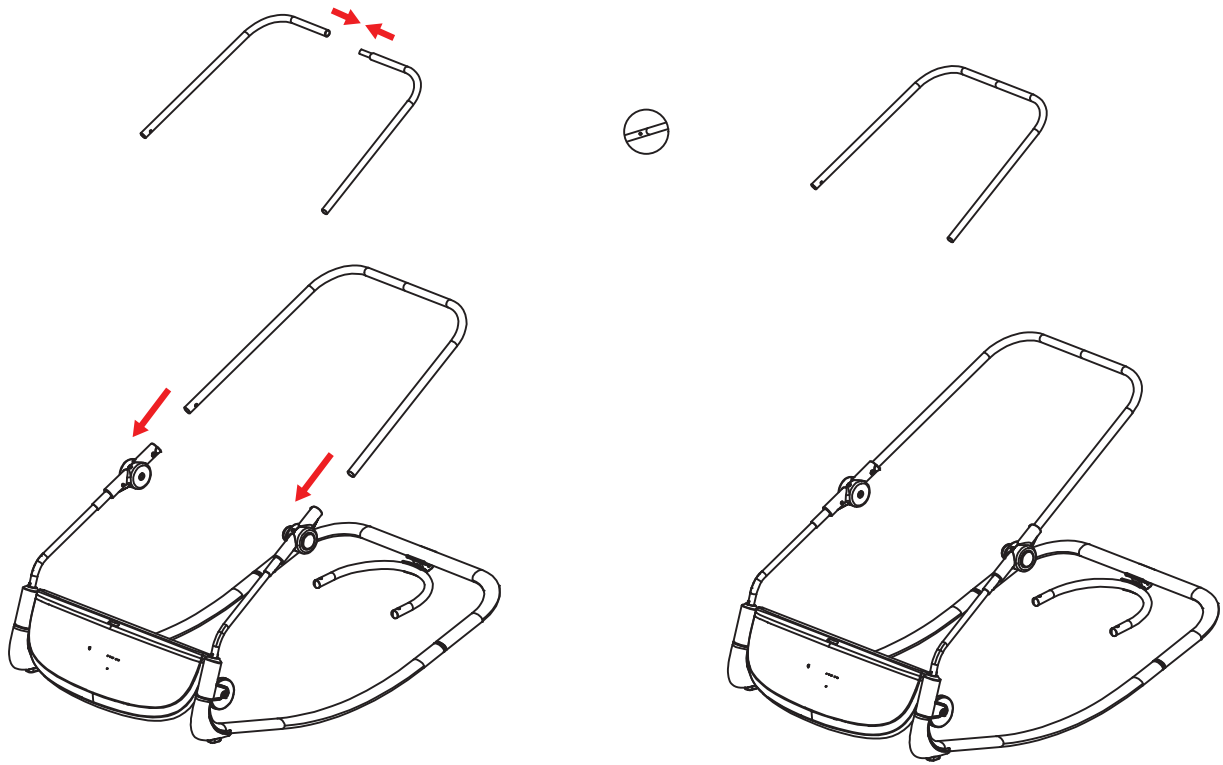

Step 5. Attaching the Seat Pad


Place the pillow (7) on the seat pad. Drape the seat pad (8) over the assembled frame. Thread the strap at the bottom of the seat pad through the opening of the control unit and hook it onto the post at the back to secure.

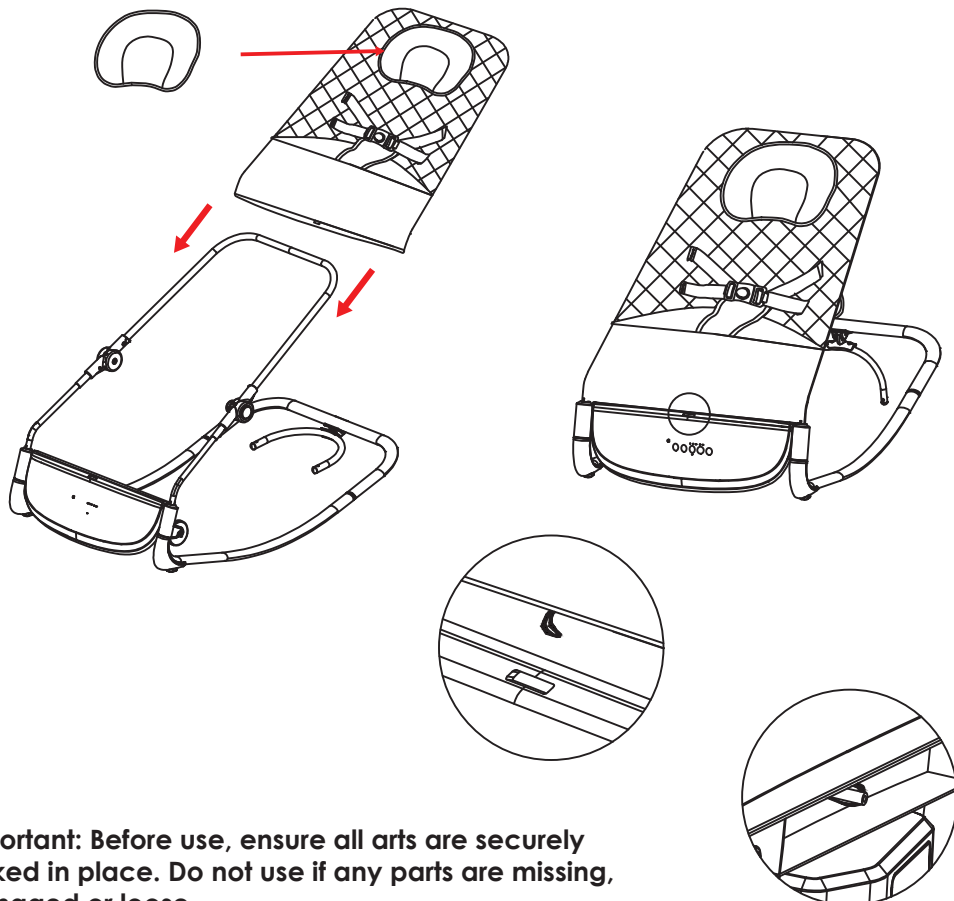

Important: Before use, ensure all parts are securely locked in place. Do not use if any parts are missing, damaged or loose.


Step 6. Attaching the Toybar to the seat

Attach the toybar (3) to the side of the seat frame.

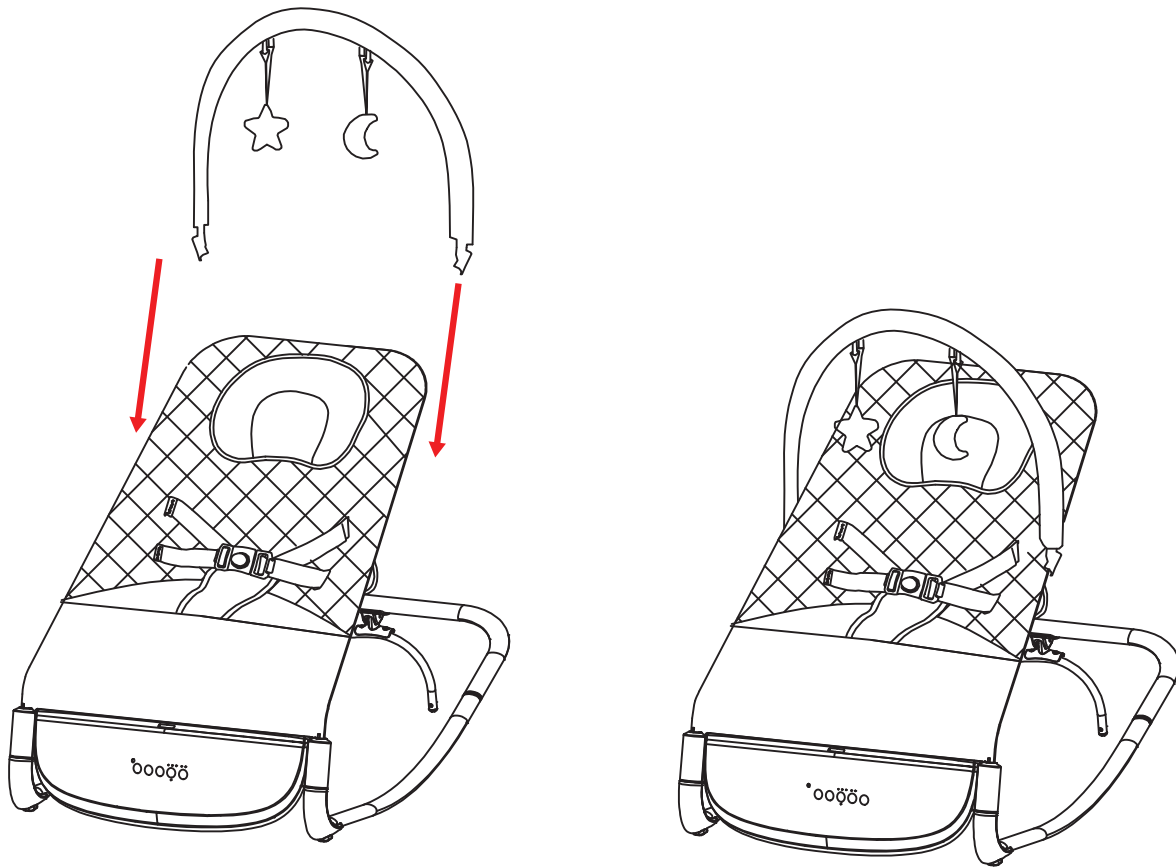

Power

Use a 5v Power adaptor (11). Plug the adaptor into a 110-240V outlet and connect the Type-C end to the port on the back of the control unit. For indoor use only.

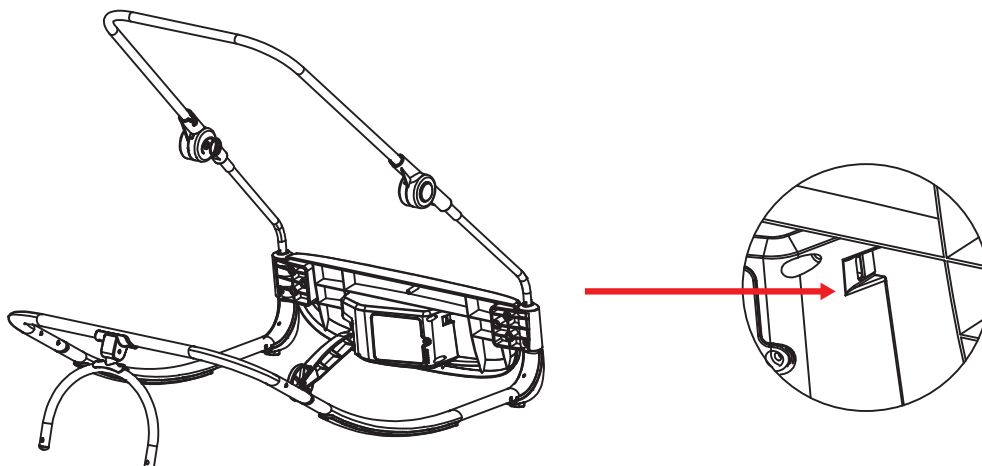


Using Batteries

Step 1: use a screwdriver to loosen and remove the screw on the battery compartment cover located on the back of the control unit.

Step 2: Install 4 AA batteries into the compartment, observing the correct polarity (+/-) as shown inside.

Step 3: Replace the cover and securely tighten the screw to complete the installation.

Remove all batteries for long-term storage to prevent leakage and damage.

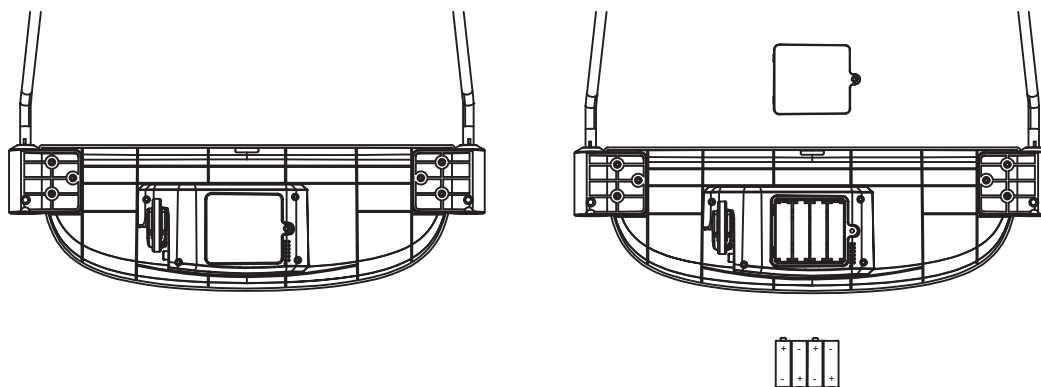


How to Use

Manual rocking Mode

Adjust the Auto rocking arm upwards until it locks into the higher position and no longer touches the floor. The kickstand remains folded up. You can rock the chair manually.



Caution/Warning: The Auto rocking mode is suitable only for children weighing up to 9kg. Please switch to manual mode if the child weighs more than 9kg.


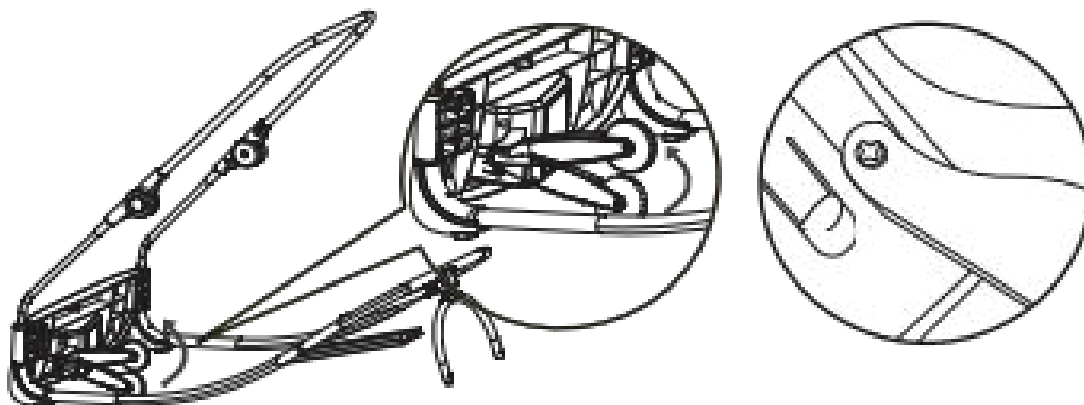


How to Use

Auto rocking Mode

Ensure the auto rocking arm is extended down to touch the floor.
Ensure the kickstand is folded up.

For shag carpet: Place the carpet stabilizer (9 and 10) (plastic board) underneath the rocker for better performance.

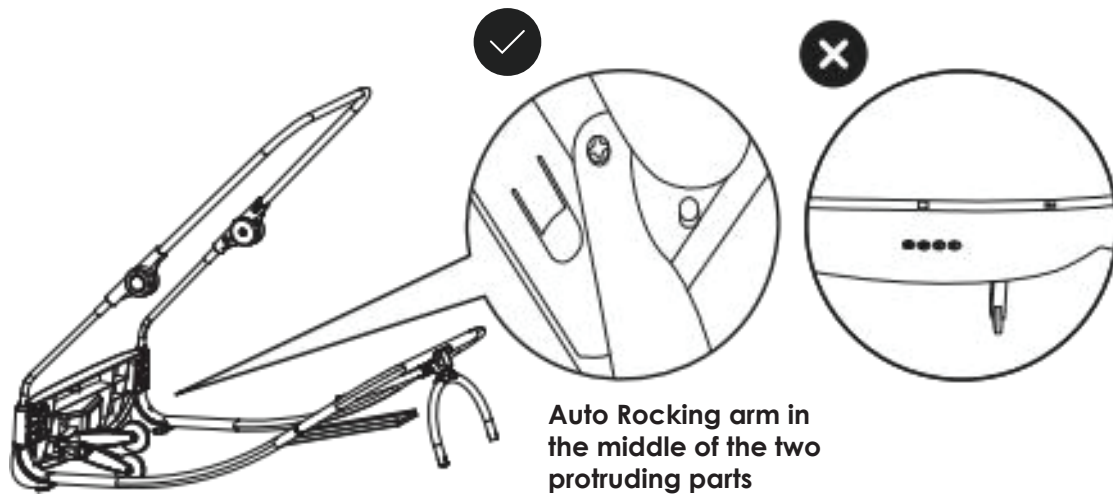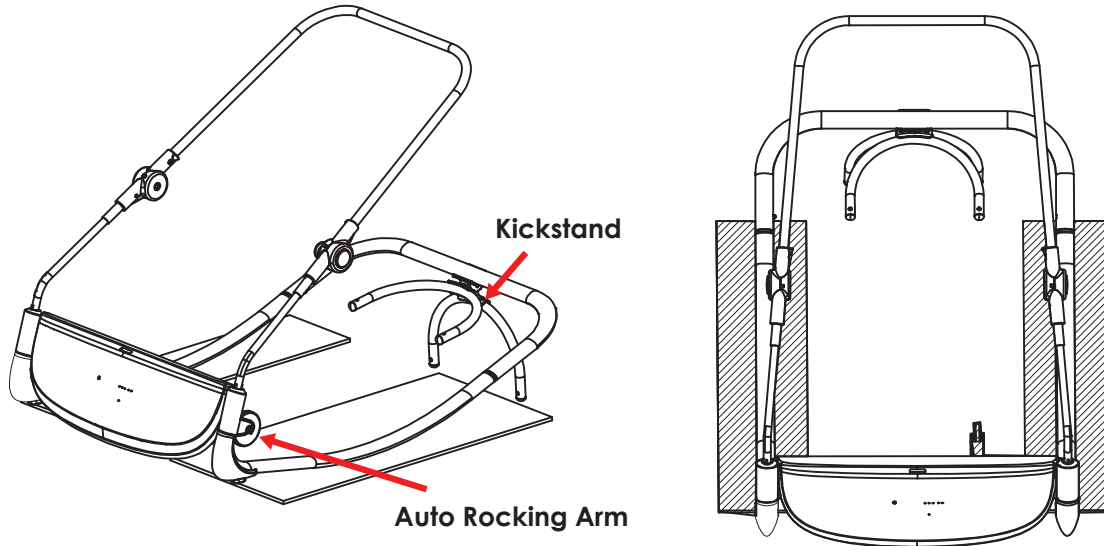


 **Caution/Warning:** Make sure to put the auto rocking arm in the right position before using the rocker.


How to Use

Stationary Mode

 Deploy the kickstand to lock the rocker in a static, non-rocking position.

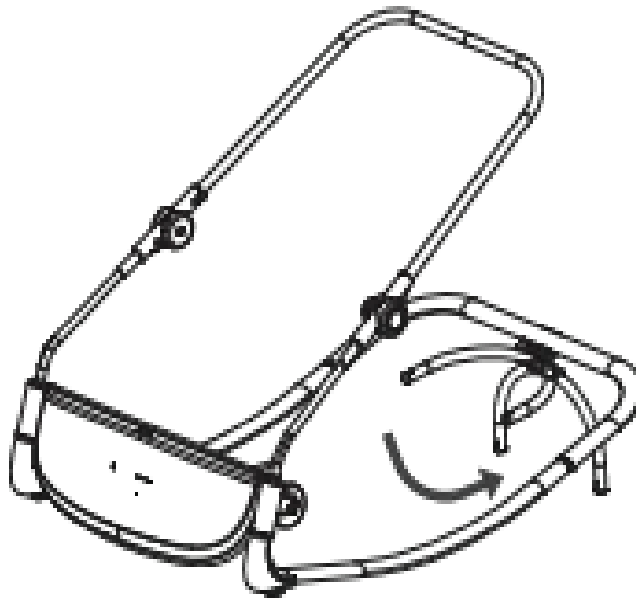

Control Panel function

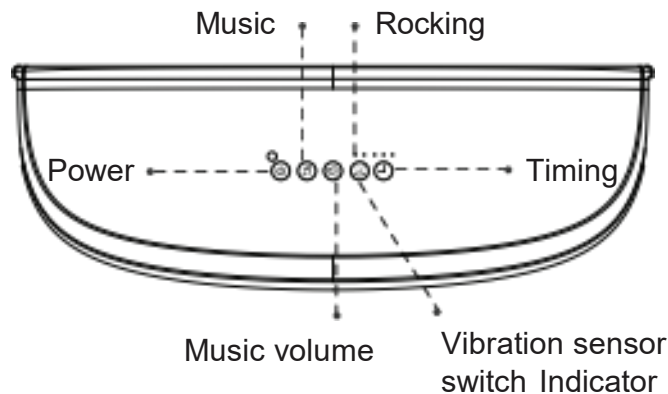


-  **Power Button** - Press to turn the unit on. You will hear a startup sound and the indicator lights will illuminate.
-  **Music** - Press to cycle through 8 soothing tracks. (3 calming nature sounds and 5 gentle music melodies)
While the music is playing press the button again to switch to the next track. Hold to turn the sound off.
-  **Music Volume** - Press to cycle through the volume levels (low > Medium > High)
-  **Rocking** - Press to start automatic rocking. There are three speed settings.
-  **Timing** - Press to set the auto-off timer (30 or 60 Minutes)

Motion Sensor





After startup, the vibration sensor function is enabled by default, and the vibration sensor indicator light remains on. At this time, when vibration is detected, the product automatically starts to rock, defaulting to the first rocking level. When rocking is manually activated, the motion control function is turned off, and the indicator light stays off

Adjusting the Backrest

Simultaneously press the adjustment buttons on both sides of the seat and move the backrest up or down. There are three recline positions

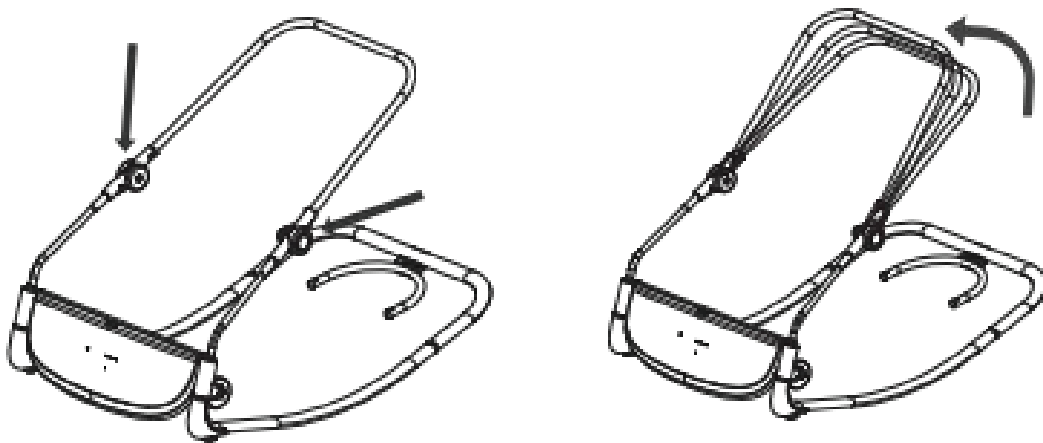

Using the Safety Harness

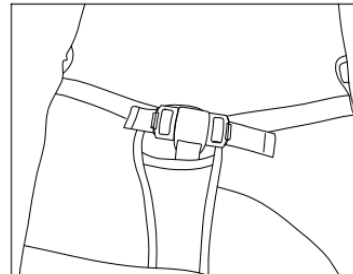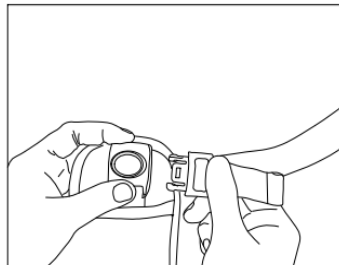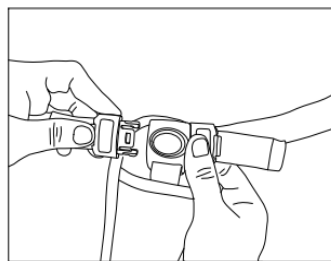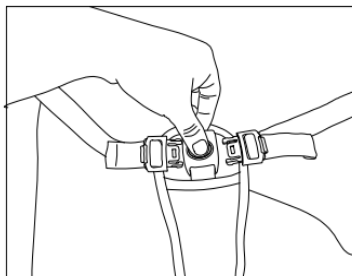

Releasing the Harness


Press the Release Button: Locate the round button in the center of the main buckle housing.

Remove the Prongs: Press the button firmly while simultaneously pulling the waist strap prongs out and away from the central buckle.

Securing the Harness

Insert the Prongs: Take the plastic prongs attached to the waist straps and align them with the slots on either side of the central buckle housing (attached to the crotch strap).

Lock in Place: Push each prong firmly into the buckle until you hear a "click," ensuring both sides are securely fastened.

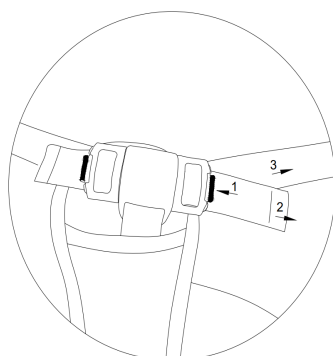

Adjusting the Strap Length

Refer to the circular diagram with the numbered arrows to adjust the fit:

To Tighten: Grip the loose tail end of the strap (indicated by Arrow 2) and pull it outward, away from the buckle.


To Loosen: Grasp the main portion of the strap (indicated by Arrow 3) and pull it back through the buckle mechanism to create more slack.

Ensure Proper Fit: Adjust both sides until the harness is snug and comfortable.

Removing the Seat Pad for cleaning

Step 1: Detach the strap from the bottom of the seat pad from the control unit.

Step 2: Grasp both sides of the seat pad and slowly pull it upward to remove it from the frame.

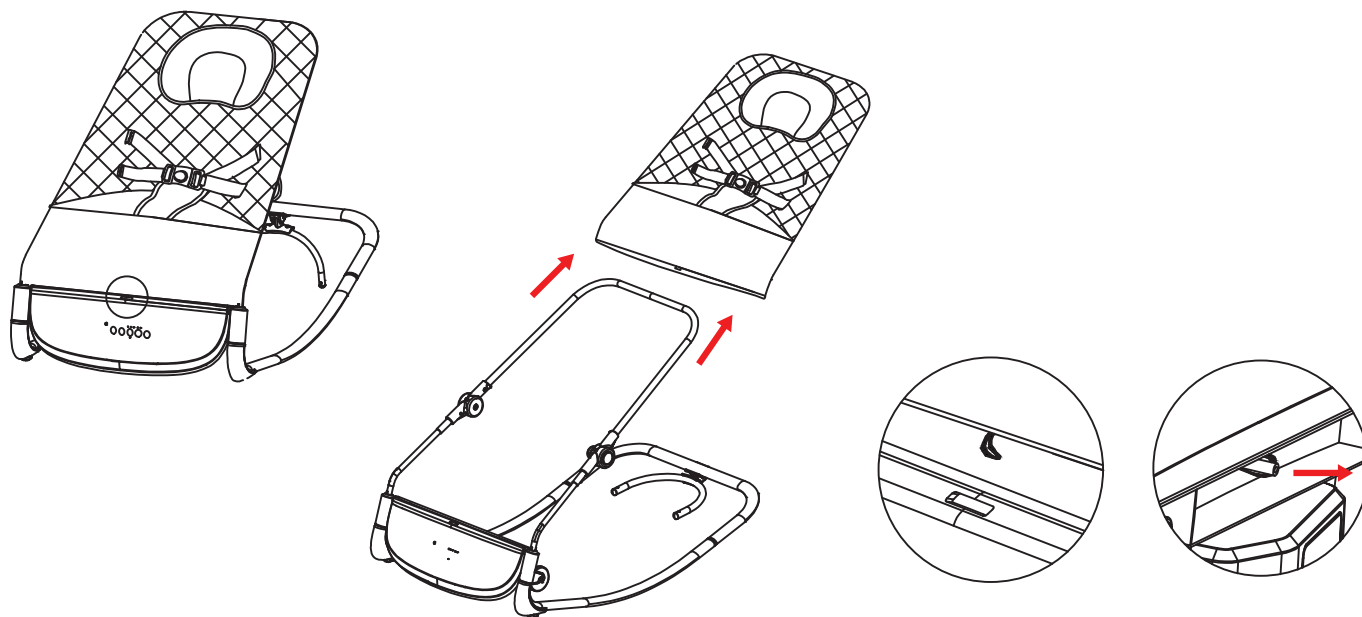

6. Care & Maintenance

6.1 Cleaning

- **Seat Pad:** Remove from the frame. Machine wash in cold water on a gentle cycle. Do not use bleach. Tumble dry on low heat.
- **Frame & Control Unit:** Wipe with a soft, clean cloth dampened with mild soap and water. Do not immerse in water.

6.2 Troubleshooting

Problem	Possible Cause & Solution
No music or rocking	Batteries are low or exhausted. Replace all 4 AA batteries.
Weak rocking	Batteries are low. Replace all 4 AA batteries.
Product does not turn on	Check battery polarity. Ensure all connectors are secure after assembly.
For long-term storage	Remove all batteries from the compartment.

7. Compliance & Contact

7.1 FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

7.2 Contact Information

Customer Service Email: info@lovencare.au

 
Imported By: Love N Care Australia Pty Ltd, 297-299 Canterbury Rd
Revesby NSW 2212

Warranty Against Defects

All Love N Care products are guaranteed for twelve months from the date of purchase. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. This covers against faults which develop through faulty materials and workmanship. Misuse, accidental damages, normal wear and tear or neglect are not covered. If a fault becomes apparent, please return the item to the store of purchase with your receipt. You must inform the store what the defect is. We will then arrange for its repair or it will be assessed for replacement as expediently as possible. The benefits of this warranty are in addition to other right and remedies under the law in relation to the goods or services to which this warranty relates.

If you are unable to return the item to the store of purchase, you can contact Love N Care on free call 1300 732 599. Where you send the product directly to the manufacturer then you may be liable for the costs of transportation to and from Love N Care.

Love N Care will meet the reasonable expenses incurred by a consumer in a making a warranty claim. You can claim expenses incurred in making a claim by contacting our customer service team on 1300 732 599 or by email at info@lovenecare.au

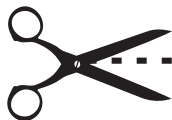

12 MONTH WARRANTY

Please fill in this section to validate your warranty and send to: **297 Canterbury Rd Revesby NSW 2212**

Name: _____

Store Purchased: _____

Address: _____

Date Purchased: _____

Product Name/No. _____

Contact Us

Head Office:

Love N Care Pty Ltd.
297-299 Canterbury Rd, Revesby
NSW 2212 Australia
Contact No: 02 9774 4655
Email: info@lovencare.au
Website: www.lovencare.au

loveⁿcare

Let's be friends!



<http://www.facebook.com/lovencare1>



http://twitter.com/love_ncare



100 % AUSTRALIAN OWNED SINCE 1984