



COT, BASSINETTE & BED SYSTEM vULU03
INSTRUCTION & ASSEMBLY MANUAL



vulu™



Congratulations on purchasing your new vulu cot & bassinette system.

In under an hour you should be able to assemble your new cot and it will be ready to meet your beautiful child :)




BASSINET WARNING

Safety guidelines and instructions must always be followed before making use of this product, please retain these instructions for future reference.

This Bassinet has been designed for a child up to 9kg or until the child can sit up unassisted.

RECOMMENDED MATTRESS SIZE: This bassinet has been manufactured for use with a mattress which measures 500mm wide by 710mm long and 50mm in thickness.

The width and length are specific because it is important that the gaps between the mattress and the sides and ends of the cot will not exceed 40mm. This is to minimize the risk of a child's limb becoming caught in the gap. The thickness of the mattress has been specified to ensure that the depth of the bassinet is greater than 500mm with the mattress base in the lower position to minimise the risk of a child climbing or falling out of the cot.

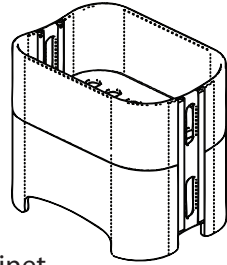

WARNING TO PREVENT FALLS, THE MATTRESS BASE OF THIS COT SHOULD BE ADJUSTED TO THE LOWEST POSITION BEFORE THE CHILD CAN SIT UP.

The manufacturers assembly instructions must be followed in detail to ensure all the safety features of the bassinet are not compromised.

Please ensure that the bassinet is placed at a reasonable distance from curtains, blinds, heaters and power points.

Please keep medication, string, elastic, small toys or small items, such as money out of reach from any position in the bassinet.

Discontinue using the bassinet if any parts are damaged or missing.

WARNING: TO PREVENT FALLS, THE MAXIMUM MATTRESS THICKNESS SHOULD NOT EXCEED 50mm.


Ensure that proper ventilation is maintained in and around the bassinet by limiting pillows, toys etc...

Never add a mattress, pillow, comforter or padding.

To reduce the risk of SIDS, pediatricians recommend that infants are placed on their backs to sleep. (unless advised by physician otherwise)



COT WARNING

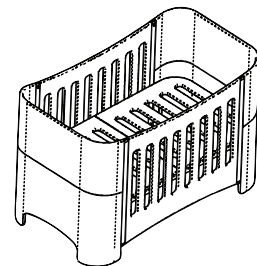

Safety guidelines and instructions must always be followed before making use of this product, please retain these instructions for future reference.

This product complies with product standard:

AS/NZS 2172:2010 Cots for household use - Safety Requirements

This cot has been designed for a child up to 25kg

Do not leave your child unattended when the dropside is in the lower position

RECOMMENDED MATTRESS SIZE: This cot has been manufactured for use with a mattress which measure 710mm wide by 1310mm long and 100mm in thickness.

The width and length are specific because it is important that the gaps between the mattress and the sides and ends of the cot will not exceed 40mm. This is to minimize the risk of a child's limb becoming caught in the gap. The thickness of the mattress has been specified to ensure that the depth of the cot is greater than 500mm with the mattress base in the lower position to minimise the risk of a child climbing or falling out of the cot. **Use only Love N Care mattress as it is made specifically for this cot.**

WARNING TO PREVENT FALLS, THE MATTRESS BASE OF THIS COT SHOULD BE ADJUSTED TO THE LOWEST POSITION BEFORE THE CHILD CAN SIT UP.

The manufacturer's assembly instructions must be followed in detail to ensure all the safety features of the cot are not compromised

Please keep medication, string, elastic, small toys or small items, such as money out of reach from any position in the cot.

Discontinue using the cot if any parts are damaged or missing.

Please ensure that the cot is placed at a reasonable distance from curtains, blinds, heaters and power points.

WARNING: TO PREVENT FALLS, THE MAXIMUM MATTRESS THICKNESS SHOULD NOT EXCEED 100mm.



CARE AND MAINTENANCE

ALL VULU PRODUCTS HAVE ONE YEAR WARRANTY FROM THE DATE OF PURCHASE.

IT IS RECOMMENDED TO REGULARLY INSPECT AND MAINTAIN MOVEMENT OF LOCKING DEVICES AND SECURITY OF ESSENTIAL COMPONENTS.

REGULARLY CHECK ALL PARTS FOR WEAR AND TEAR.


YOUR FURNITURE MAY BE CLEANED BY WIPING WITH A DAMP CLOTH AND DRYING WITH A SOFT CLEAN CLOTH.

DO NOT USE ABRASIVES, BLEACH, ALCOHOL OR AMMONIA-BASED HOUSEHOLD POLISHES.

TAKE CARE WHEN HANDLING OR MOVING THE FURNITURE. CARELESS HANDLING MAY CAUSE DAMAGE.

CHECK THE COTS SCREWS AND LOCKS TO MAKE SURE THEY ARE ALL KEPT IN GOOD WORKING ORDER.

IF ANY OF THE PARTS ARE MISSING OR BROKEN YOU SHOULD CONTACT THE MANUFACTURER AND DISCONTINUE USING THE COT UNTIL THEY ARE REPLACED.

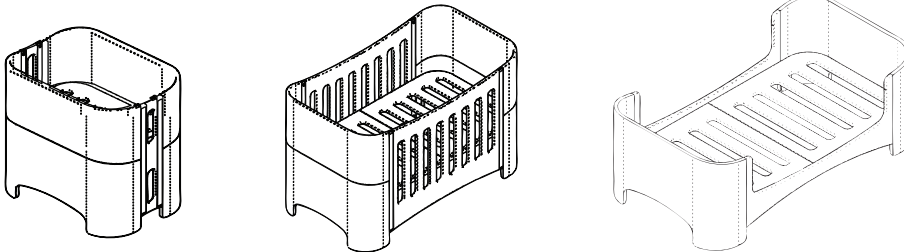

Manufactured By:

love^hncareTM

LOVE N CARE PTY LTD

EMAIL: info@lovencare.com.au

WEB: www.lovencare.com.au

PHONE: 1300 732 599

FAX: 02 9774 4633



vuluTM WARRANTY AGAINST DEFECTS

ALL LOVE N CARE/VULU PRODUCTS ARE GUARANTEED FOR TWELVE MONTHS FROM THE DATE OF PURCHASE.

OUR GOODS COME WITH GUARANTEES THAT CANNOT BE EXCLUDED UNDER THE AUSTRALIAN CONSUMER LAW. YOU ARE ENTITLED TO A REPLACEMENT OR REFUND FOR A MAJOR FAILURE AND FOR COMPENSATION FOR ANY OTHER REASONABLY FORSEEABLE LOSS OR DAMAGE. YOU ARE ALSO ENTITLED TO HAVE THE GOODS REPAIRED OR REPLACED IF THE GOODS FAIL TO BE OF ACCEPTABLE QUALITY AND THE FAILURE DOES NOT AMOUNT TO A MAJOR FAILURE.

THIS COVERS AGAINST FAULTS WHICH DEVELOP THROUGH FAULTY MATERIALS AND WORKMANSHIP. MISUSE, ACCIDENTAL DAMAGES, NORMAL WEAR AND TEAR OR NEGLECT ARE NOT COVERED.

IF A FAULT BECOMES APPARENT, PLEASE RETURN THE ITEM TO THE STORE OF PURCHASE WITH YOUR RECEIPT. YOU MUST INFORM THE STORE WHAT THE DEFECT IS. WE WILL THEN ARRANGE FOR ITS REPAIR OR IT WILL BE ASSESSED FOR REPLACEMENT AS EXPEDIENTLY AS POSSIBLE. THE BENEFITS OF THIS WARRANTY ARE IN ADDITION TO OTHER RIGHTS AND REMEDIES UNDER THE LAW IN RELATION TO THE GOODS AND SERVICES TO WHICH THIS WARRANTY RELATES.

IF YOU ARE UNABLE TO RETURN THE ITEM TO THE STORE OF PURCHASE, YOU CAN CONTACT LOVE N CARE ON FREECALL 1300732599. WE WILL THEN ORGANISE FOR EITHER SOMEBODY TO INSPECT THE ITEM OR ARRANGE FOR A COURIER TO PICK IT UP AND RETURN IT BACK TO YOU.

FOR MORE INFORMATION PLEASE CONTACT:



loveⁿcareTM

LOVE N CARE PTY LTD
EMAIL: info@lovencare.com.au
WEB: www.lovencare.com.au
PHONE: 1300 732 599
FAX: 02 9774 4633

What would you like to build?

Bassinette



PAGES 1-8

Bassinet Assembly

Cot



PAGES 9-18


Bassinet - Cot Assembly High Pos. (9-16)
Cot Assembly Low Pos. (17-18)

Junior Bed




PAGES 19-24


Cot - Junior Bed

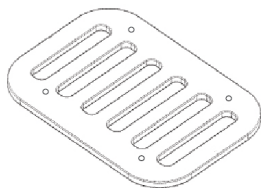

J Cot Base

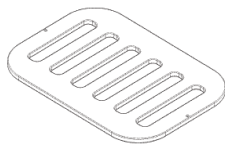

K Bassinette Base

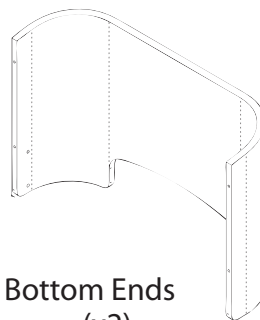


L Bottom Ends
(x2)




S Bassinette
Ends Rails
(x2)



M Cot Low Position Rail
(x2)




N Bassinet Base Rail
(x2)

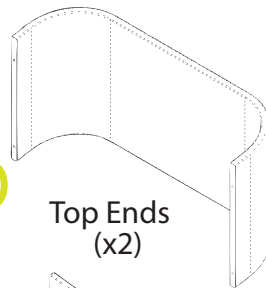


O Top Ends
(x2)




T Side Rails
(x4)



P1 Cot High Position
Adapter for High
Position
Left set (x2)
Right Set (x2)

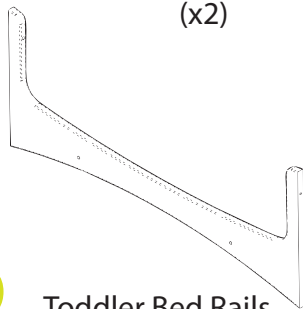

Q Toddler Bed Rails
(x2)

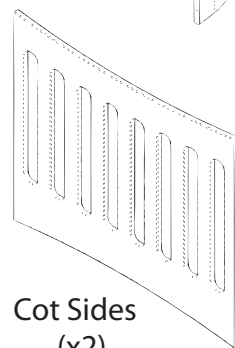

R Cot Sides
(x2)



P2 (Place P1 above
P2 when assembling)

Please check you have all assembly items



A

#5
Allen Key




B

#4
Allen Key



C

#3
Allen Key



D

Vulu Cap end
(x8)



U

M6 Bolt
(x16)



E

M6x10
Flat head
Screw
(x8)



F

M4x16
Socket Head
(x16)



G

M6x16
Socket Head
(x12)



H

M6x30
Socket Head
(x6)




I

M4x50
Screw Head
(x4)


Bassinette Assembly

Vulu Instruction Manual

Step One

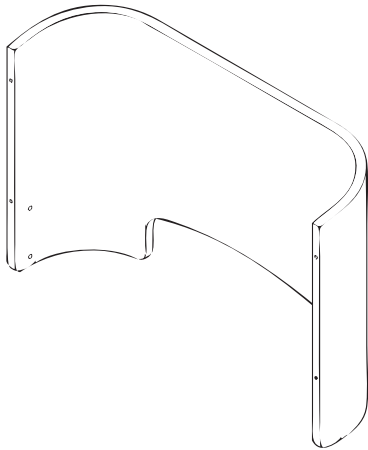

Step Two


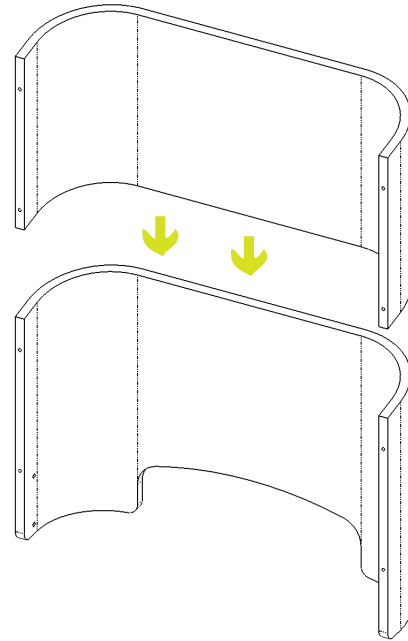


Place the top shelf on the bottom shelf

Bassinette Assembly

Step Three

Vulu Instruction Manual

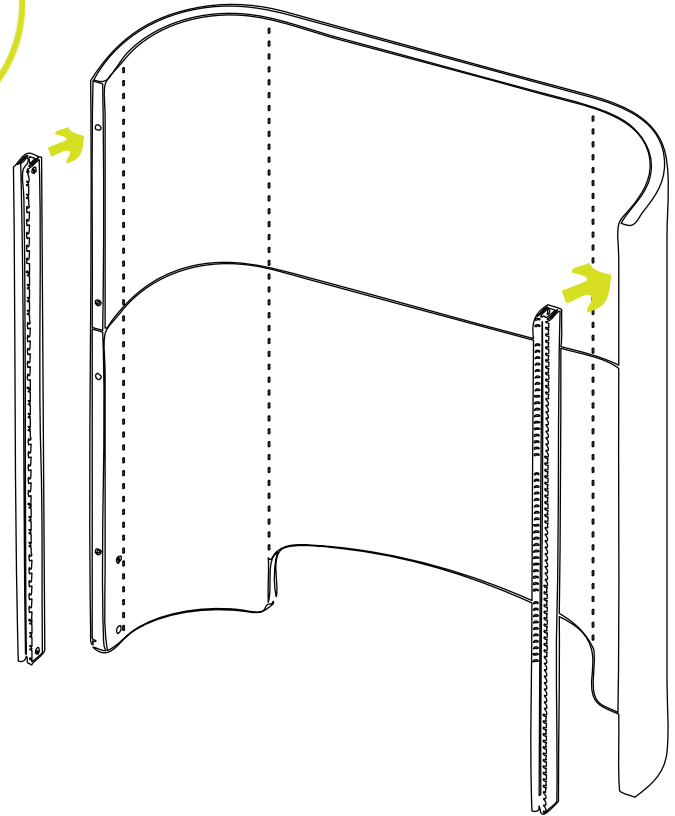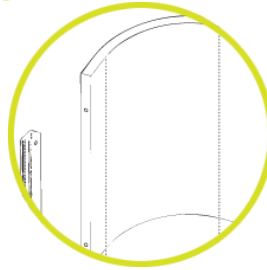


Place two of the main rails
on the edges of the shells.



Bassinette Assembly

Step Four

Vulu Instruction Manual

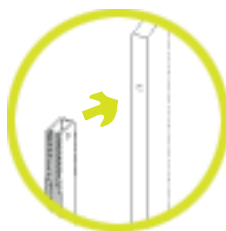


Repeat this step on the
other side

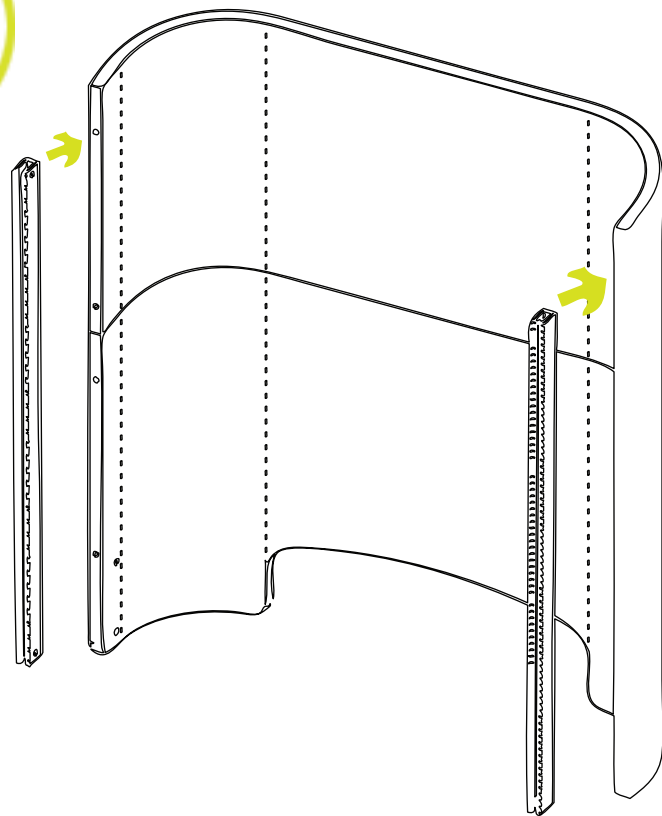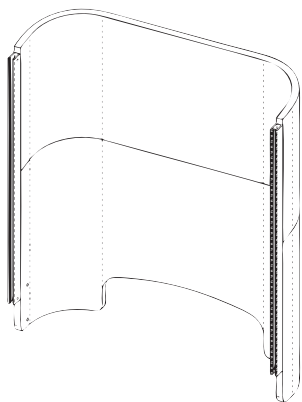


Bassinette Assembly

Step Five

Tools used in this step:

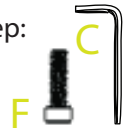

Attach the main frame to the shells using the Allen Key (C) to attach the 8 Screws (F) on the shell. Repeat for both sides.

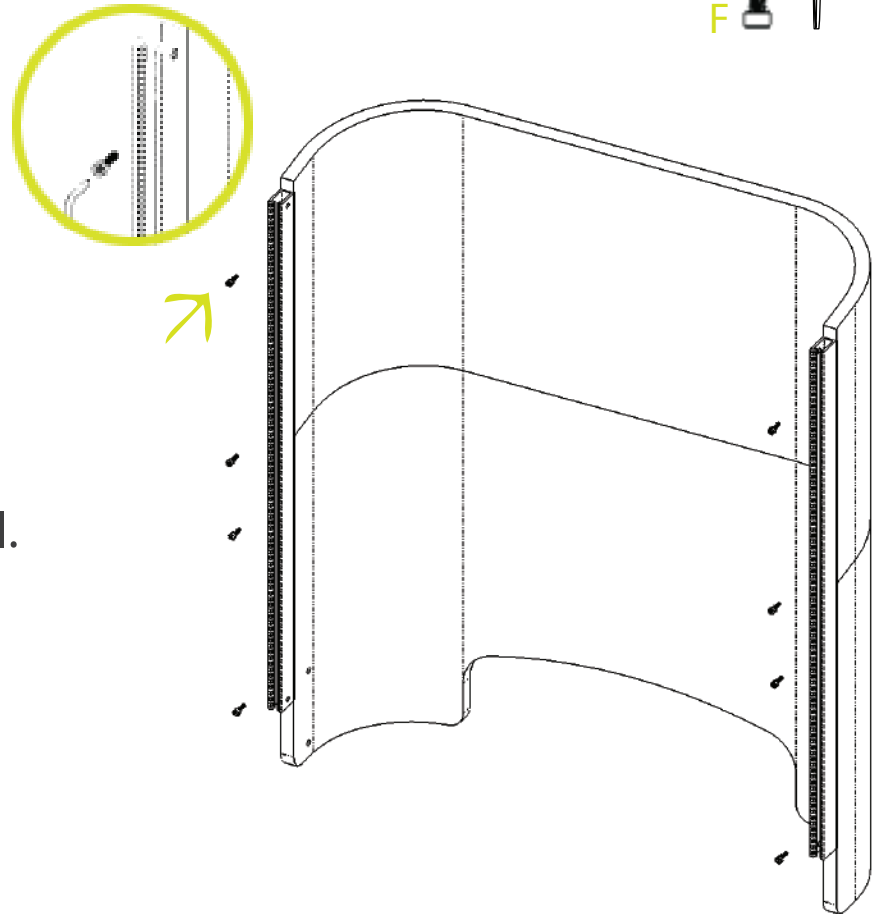


Bassinette Assembly

Step Six



Vulu Instruction Manual

Tools used in this step:



Attach the vulu cap (D) on the bottom of the main rail. You will need to use the Allen Key (B) to insert the M6 x 10 Screws (E).

Tighten the screw with the allen key. Repeat for all side rails and ends.



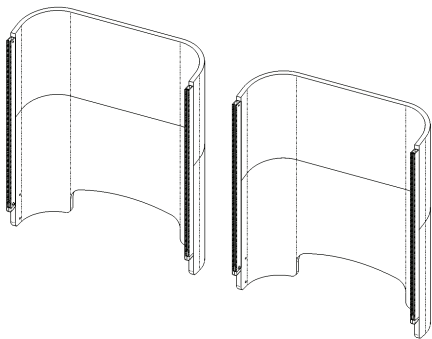
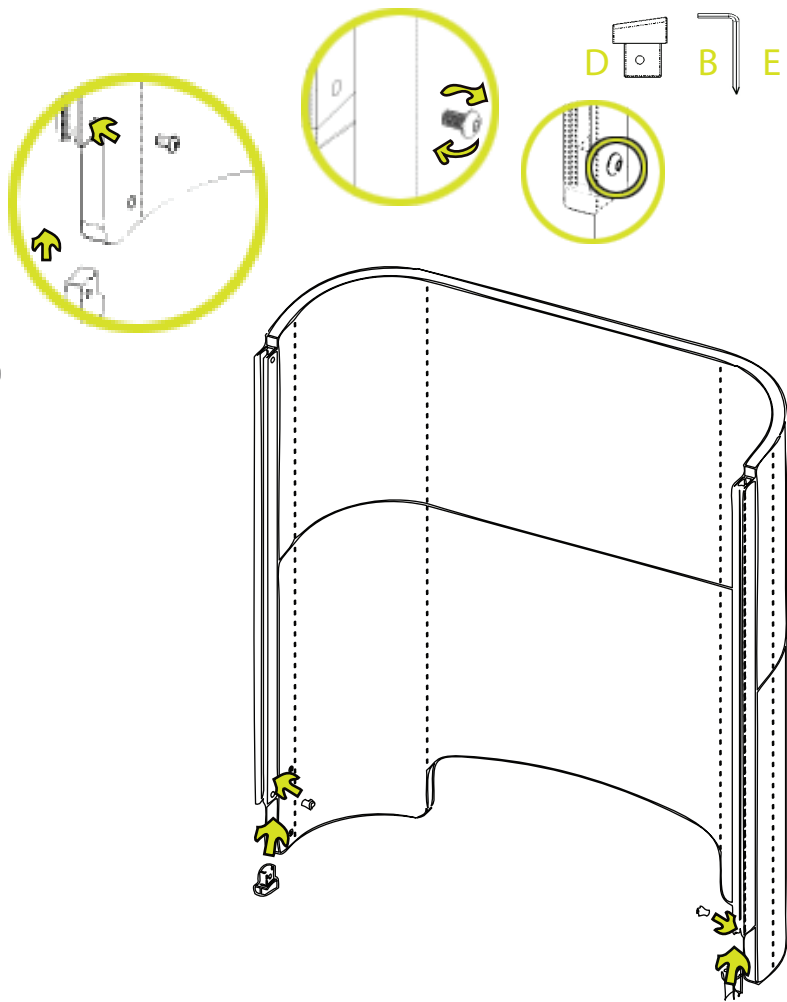


Bassinette Assembly

Step Seven

Vulu Instruction Manual

Tools used in this step:

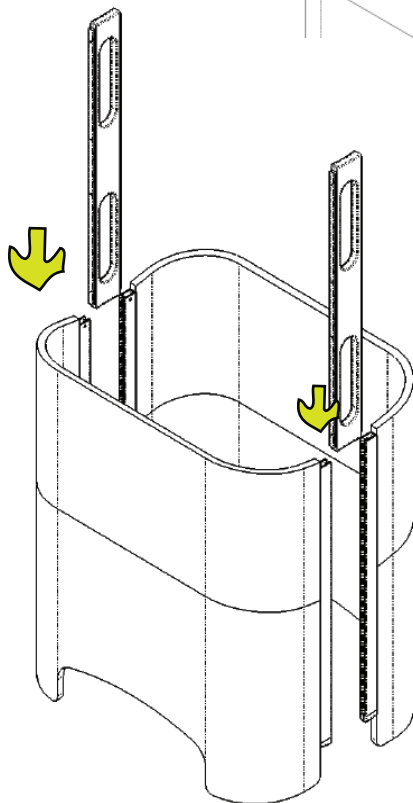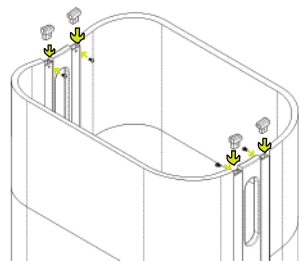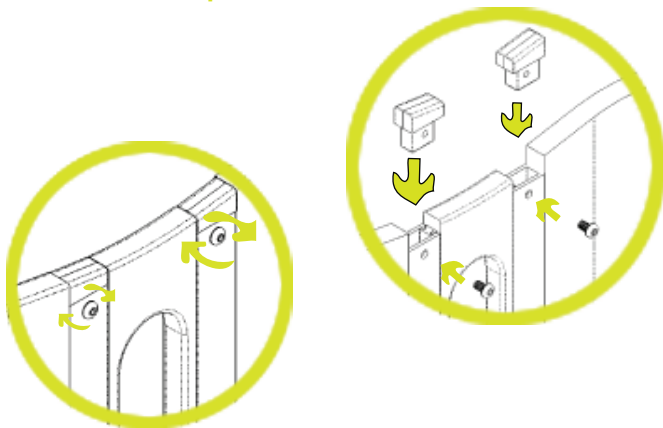


Place the two ends together so they are facing each other. Slide the bassinet sides on the bed rails located on the ends to connect the the two sides together. Place the four vulu caps (D) on the top of the main rail ends. Use the Allen Key (B) with 4 screws (E) and tighten up the vulu caps.

Bassinette Assembly


Step Eight

Tools used in this step:

G  A 



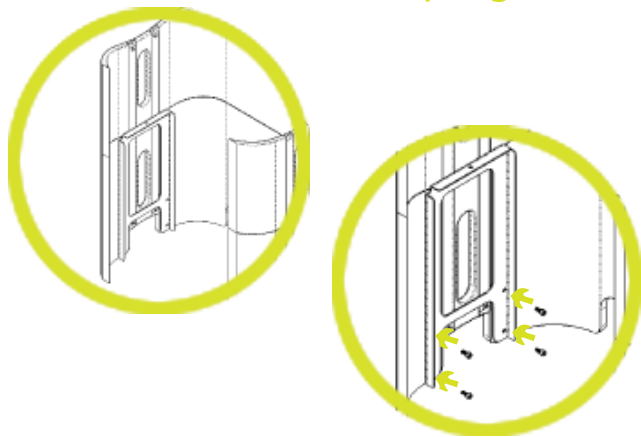


Place the bassinet metal frame on the bottom of the main frame (N) (Between the bassinet ends on the main frame). Use Allen Key (A) to attach four (G) screws on each end then tighten. When assembling the base rails you should lay the shells on the floor. Place something on the floor before laying the shells down to avoid scratching.

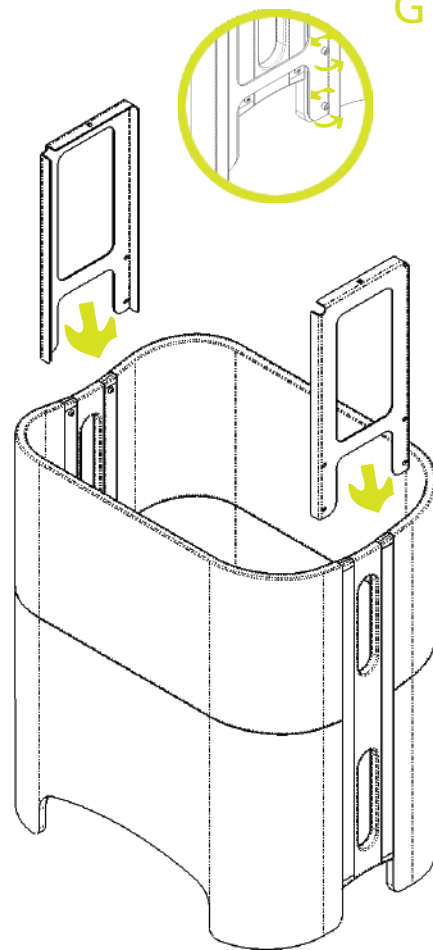



Bassinette Assembly

Step Nine

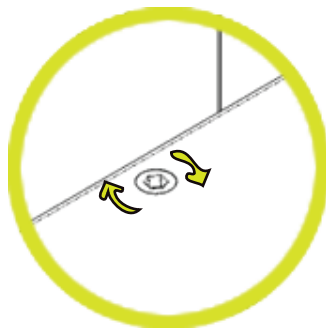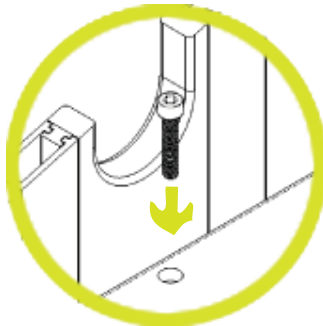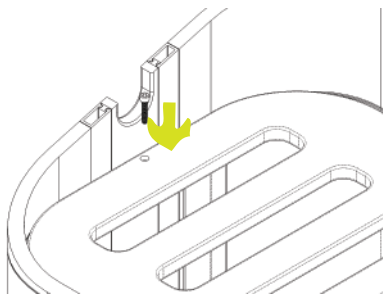

Place the bassinet base on the top of the assembled bassinet frame. Make sure that the holes line up. Use the allen key (A) to tighten the two (H) screws.

Tools used in this step:

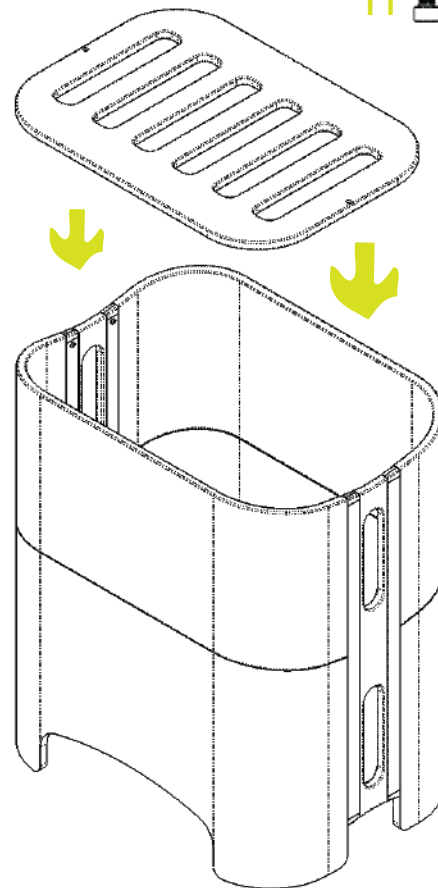



Bassinette to Cot Assembly

Vulu Instruction Manual



Tools used in this step:



Step One

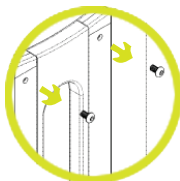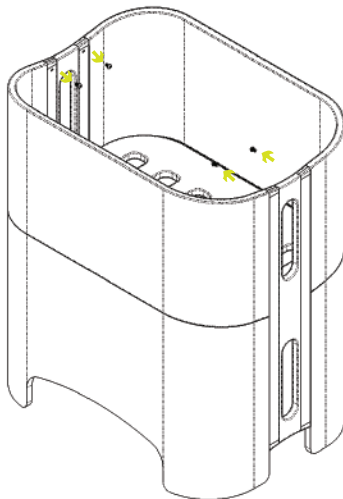

Step Two

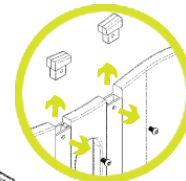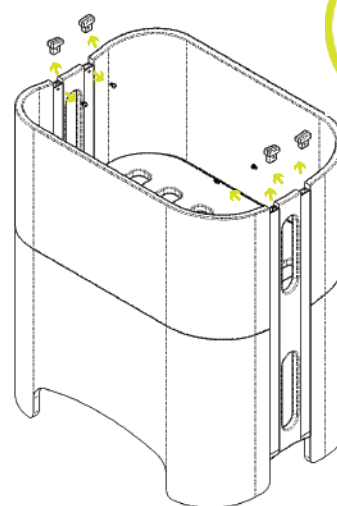


Unscrew the 4 (E) Screws from the top of the main rail with the Allen Key (B). Unscrew by turning the Allen Key (B) counter clockwise. Pull the vulu caps (D) from the top of the main rails and take the screws out of the holes.


Bassinette to Cot Assembly

Vulu Instruction Manual

Tools used in this step:

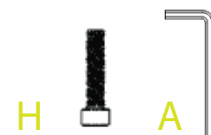


Step Three

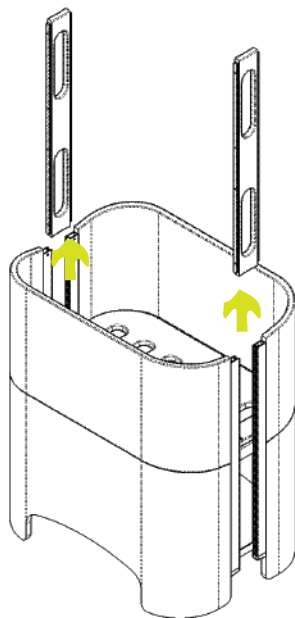

Lift the bassinet sides from the bassinet sides.

Step Four

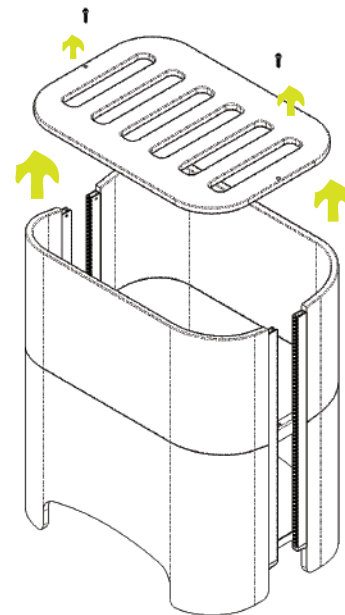


Remove the bassinet from the bassinet frame use allen key (A) to remove the 2 (H) screws.


Bassinette to Cot Assembly

Vulu Instruction Manual

Tools used in this step:

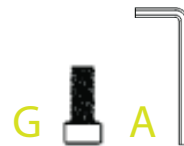


Step Five

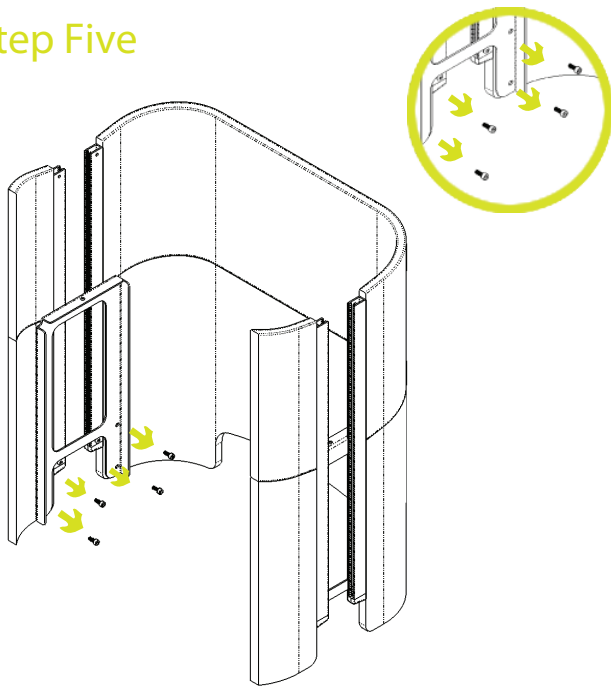

Remove the 4 (G) screws from each side of the bassinet frame by using the allen key (A). Repeat on the other side.

Step Six

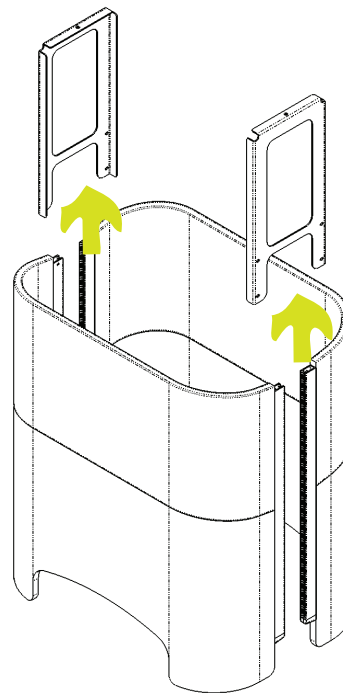

You can remove the bassinet metal frames from each side.



Cot Assembly

Base In High Position

Vulu Instruction Manual


Follow steps 1 - 6 on how to assemble bassinet if you have not assembled the cot as a bassinet.

Step One

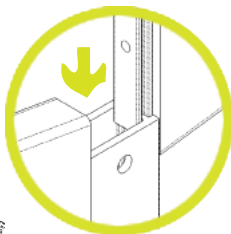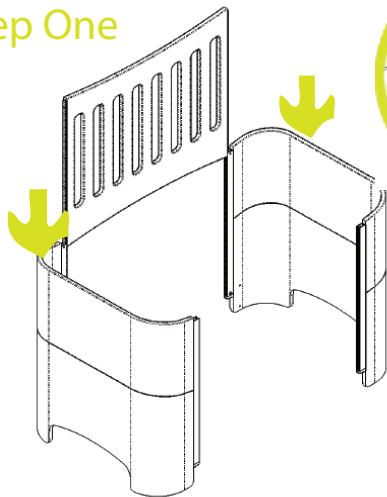

Step Two

Convert Low Rail to High Rail

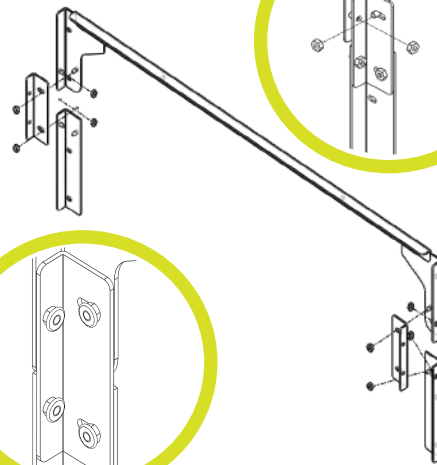

Do not assemble the bolts the wrong way

Slide the cot side between the 2 assembled cot shells.

Place the High cot position adapter (P) on the ends of the Low position Rail (M) and place the Bolts (U) on top of them. The adapters are only for each side.

Cot Assembly


Base In High Position

Vulu Instruction Manual

Tools used in this step:




Step Three

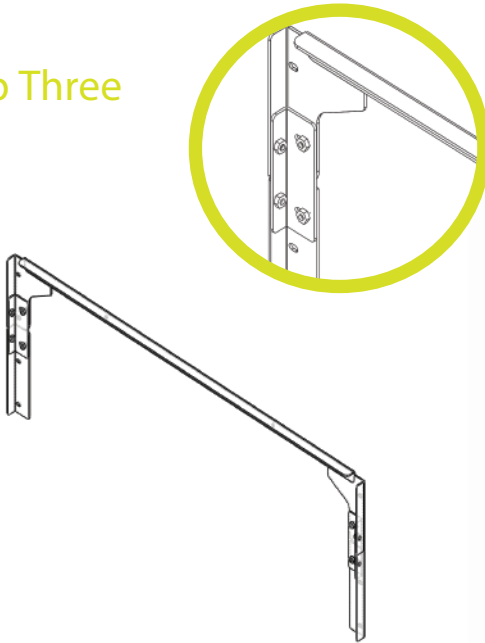

Place the Bolts on the nuts and tighten with a spanner.


Step Four

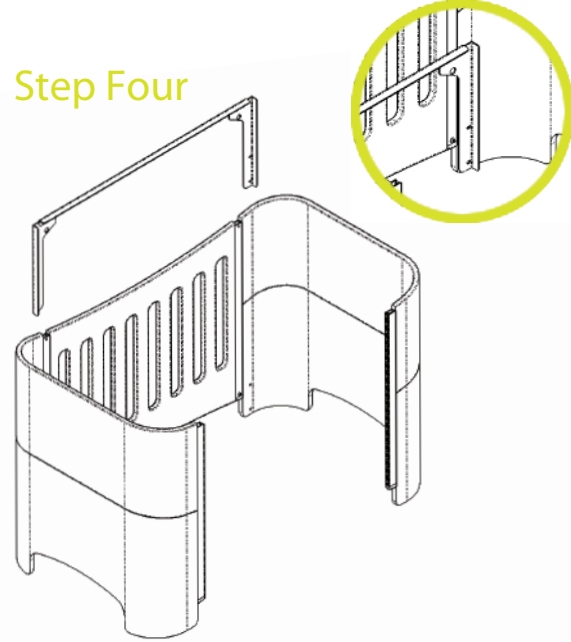



Insert the assembled high base frame on the section between the main rails and cot sides. It should line up with the holes on the bottom.

Cot Assembly



Tools used in this step:

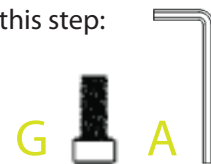


Step Five

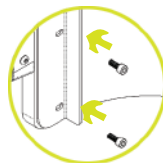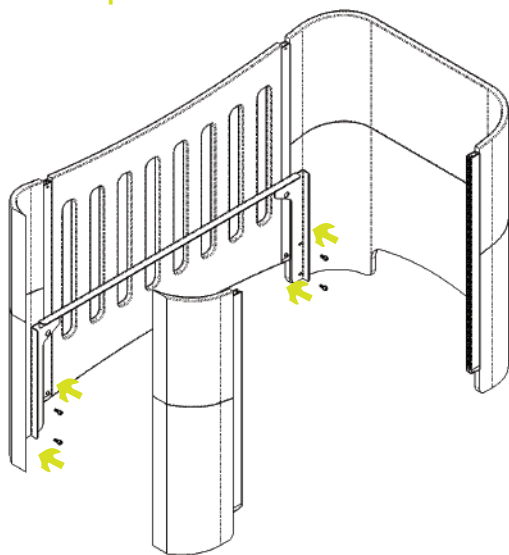

Step Six

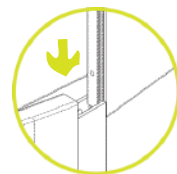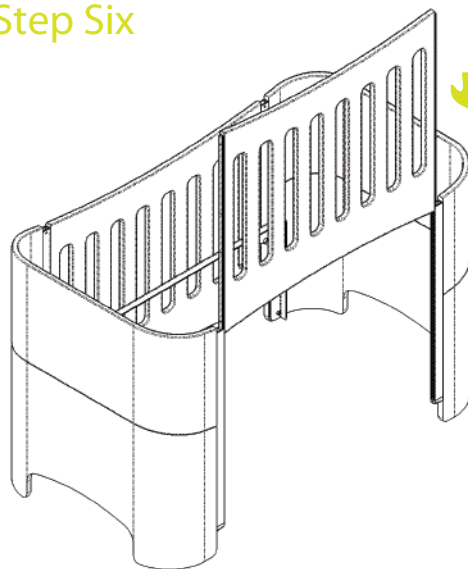


Use allen key (A) to insert (G) screws.
Tighten. Repeat for both sides.

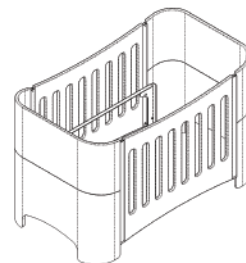




Cot Assembly

Tools used in this step:



D

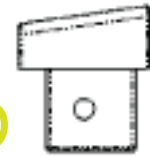

Step Seven

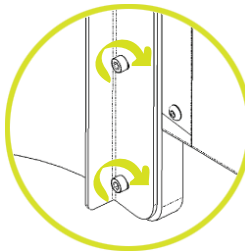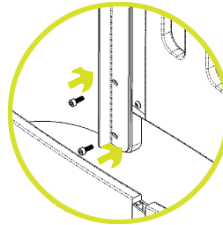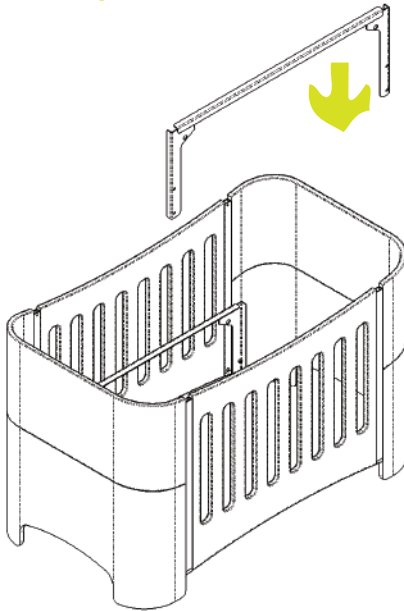

Step Eight

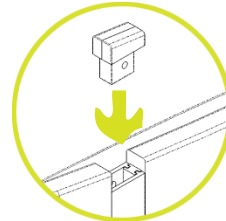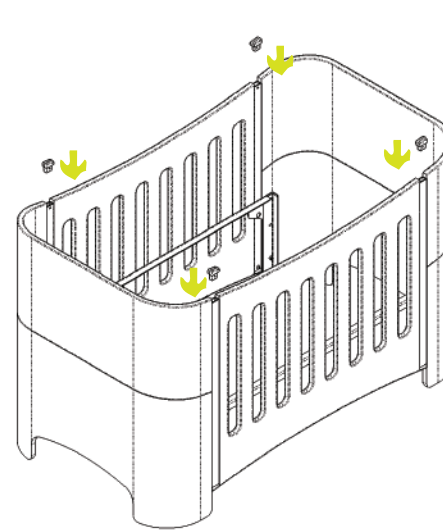


Repeat Step 5.

Place the 4 vulu caps (D) on the top of the 4 main end rails.


Cot Assembly

Step Nine

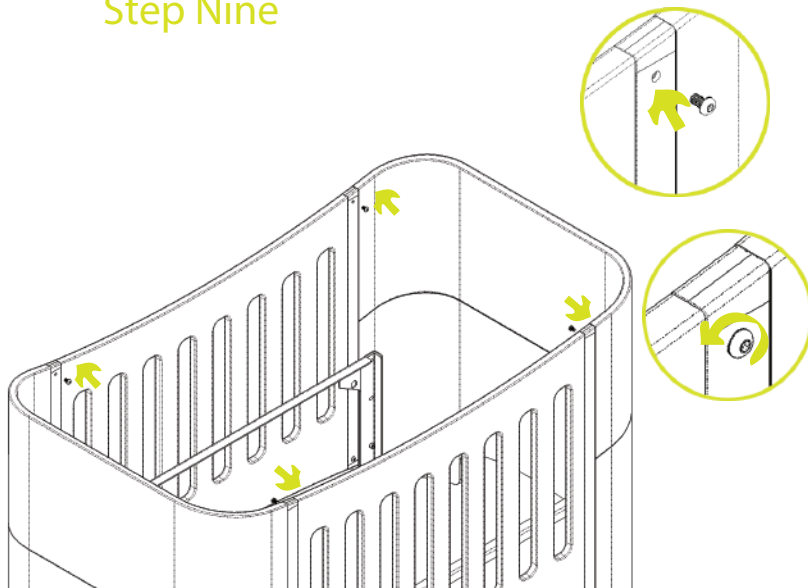


Use the Allen Key (B) with 4 screws (E) to attach the caps to the main frame then tighten.

Tools used in this step:

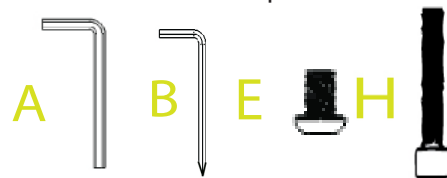

Step 10

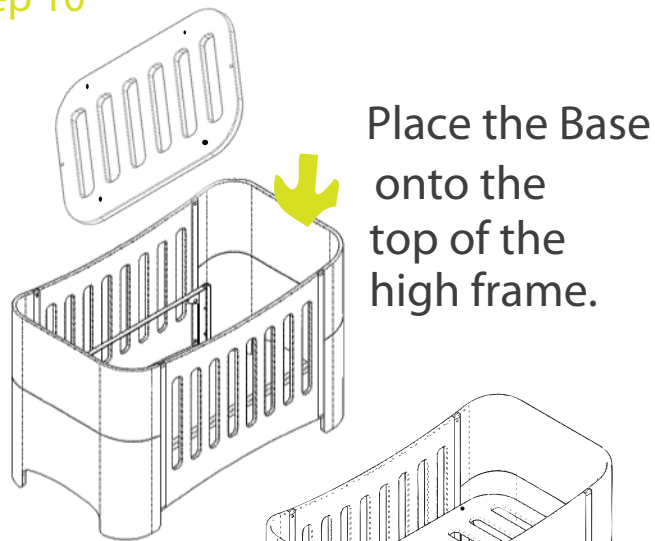

Place the Base onto the top of the high frame.

Insert 4 (H) screws into the base. Tighten with Allen Key (A)


Cot Positioning Assembly

Vulu Instruction Manual

Adjust the base from high pos- low pos


Tools used in this step:

Step One

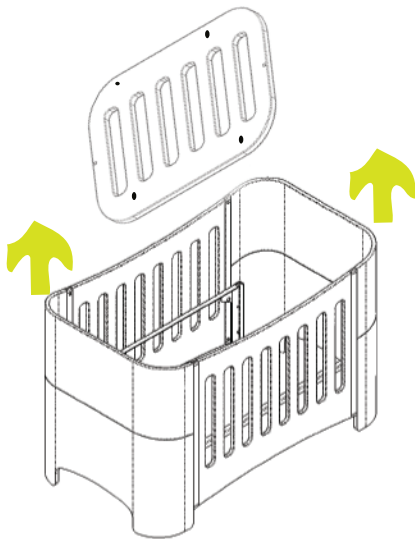

Remove the 4 (H) screws with Allen key (A) from the cot base. Remove the mattress base from the cot base.

Step Two

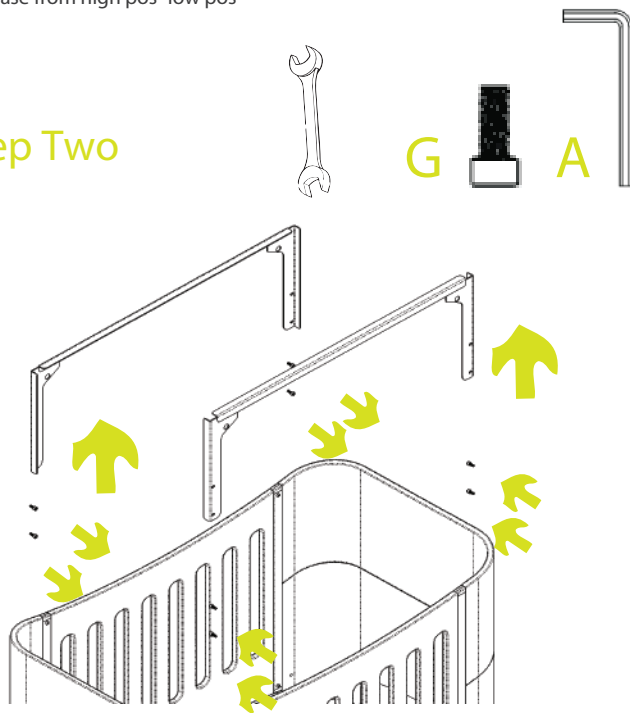


Use the allen key (A) to remove the 4 (G) screws from the high base frame. Repeat for the other side. Remove the high frame from it's position. Unscrew the extensions from the frames.


Cot Positioning Assembly

Vulu Instruction Manual

Tools used in this step:




Step Three

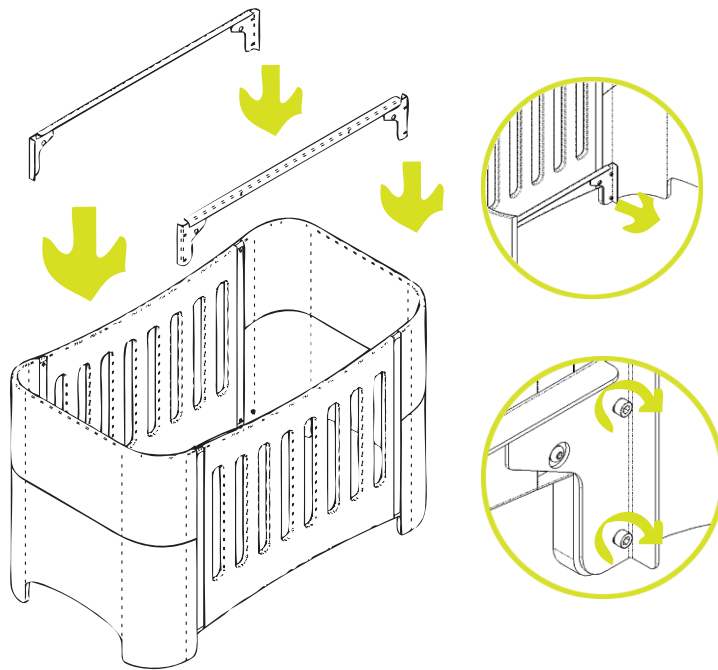

Insert the cot frame on the section between the main rails and cot sides. Use allen key (A) to insert 4 (G) screws on the cot frame. Repeat on the other side.

Step Four

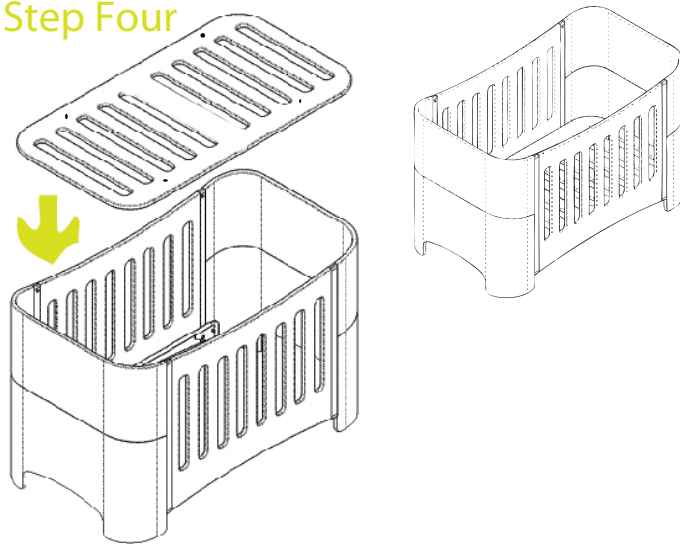

Place the cot base (J) on the top of the low frame position. Place the 4 (H) screws in the positions located on the top of the base and tighten with Allen key (A).


Cot to Toddler Bed Assembly

Vulu Instruction Manual

Tools used in this step:




Step One

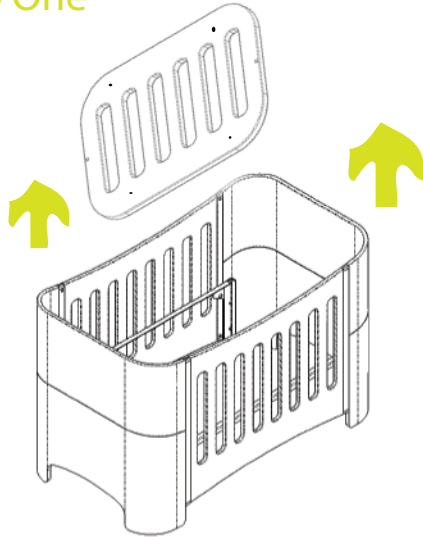

Unscrew the 4 (H) screws from the base of the cot using Allen Key (A).
Remove the base from the frame.

Step Two

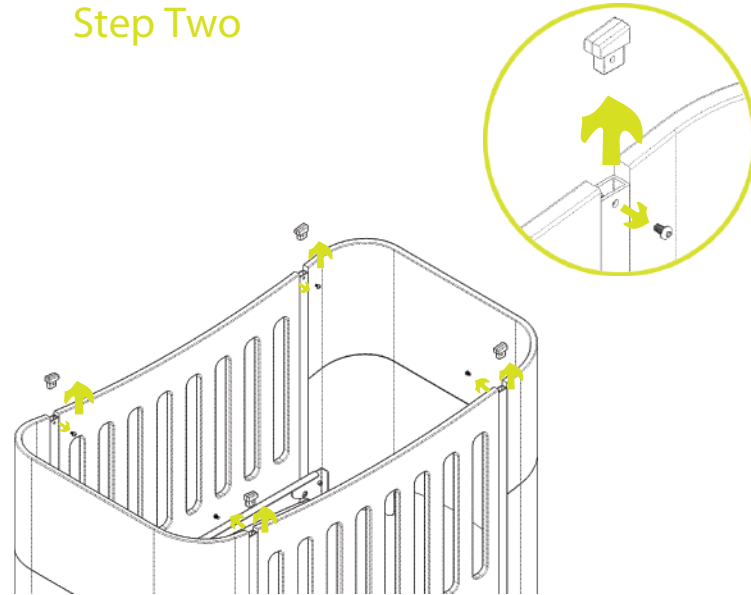

Remove the 4 vulu caps (D) from the tops of the main rails by using Allen Key (B) to remove the 4 (E) screws which are inserted into them. Remove the screws and lift out.


Cot to Toddler Bed Assembly

Vulu Instruction Manual

Tools used in this step:




Step Three

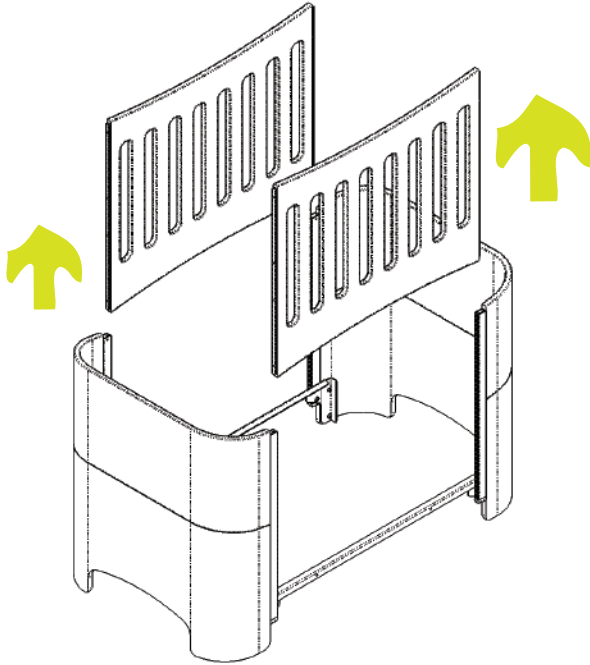

Slide the cot sides from the main rails. Repeat on the other side.

Step Four

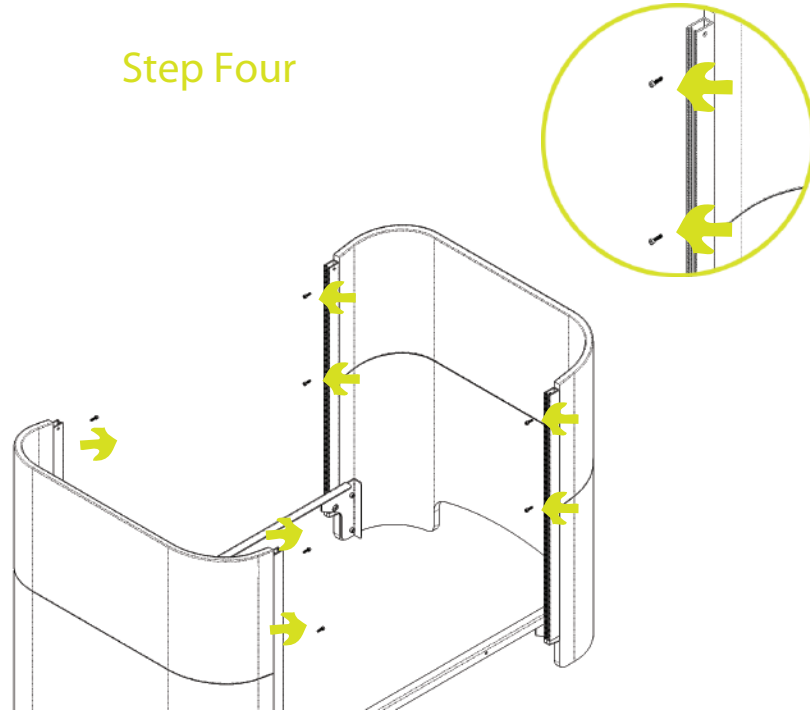

Remove the 8 (F) screws using the Allen key (C).


Cot to Toddler Bed Assembly

Vulu Instruction Manual


Tools used in this step:



Step Five

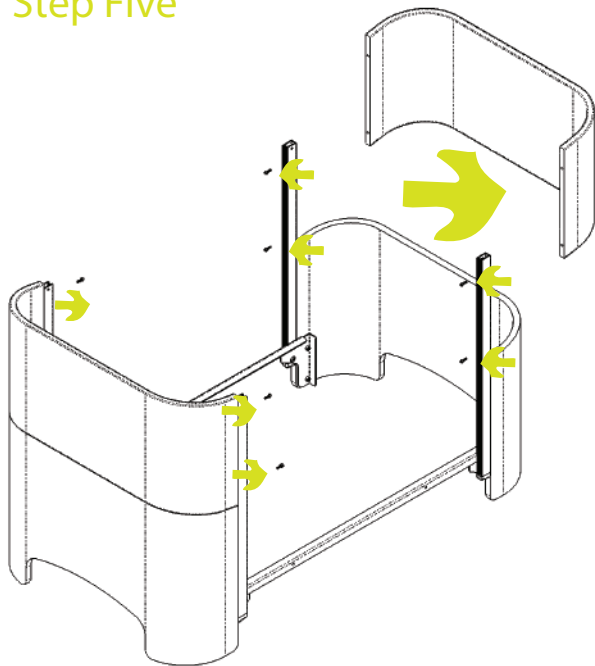

Step Six

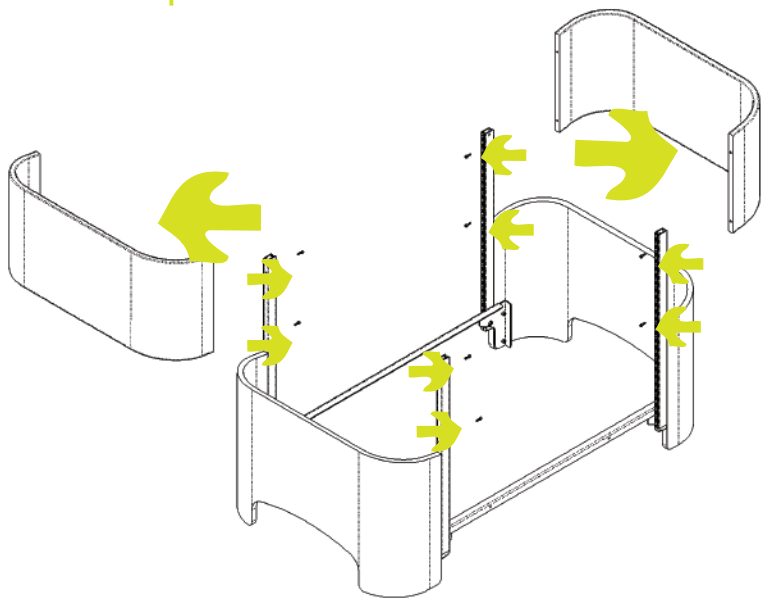

Remove the two (F) screws on each of the upper shelves by using the allen key (C). Remove the top shells from the bottom shells.


Cot to Toddler Bed Assembly

Vulu Instruction Manual


Tools used in this step:





Step Seven

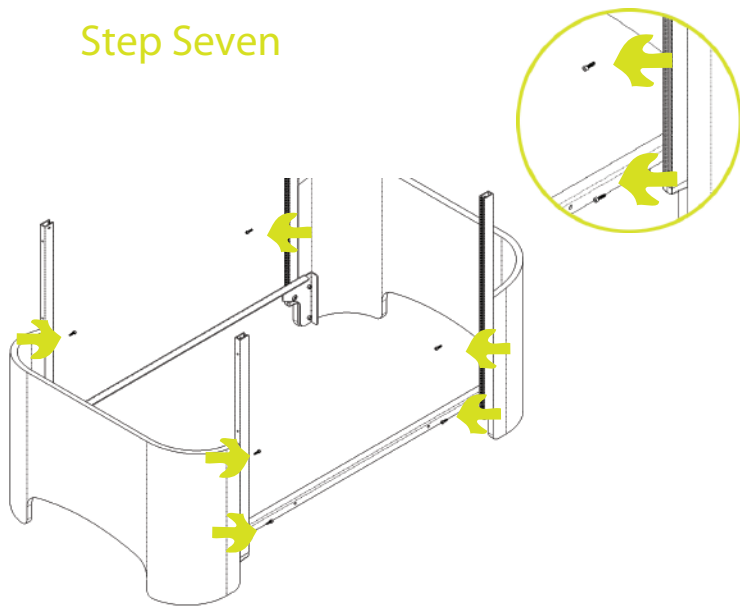

Step Eight

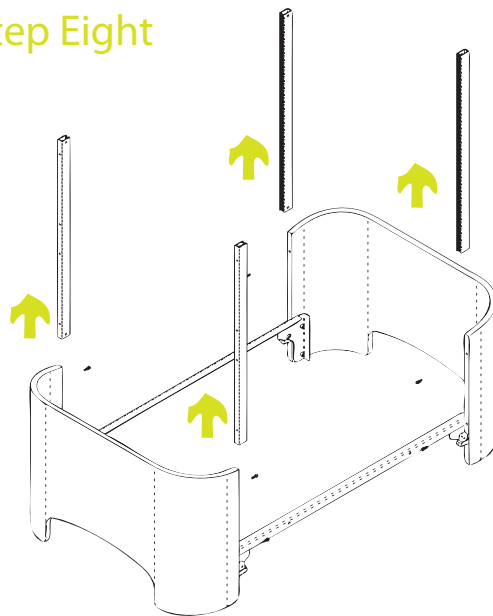

Remove the two (F) screws on each of the bottom shells by using the allen key (C). Remove the frames from the shells.

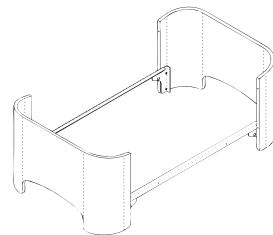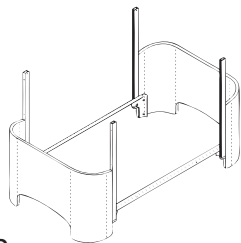


Cot to Toddler Bed Assembly

Vulu Instruction Manual

Tools used in this step:




Step Nine

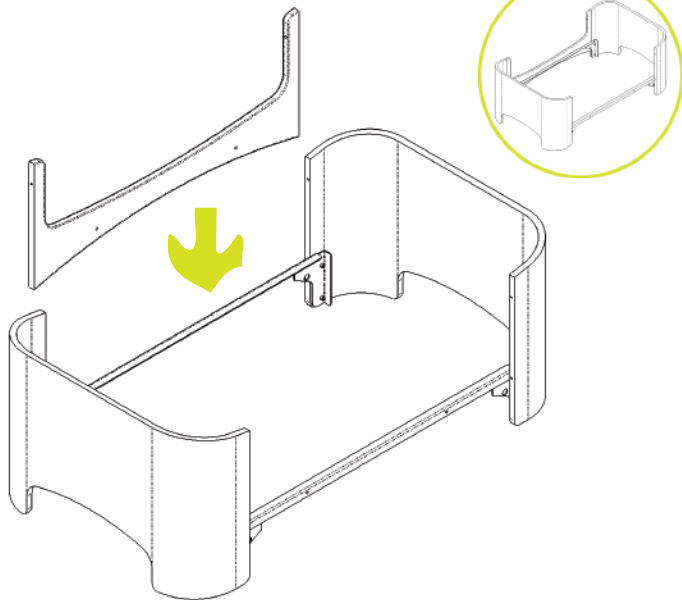

Place the toddler sides between the upper holes on the shell sides.

Step Ten

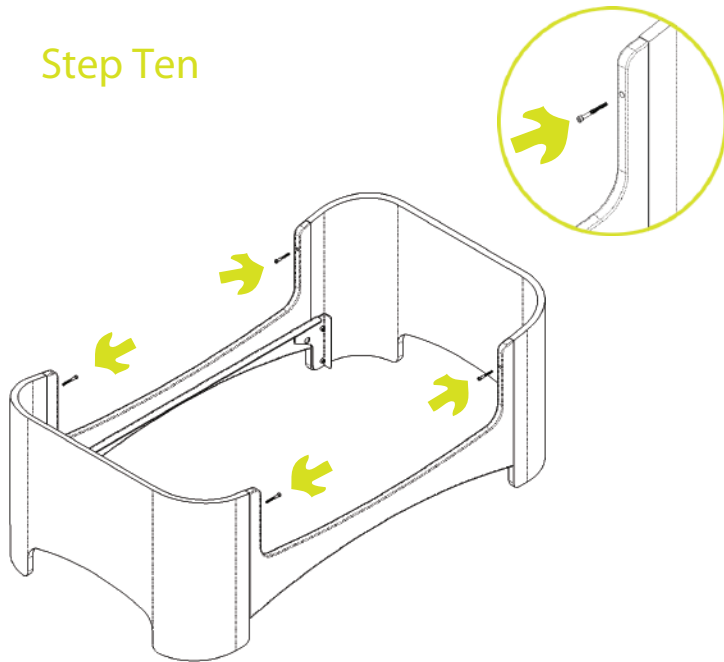

Insert screw (I) into the holes of the toddler sides into the holes of the shells and tighten with allen key (B). Repeat for all sides