



CONTACT US:

297 Canterbury Rd, Revesby, NSW 2212

info@lovencare.com.au

PH: 1300 732 599



www.lovencare.com.au

COT ASSEMBLY INSTRUCTIONS

NOTE: Please read the instructions carefully before assembling your cot to ensure all safety features of the cot are not compromised. Failure to do so can render your warranty.

RECOMMENDED MATTRESS SIZE

This cot has been manufactured for use with a mattress which measures 760mm Wide by 1300 mm long and 100mm in thickness. The width and length are specified because it is important that the gaps between the mattress and the sides and ends of the cot will not exceed 25mm. This is to minimize the risk of a child's limb becoming caught in the gap. The thickness of the mattress has been specified to ensure that the depth of the cot is greater than 500mm with the mattress base in the lower position to minimize the risk of a child climbing or falling out of the cot.

WARNING

- To prevent falls, the mattress base of this cot should be adjusted to the lowest position before the child can sit up.
- This cot is designed for a child up to 25KG.
- Do not leave your child unattended when the dropside is in the lower position.
- Make sure the cot is placed at a reasonable distance from curtains, blinds, heaters and power points.
- Wheels must be locked when in the desired position and unlocked before moving the cot around.
- Adult supervision should be carried out at all times.
- Do not keep medication, string, elastic, small toys or small items such as money near the cot.


CARE ADVICE

The life of most products depends on the care and maintenance undertaken during their use. As your cot will be used throughout most of your baby's first few years, it is vital to care for your product to ensure that it lasts for the full term of use & can be kept away for your next child. In order to do this you must service your product on a regular basis. Check the cot screws, locks & casters to make sure they are all kept in a good working order. If any of these parts become loose, try to tighten them back up to there original manner. If any parts are missing or broken, you should contact us to have them replaced right away.





COT COMPONENTS

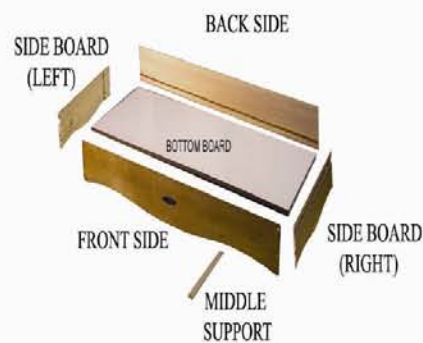

DRAWER COMPONENTS



FOR JUNIOR BED



HARDWARE KIT



ATTACH THE COT BASE TO THE COT ENDS

1. Select the appropriate base position on being either lower or upper.
2. When the base is being used on the upper position, use the 3# bolts to fix the base on the upper holes of the cot ends. Attach the 2# BLANK ENDS to the lower holes on the cot ends to prevent fingers getting caught in the holes.
3. When the base is being used on the lower position, use the 3# bolts to fix the base on the lower holes of the cot ends. Attach the 2# BLANK ENDS to the upper holes on the cot ends to prevent fingers getting caught in the holes. (Fig 1)

Note: in this step, do not tighten the bolts fully.

ATTACH THE FIXSIDE TO THE COT ENDS

4. Use four 3# Bolts to fix the FIXSIDE to the cot ends (Fig 2).

Note: in this step, do not tighten the bolts fully.

ATTACH THE DROPSIDE TO THE COT ENDS

5. Use four 4# Bolts to fix the DROPSIDE to the cot ends.

TIGHTEN THE BOLTS

6. Test the DROP SIDE for easy movement, then tighten all the bolts on the COT and retest the movement of the DROP SIDE to ensure its moving freely.



FIG4-1



FIG4-2



FIG4-3



FIG4-4



Fig 5



Fig 6



Fig 7

ASSEMBLE THE DRAWER

7. Use 1# bolts to assemble the drawer (Fig 4)
8. Place the drawer on the slides and push the drawer in (Fig 5)

TO RAISE THE DROPSIDE

1. To raise the DROPSIDE to the upper position, pull up the DROPSIDE with one or two hands. When the DROPSIDE is raised to the upper position, the locks will click into place by the spring pressure. (Fig 6)

TO LOWER THE DROPSIDE

2. put one hand to one corner of the DROPSIDE and the other hand to the other corner, pull up the DROPSIDE, using both hands to press the locks inside at the same time to release the DROPSIDE down to the lower position. (Fig 7)



Fig 8



Fig 9



Fig 10

CONVERTING TO THE JUNIOR BED

1. Remove the DROPSIDE and the FIXSIDE.
2. Assemble the side rails with 3# bolts (Fig 8)
3. Put the mattress to be used as junior bed (Fig 9)

CONVERTING TO THE LOUNGE

Remove the DROPSIDE and keep the FIXSIDE attached to the cot to convert the cot to be a lounge (Fig 10)