

love^hcare™



Alpha stroller

Instruction Manual BP9753

PLEASE KEEP INSTRUCTIONS FOR FUTURE REFERENCE

loveⁿcare™

Congratulations on your new quality Love N Care product from our exclusive range of baby products. This exceptional design combines the most unique features that any baby product offers.

We are confident that you will appreciate its many highlights, including its reliability and durability. Your new product has been manufactured to comply with the Highest Quality Standards and comes with a 12-month warranty.

As you will soon learn there are many more great features about your new Love N Care product.





Safety guidelines and instructions must always be followed before making use of this product, please retain these instructions for future reference.

This product complies with product standard AS/NZS 2088:2009

WARNING

WARNING: TO AVOID INJURY OR DEATH:

FOLLOW THE MANUFACTURER'S INSTRUCTIONS.

PUT ON ALL THE BRAKES WHENEVER YOU PARK THE STROLLER.

ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

DO NOT LEAVE CHILDREN UNATTENDED.

SECURE THE CHILD IN THE HARNESS AT ALL TIMES.

DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.

MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER, OTHERWISE THEY MAY BE INJURED.

USE THE HARNESS AT ALL TIMES.

WHEN NOT IN USE DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAP AND/OR BUCKLE.

The harness can form loops which may be a strangulation hazard. Never leave a harness connected when not fitted to a child in the stroller.

To avoid serious injury always use the harness provided to secure the child.
(Adjust the straps to suit the body size of your child)

THE MAXIMUM WEIGHT FOR THE SEAT UNIT IS 18KG (EACH)

THE MAXIMUM WEIGHT FOR THE BASKET IS 5KG

THE MAXIMUM TOTAL WEIGHT FOR THE STROLLER IS 23KG

It is unsafe to use accessories other than those supplied or approved by Love N Care.

Care should be taken if the stroller is to be used on stairs or escalators.

This stroller should not be used near an open fire or an exposed flame.

Care should be taken whilst folding and unfolding stroller to prevent fingers being trapped.

Ensure your child's fingers, hands and all other body parts are clear from any moving part when adjusting the seat or handle on your stroller.

WHATS INSIDE THE BOX

1.



4.



2.



3.



WHAT SHOULD YOU HAVE INSIDE?

5.



6.



- 1. ALPHA FRAME
- 2. 2x BACK WHEELS
- 3. 2x FRONT WHEELS
- 4. TETHER STRAP
- 5. BASKET
- 6. HOOD

HOW TO ASSEMBLE UNFOLD THE FRAME



- Pull the handle backwards in order to open the frame.



- Lay the frame on the floor

- Pull the catching latch up to release the frame from the stud



- Push down on the locking mechanism on the back of the frame to ensure that frame is locked and not lose. Tug on it to ensure that it is safe and sturdy.



- The assembled frame should look like this.




HOW TO ASSEMBLE

ASSEMBLING THE WHEELS

How to Attach Front Wheels

Insert the front wheel into the front housing until it clicks into place. Repeat on both sides.
Pull on the front wheels to ensure they assembled correctly and they do not become loose.
To unattach the front wheels, push in the spring shown in the second image and pull

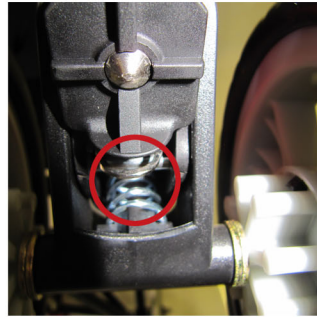

Front Wheel

How to Attach Back Wheels

Insert the rear wheels into the rear housing as shown.
The wheels need to line up with the buttons on the frame.
You will need to push down on the wheel to ensure the rear wheel is locked into position.
You should hear a click on both sides of the wheel when they snap in.
Repeat on both sides.
To unattach the back wheels, push in button shown in first image, on both side of wheel and pull.



Back Wheel



Frame with Wheels



HOW TO ASSEMBLE

ASSEMBLING THE HOOD & BASKET

How to attach the Hood to the Frame



Hood Attached


In order to attach the hood to the frame you must first clip each of the sides of the hood to the frame. This is between the rivet and the top of the Frame (first circle). Once the Hood has been clipped in we need to use the Velcro to strap the hood to the frame (second circle).

How to attach the Basket


To attach the basket you must first loop the material around the rear of the frame above the rivet and snap the press studs together. Repeat this on both sides. To snap the basket on the front section there is an opening on the side next to seat. Loop the strap around it and snap the press studs together. Repeat this on both sides.



Basket and Hood Attached

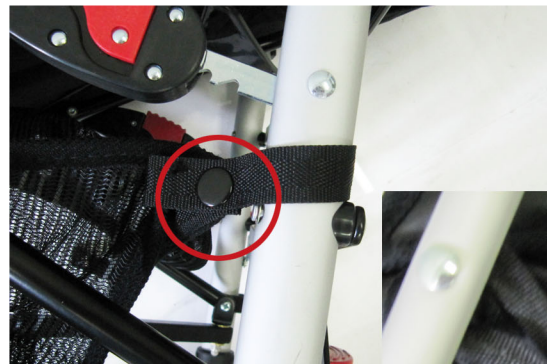

HOW TO ASSEMBLE Tether Strap

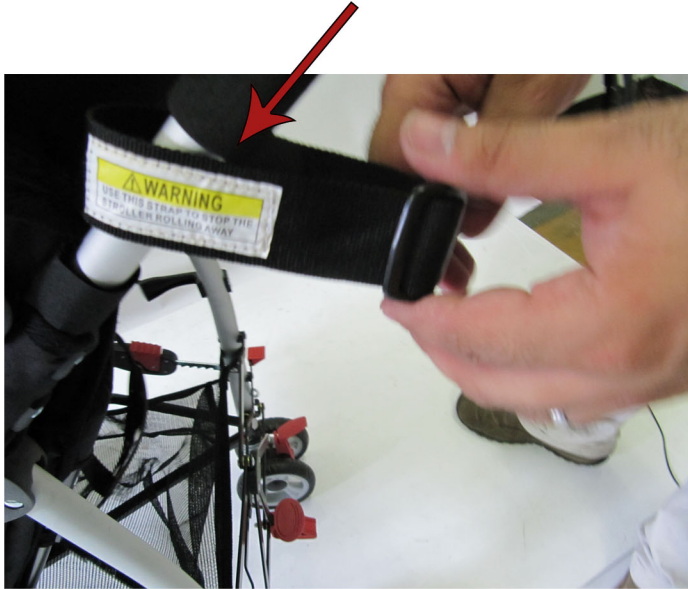

- Place the tether strap over the handle of the Stroller. You can place it on either side depending on which hand you would like to use

- Once the tether strap is around the frame (below the handle) pull on the tether strap so it is tightened.
- Give a tug on it to ensure that it is tightened and secure.



- When using the tether strap ensure that it is within your hand or strap around your wrist




! WARNING !

- Use This Harness Strap To Stop Stroller From Rolling Away

HOW TO USE

Brakes

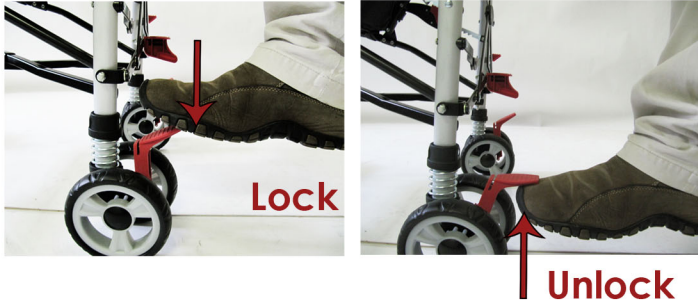

Backrest



Brakes: To apply the brakes push down on the red lever on the rear of the back wheels down with your feet. To release the brakes kick the red lever upwards

Backrest: To adjust the seating position of your stroller you must push the red levers located behind the seat at the same time. To raise the seat just push upwards on the back of the seat

Footrest: To adjust the footrest push in the lever on each side of the base of the seat and either push up or down depending on the desired position

Hood: To open the hood push the hood in the forward direction then push the hinge down on each side to ensure that it is locked. To close the hood push the hood towards the rear wheels.

Footrest



Hood



HOW TO USE 5 POINT HARNESS



This stroller has been designed with a 5-point harness for the safety of your child. Carefully place your child into the seat and bring the safety harness around the child's waist and over the child's shoulders then place the crotch strap between your child's legs. Tighten the harness to be snug around the child's waist and over its shoulders. Attach each of the shoulder straps to the waist strap buckle with each end. Repeat this for both shoulder straps. Once each shoulder strap is attached on the waist buckle insert the waist strap end through the opening in the crotch strap. You should pull each of the strap ends together until they snap in. (pull on them to test).

To release the harness press the centre buckle (these are the 2 waist straps which are joined together in the crotch strap) with your 2 fingers, once they are released you can pull them apart.

The harness can form loops which may cause a strangulation hazard. Never leave a harness connected when not fitted to a child in the stroller.



WARNING



WHEN NOT IN USE DISCONNECT SHOULDER STRAPS
FROM THE WAIST STRAP AND/OR BUCKLE



WARNING

USE THIS HARNESS AT ALL TIMES

HOW TO FOLD

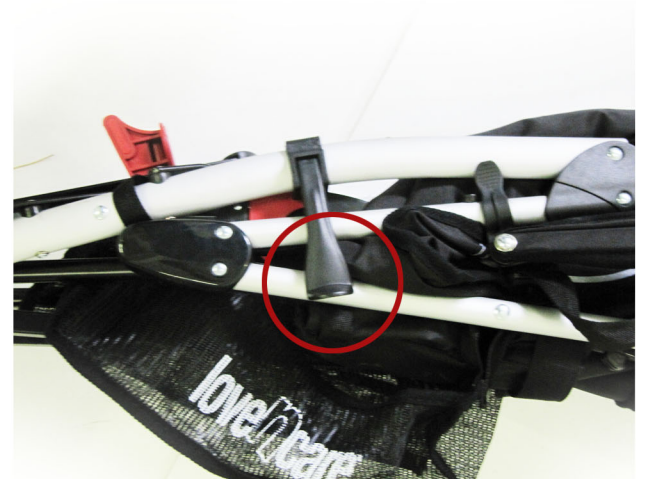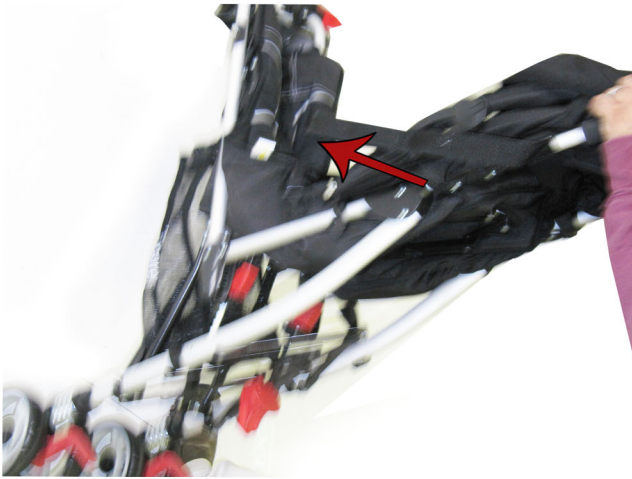

In order to fold the stroller you must first.

1. Push up or kick up the red centre lever on the rear of the stroller
2. Press down or step down on the red lever on the side of the stroller
3. Push the stroller from the handles in a forward motion (towards the front wheels)
4. Ensure the latch is over the stud on the side (tug on it to ensure it is secure)



CLEANING AND MAINTENANCE

ALL LOVE N CARE PRODUCTS HAVE ONE YEAR WARRANTY FROM THE DATE OF PURCHASE.

IT IS RECOMMENDED TO REGULARLY INSPECT AND MAINTAIN MOVEMENT OF LOCKING DEVICES AND SECURITY OF ESSENTIAL COMPONENTS.

REGULARLY CHECK ALL PARTS FOR WEAR AND TEAR.

DO NOT USE SPRAY LUBRICANTS, SIMPLY WIPE CLEAN AFTER USE.

THE SEAT LINER CAN BE CLEANED BY SPONGING WITH WARM SOAPY WATER AND A MILD DETERGENT. A MILD DISINFECTANT MAY BE USED IF DESIRED.

STUBBORN MARKS MAY BE REMOVED WITH A NON ABRASIVE CREAM CLEANER.

NEVER CLEAN WITH ABRASIVE, AMMONIA BASED, BLEACH BASED OR SPIRIT TYPE CLEANERS.

IF THE WHEELS BECOME DAMAGED OR WORN DISCONTINUE USE AND REPLACE.

FABRIC CARE

- HAND WASH ONLY**
- DO NOT BLEACH**
- DO NOT TUMBLE DRY**
- DO NOT IRON**
- DO NOT WRING**
- DO NOT DRY CLEAN**





Contact Us

Head Office:

Love N Care Pty Ltd.
297-299 Canterbury Rd, Revesby
NSW 2212 Australia
Contact No: 02 9774 4655
Fax: 02 9774 4633
Email: info@lovencare.com.au
Website: www.lovencare.com.au

Western Australia

5 Modal Crescent
Canning Vale WA 6155 Australia
Contact No: 08 9455 4972
Fax: 08 9455 4728

Brisbane

7-9 Eileen Street
Underwood QLD 4119 Australia
Contact No: 07 3290 4217
Fax: 07 3209 5019

Ireland

DMG House
Deansgrange Industrial Estate
Deansgrange Co. Dublin
Phone: +3531 2190254
Fax: +3531 2802734
Website: www.lovencare.ie