


love^hcare™

LONE RIDER

STROLLER

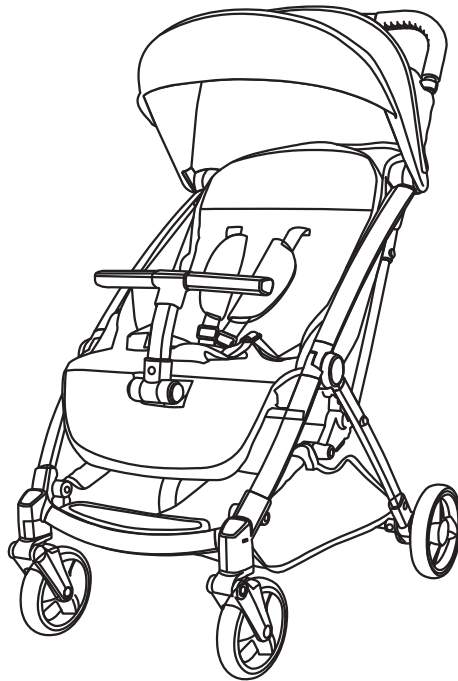

Instruction manual

Please read these instructions carefully and keep for future reference

loveⁿcare™

Congratulations on purchasing your new Love N Care Swing Stroller
In just a few steps you should be able to assemble this unique product and have it ready to meet your beautiful child





SAFETY GUIDELINES AND INSTRUCTIONS MUST ALWAYS BE FOLLOWED BEFORE MAKING USE OF THIS PRODUCT. PLEASE RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE. READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE OF THIS STROLLER. THIS PRODUCT COMPLIES WITH PRODUCT SAFETY STANDARD AS/NZS 2088:2009



WARNINGS

TO AVOID INJURY OR DEATH

- FOLLOW THE MANUFACTURER'S INSTRUCTIONS.
- PUT ON ALL THE BRAKES WHENEVER YOU PARK THE STROLLER.
- ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.
- DO NOT LEAVE CHILDREN UNATTENDED.
- SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.
- DO NOT USE THIS SEAT WITH ANY OTHER MODELS OF STROLLER.
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER, OTHERWISE THEY MAY BE INJURED.
- CHECK THAT ALL SAFETY LOCKS ARE ENGAGED BEFORE PLACING A CHILD IN THE STROLLER.
- USE THE HARNESS AT ALL TIMES.
- WHEN NOT IN USE DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAP AND/OR BUCKLE TO PREVENT STRANGULATION.
- THE HARNESS CAN FORM LOOPS WHICH MAY BE A STRANGULATION HAZARD.
- NEVER LEAVE A HARNESS CONNECTED WHEN NOT FITTED TO A CHILD IN THE STROLLER.
- TO AVOID SERIOUS INJURY ALWAYS USE THE HARNESS PROVIDED TO SECURE THE CHILD. (ADJUST THE STRAPS TO SUIT THE SIZE OF YOUR CHILDS BODY)
- IT IS UNSAFE TO USE ACCESSORIES OTHER THAN THOSE SUPPLIED BY LOVE N CARE.
- CARE SHOULD BE TAKEN IF THE STROLLER IS TO BE USED ON STAIRS OR ESCALATORS.
- THIS STROLLER SHOULD NOT BE USED NEAR AN OPEN FIRE OR AN EXPOSED FLAME.
- CARE SHOULD BE TAKEN WHILST FOLDING AND UNFOLDING THE STROLLER TO PREVENT FINGERS BEING TRAPPED.
- ENSURE YOUR CHILDS FINGERS, HANDS AND ALL OTHER BODY PARTS ARE CLEAR FROM ANY MOVING PARTS WHEN ADJUSTING THE SEAT OR HANDLE ON YOUR STROLLER.
- USE THE TETHER STRAP TO PREVENT THE STROLLER FROM ROLLING AWAY.
- DO NOT RUN WHILE USING THIS STROLLER.
- THE UPRIGHT POSITIONS ARE NOT SUITABLE FOR USE WHEN CHILD IS LESS THAN 6 MONTHS OLD. THE LOWEST RECLINE POSITION SHOULD BE USED FOR CHILDREN UNDER 6 MONTHS.


MAXIMUM WEIGHT OF CHILD SHOULD NOT EXCEED: 20KG

MAXIMUM WEIGHT FOR BASKET: 5KGS

MAXIMUM WEIGHT FOR CANOPY POCKET: 0.45KG

AGE SUITABILITY: NEWBORN - 36 MONTHS

PARTS LIST

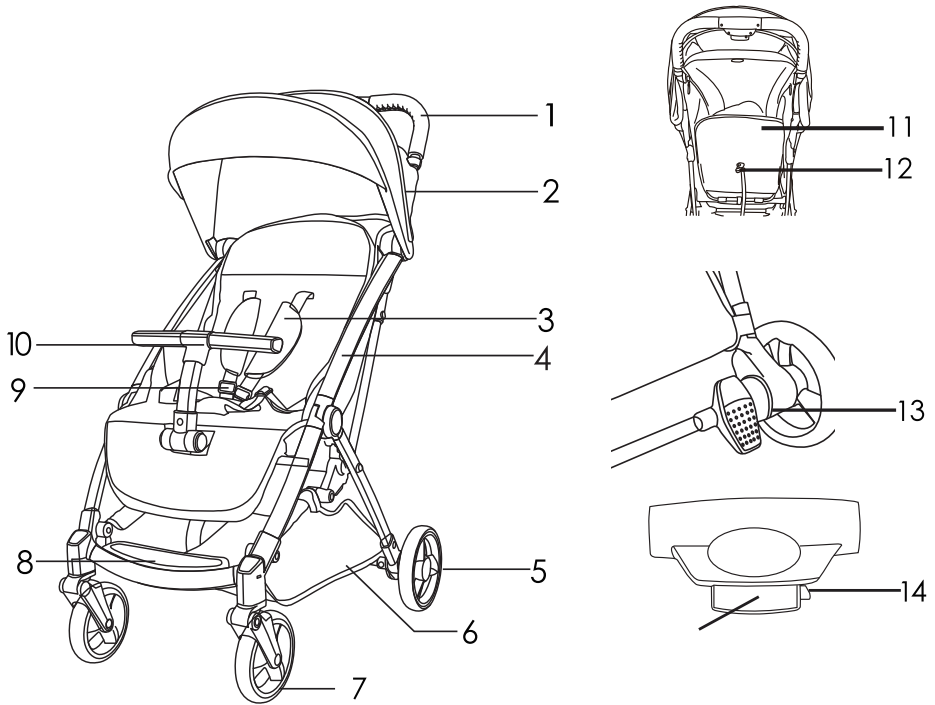

1.Handle Grip

2.Canopy

3.Shoulder Protector

4.Armest

5.Rear Wheels

6.Basket

7.Front wheels

8.Foot Rest

9.Harness Buckle

10.Front Bumper

11.Backrest


12.Backrest Adjustable Button

13.Brake Lever


14.Handle Released Button

15.Released / Folding Button


Assembly Instructions

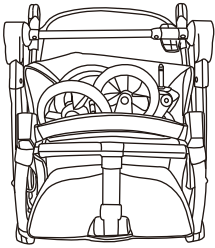

F1

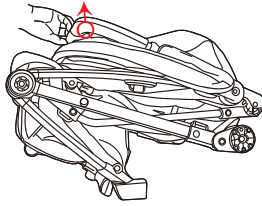


F2

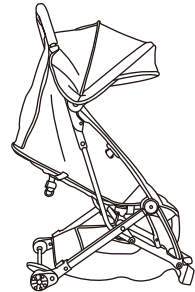


F3


1.To unfold frame:see F1 ,take out the wheel first,see F2 ,hold the hand grip by one hand,pull up the buggy until unfolded complete,see F3.

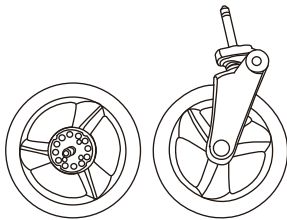

rear wheel front wheel

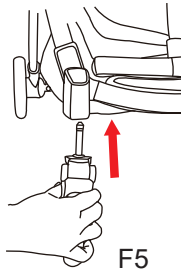


F5

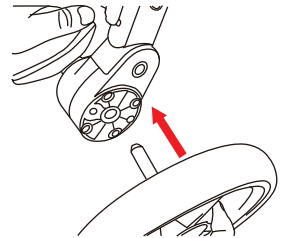


F6

2.To assemble the front wheels and rear wheels:see F5,insert the steel pin of the front wheel into the front leg until the wheel clicks into position; see F6,insert the steel pin of the rear wheel into the rear leg until the wheel clicks into position.

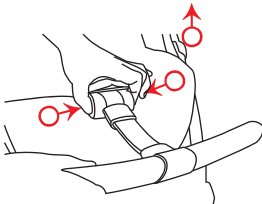

F7

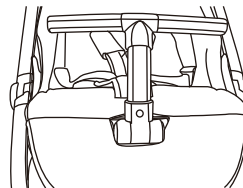


F8


3.To assemble front bumper:see F7,press the button and push inside,in the meantime lift up the bumper until hear "click",then front bumper will fix, see F8.

Assembly Instructions

1.To use front bumper:press the button and push inside,in the meantime lift up the bumper until hear "click",the bumper will fix.

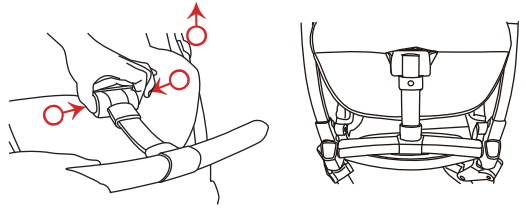


2.To adjust the frontrest level:pull out the lever on the both sides to lower down.To adjust it to higher position, only need to lift up the footrest.

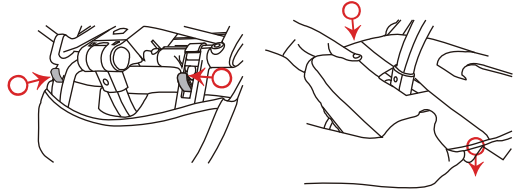


3.To use brakes:

To brake:push the wheel brake lever down.


To release:lift the rear brake lever up.

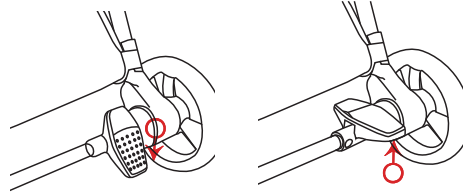


4.To use canopy:pull the canopy forward or backward to open or close the canopy.

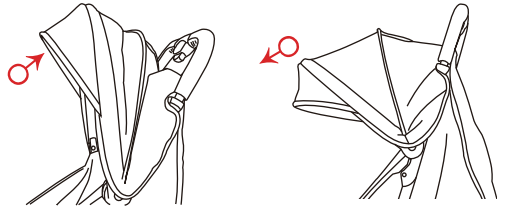




5.To detach the front and rear wheels:see left photo,press down the steel button in side and pull out,the front wheel can detach;see right photo,press down the steel button in back side and pull out,the rear wheel can detach.

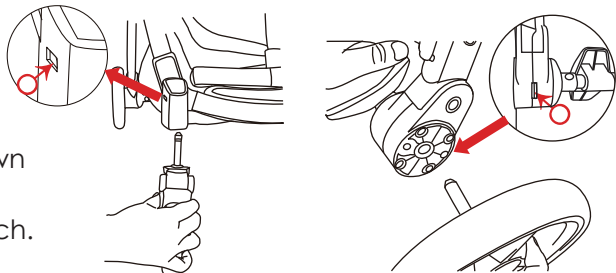

6.To unlock:Lift both swivel lock levers up.
To lock:Push both swivel lock lever down.

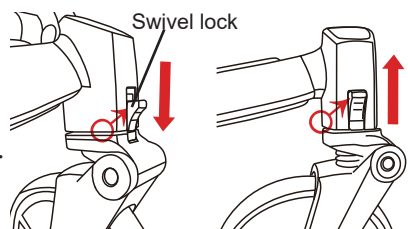

Assembly Instructions

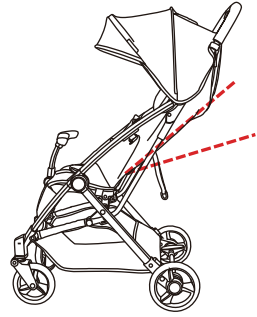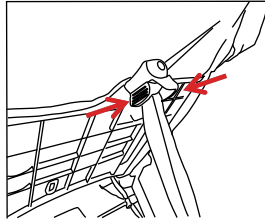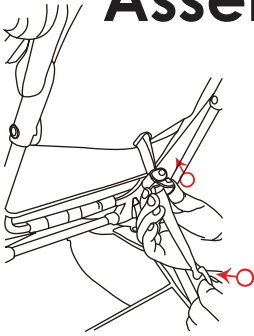

7.To adjust the backrest:


To recline:pull down the reclining adjuster to lower down the backrest.

To raise up:holding reclining strap with one hand,with other hand sliding the adjuster upward to pull up the backrest.

8.To use the seat belt:

Securing the seat belt:attach the inserts of the shoulder belt to the buckle until you hear the “click” sound to make sure it is secured.


Releasing the seat belt:press down the button on the buckle,using the other hand to pull put both side of the inserts.

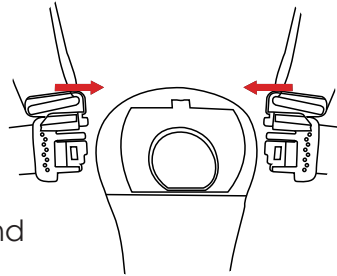

9.To adjustment the seat belt length:

To shorten:pull out the strap,draw out the tail belt and tighten.

To extend:shorten the strap end and pull backward to tighten.

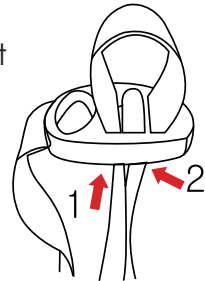

WARNING

Avoid serious injury from falling or sliding out.

Always use the crotch strap in combination with waist belt.

Always use seat belt.


Assembly Instructions

7.To fold the stroller:



1)see F1,push the button and push inside,and pull down the bumper in the end position;the footrest should be in the end position before adjust the bumper;

2)see F2,hold the handles,press the button 1,in the meantime press the button 2;see F3,press forward and down the handles until the stroller locked automatically and stand by itself.


Note:The front bumper should be in the folded-down position and the canopy should be folded prior the folding.

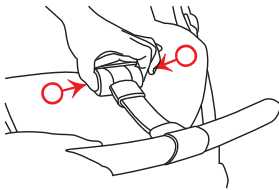


F1

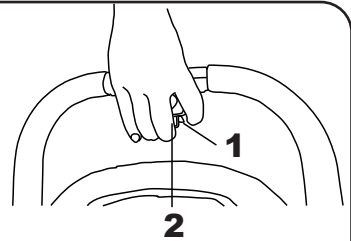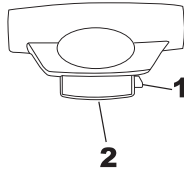

F2

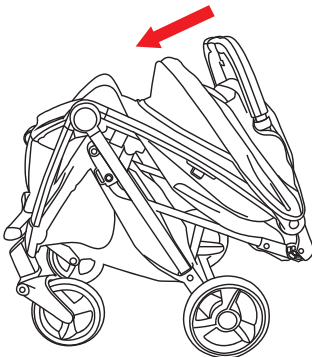

F3

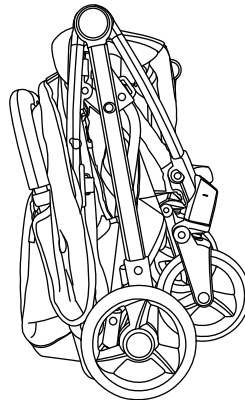

F4

WARNING

Before folding,ensure children are clear of moving parts.

WARRANTY AGAINST DEFECTS

All Love N Care products are guaranteed for twelve months from the date of purchase. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This covers against faults which develop through faulty materials and workmanship. Misuse, accidental damages, normal wear and tear or neglect are not covered.

If a fault becomes apparent, please return the item to the store of purchase with your receipt.

You must inform the store what the defect is. We will then arrange for its repair or it will be assessed for replacement as expediently as possible. The benefits of this warranty are in addition to other right and remedies under the law in relation to the goods or services to which this warranty relates.

If you are unable to return the item to the store of purchase, you can contact Love N Care on free call 1300 732 599.

Where you send the product directly to the manufacturer then you may be liable for the costs of transportation to and from Love N Care.

Love N Care will meet the reasonable expenses incurred by a consumer in a making a warranty claim. You can claim expenses incurred in making a claim by contacting our customer service team on 1300 732 599 or by email at info@lovenecare.com.au



12 MONTH WARRANTY

BP 9840 LONE RIDER STROLLER

Please fill in this section to validate your warranty and send to: **297 Canterbury Rd Revesby NSW 2212**

Name: _____

Store Purchased: _____

Address: _____

Date Purchased: _____

Product Name/No. _____

Care and Maintenance

- Regularly check screws, rivets, bolts & fastenings to ensure they are locked tight and secure. Replace any parts in an inferior condition. Should you intend to use the pushchair during the winter, by the sea or off-road; it is important to clean thoroughly & dry the vehicle after use. Salt from the ocean or from roads will corrode metal parts unless removed. After use in these circumstances clean with fresh water and dry thoroughly after use.
- Check on a regular basis that all chassis locking devices are working correctly.
- If any part of the pushchair is damaged contact your local Love N Care retailer immediately without using the pushchair.
- Do not expose your pushchair to excessive sunlight for extensive periods of time, even normal exposure to sunlight may cause the colour of the fabric to change.
- Take care not to tear the fabrics while transporting the pushchair.
- Light oil or silicone spray is suitable to use as a lubricant for moving parts.
- Ensure that zips are either fully open or fully closed or they may be damaged.
- Always use the rain cover in inclement weather.
- Do not place items on the hood/canopy, it may damage the vehicle and/or render it unsafe.
- Rubber tyres can leave marks on some surfaces. The tyres can react with some surfaces (vinyl floor coverings, carpets etc.) and cause stains. Always stand the stroller on a protective surface indoors.
- Routinely clean the metal parts with a damp cloth & then dry immediately.
- Fabrics should be cleaned following the guidance on the care labels.
- Do not wash in the washing machine. Sponge clean or hand wash with mild detergent and warm water (30°C)

A stroller has many moving parts and requires regular maintenance by the user. Simple cleaning and lubricating will make the stroller look good & operate better for longer. The stroller will be used in many different environments, country walks, a trip to the coast; a winter's walk to school, all can increase wear, lead to rust and corrosion and reduce the life of the product. Regular cleaning, care and maintenance will reduce the effects of the environment on the stroller. The warranty does not protect the stroller against overloading, misuse, neglect or lack of care and maintenance by the user.

Contact Us

Head Office:

Love N Care Pty Ltd.
297-299 Canterbury Rd, Revesby
NSW 2212 Australia
Contact No: 02 9774 4655
Fax: 02 9774 4633
Email: info@lovencare.com.au
Website: www.lovencare.com.au

lovencare
lovencare.com.au

Let's be friends!

 <http://www.facebook.com/lovencare1>



100 % AUSTRALIAN OWNED SINCE 1984