

lovehncare™



zooper

Instruction Manual BP 9757

loveⁿcare™

Congratulations on your new quality Love N Care product from our exclusive range of baby products. This exceptional design combines the most unique features that any baby product offers.

We are confident that you will appreciate its many highlights, including its reliability and durability. Your new product has been manufactured to comply with the Highest Quality Standards and comes with a 12-month warranty.

As you will soon learn there are many more great features about your new Love N Care product.





Safety guidelines and instructions must always be followed before making use of this product, please retain these instructions for future reference.

This product complies with product standard AS/NZS 2088:2000

WARNING

WARNING: TO AVOID INJURY OR DEATH:

FOLLOW THE MANUFACTURER'S INSTRUCTIONS.

PUT ON ALL THE BRAKES WHENEVER YOU PARK THE STROLLER.

ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

DO NOT LEAVE CHILDREN UNATTENDED.

SECURE THE CHILD IN THE HARNESS AT ALL TIMES.

DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.

MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER, OTHERWISE THEY MAY BE INJURED.

USE THE HARNESS AT ALL TIMES.

WHEN NOT IN USE DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAP AND/OR BUCKLE.

The harness can form loops which may be a strangulation hazard. Never leave a harness connected when not fitted to a child in the stroller.

To avoid serious injury always use the harness provided to secure the child.

(Adjust the straps to suit the body size of your child)

THE MAXIMUM WEIGHT FOR THE STROLLER SEAT IS 22KG.

THE MAXIMUM WEIGHT FOR THE BOTTOM BASKET IS 5KG.

It is unsafe to use accessories other than those supplied or approved by Love N Care.

Care should be taken if the stroller is to be used on stairs or escalators.

This stroller should not be used near an open fire or an exposed flame.

Care should be taken whilst folding and unfolding stroller to prevent fingers being trapped.

Ensure your child's fingers, hands and all other body parts are clear from any moving part when adjusting the seat or handle on your stroller.

CLEANING AND MAINTENANCE

ALL LOVE N CARE PRODUCTS HAVE ONE YEAR WARRANTY FROM THE DATE OF PURCHASE.

IT IS RECOMMENDED TO REGULARLY INSPECT AND MAINTAIN MOVEMENT OF LOCKING DEVICES AND SECURITY OF ESSENTIAL COMPONENTS.

REGULARLY CHECK ALL PARTS FOR WEAR AND TEAR.

DO NOT USE SPRAY LUBRICANTS, SIMPLY WIPE CLEAN AFTER USE.

THE SEAT LINER CAN BE CLEANED BY SPONGING WITH WARM SOAPY WATER AND A MILD DETERGENT. A MILD DISINFECTANT MAY BE USED IF DESIRED.


STUBBORN MARKS MAY BE REMOVED WITH A NON ABRASIVE CREAM CLEANER.

NEVER CLEAN WITH ABRASIVE, AMMONIA BASED, BLEACH BASED OR SPIRIT TYPE CLEANERS.

THE FOOD TRAY CAN BE CLEANED WITH A DAMP CLOTH.(MIRAGE MODEL)

FABRIC CARE

- HAND WASH ONLY**
- DO NOT BLEACH**
- DO NOT TUMBLE DRY**
- DO NOT IRON**
- DO NOT WRING**
- DO NOT DRY CLEAN**



PARTS LIST



WHEN YOU OPEN YOUR STROLLER CARTON PLEASE ENSURE YOU HAVE ALL THE ITEMS:

- 1. STROLLER REVERSIBLE HANDLE**
- 2. BOOT COVER**
- 3. STROLLER SEAT**
- 4. SEAT BUMPER**
- 5. TETHER STRAP**
- 6. 4-ALL SWIVEL WHEELS**

ASSEMBLY INSTRUCTIONS

ASSEMBLE THE FRAME



1. REMOVE THE STROLLER FROM THE BOX.
START WITH THE STROLLER SEAT (NO.3)
PULL THE LOCKING CLIP (AS SHOWN IN THE IMAGE)
TO RELEASE THE STROLLER.

2. ONCE THE CLIP IS RELEASED YOU
SHOULD START TO PULL THE
FOOTREST AWAY FROM THE HOOD
(AS SHOWN)



3. ENSURE THAT THE LOCKING
MECHANISM SNAPS INTO PLACE.
YOU SHOULD HEAR IT CLICK.



4. REPEAT ON THE OTHER SIDE
ENSURE THAT THE LOCKING
MECHANISM SNAPS INTO PLACE.
YOU SHOULD HEAR IT CLICK.



5. THE ASSEMBLED
FRAME

ASSEMBLY INSTRUCTIONS

INSERTING THE WHEELS.



INSERT ONE WHEEL AT A TIME.
AT THE TOP OF EACH WHEEL THERE IS AN OPENING.
THESE OPENINGS ARE TO GO ON EACH OF THE 4 ENDS OF THE SEAT.



PUSH THE WHEELS INTO PLACE.
ENSURE YOU HEAR A CLICK.
PULL ON THEM BEFORE YOU USE THEM TO ENSURE
THEY ARE LOCKED SECURELY.

TO REMOVE EACH WHEEL PUSH THE PIN IN.



ASSEMBLY INSTRUCTIONS

ATTACHING THE HANDLE:

WE ARE GOING TO ATTACH PART (1)
HANDLE TO THE SEAT FRAME.


THERE ARE 2 OPENINGS ON EACH SIDE
OF THE SEAT WHERE THE ENDS OF THE
HANDLE WILL SLIDE IN.



ENSURE THE HANDLE IS
INSTALLED LIKE THIS



THERE IS A BUTTON WHICH WILL LOCK THE HANDLE INTO PLACE

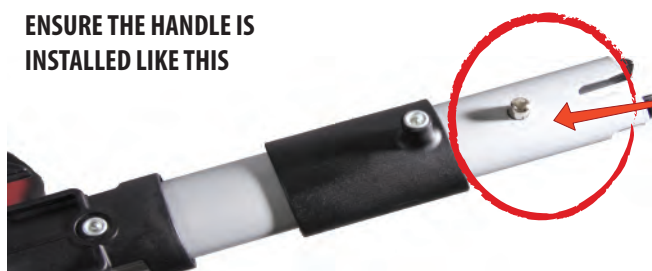

SLIDE THE HANDLES INTO EACH SIDE AND DEPRESS THE BUTTONS.
WHEN THEY ARE DEPRESSED SLIDE THE HANDLE DOWN UNTIL
YOU HEAR THEM CLICK INTO PLACE.
PULL ON THE HANDLE TO MAKE SURE IT IS LOCKED IN.
REPEAT ON THE OTHER SIDE.



LOOP THE STRAP



ATTACHING THE TETHER STRAP

LOOP THE STRAP THOUGH THE OPENING.
UNTIL IT IS TENSIONED.
IT SHOULD LOOK LIKE THIS.

WARNING
USE THIS STRAP TO STOP THE
STROLLER ROLLING AWAY



ASSEMBLY INSTRUCTIONS

ATTACH THE FRONT BAR:



AT THIS POINT WE WILL BE INSERTING THE SEAT BUMPER (4) ONTO THE FRAME.



INSERT THE BAR (4) ONTO THE FRAME OF THE SEAT.
ENSURE THAT IT CLICKS INTO PLACE.
(PULL ON IT TO MAKE SURE IT IS ASSEMBLED CORRECTLY)



TO RELEASE THE BAR.
PRESS THE BUTTON LOCATED ON EACH SIDE OF THE SEAT.
THEN LIFT THE BAR OUT.



ASSEMBLY INSTRUCTIONS

ATTACHING THE BOOT COVER:



WE WILL NOW ATTACH THE BOOT COVER (2) (IF REQUIRED)
SLIDE THE CLOSED END OVER THE FOOT REST OF THE PRAM.
ATTACH THE TOP WITH THE PRESS STUDS WHICH LOOP
AROUND THE FRAME (NOT THE HANDLE) AND THEN LOCK
INTO PLACE.
REPEAT ON THE OTHER SIDE.



THE ASSEMBLED BOOT COVER SHOULD LOOK LIKE THIS



HOW TO USE

HOW TO LOCK THE WHEELS/USE ALL SWIVEL MODE:

ALL THE WHEELS CAN BE FIXED OR USED IN ALL SWIVEL MODE.
TO HAVE THE WHEELS IN A FIXED MOTION PULL UP THE
PLASTIC LEVER ON THE FRONT OF EACH WHEEL AND ALIGN
IT WITH THE OPENING..
THIS SHOULD LOCK THE WHEELS.

TO USE THE WHEELS IN SWIVEL MODE PUSH THE LEVER
DOWN. THE WHEELS SHOULD BE ABLE TO BE MOVED IN
ALL DIRECTIONS.



HOW TO USE THE BRAKES:



TO RELEASE THE BRAKES:
PUSH THE LEVER UP



**PUT ON ALL BRAKES WHENEVER
YOU PARK THE STROLLER**



NOTE:

**WHEN CHANGING THE DIRECTION
OF THE HANDLE. PLEASE ENSURE
THAT THE BRAKE ENDS ARE IN THE
SAME DIRECTION OF THE HANDLE.**



HOW TO USE

HOW TO USE THE REVERSIBLE HANDLE:



LIFT BOTH LEVERS LOCATED ON THE SIDES OF THE HANDLE UPWARDS. THEN PUSH THE HANDLE IN THE DIRECTION DESIRED. THE HANDLE SHOULD SNAP INTO A HOLDER WHERE IT WILL LOCK INTO POSITION. TEST THE HANDLE BEFORE BEFORE USING.



FORWARD
FACING
POSITION



REAR
FACING
POSITION

HOLDER POSITIONS

HOW TO USE

HOW TO FOLD THE STROLLER:

FORWARD
FACING
POSITION



STEP 1.
MAKE SURE THE STROLLER
IS IN THE FORWARD FACING
POSITION BEFORE YOU
BEGIN TO FOLD

STEP 2.
ON THE HANDLE THERE ARE
2 LEVERS.
1. PRESS DOWN ON THE UPPER
LEVER AND
2. PUSH UP ON
THE LOWER LEVER
SIMULTANEOUSLY



STEP 3.
PUSH THE HANDLE FORWARD.
WITH THE SAME HAND YOU USED TO
DEPRESS THE LEVERS PUSH THE
SAFETY LOCK TOWARDS THE
FRAME WITH YOUR THUMB.
THEN CONTINUE TO PUSH THE
HANDLE FORWARD UNTIL IT
CLICKS AND IS LOCKED.



STEP 4.
MAKE SURE THAT THE LOCK IS
WORKING. GIVE IT A SLIGHT
TUG TO ENSURE IT IS LOCKED.



STEP 5.
YOU CAN CARRY THE STROLLER
WITH THE HANDLE ON THE SIDE.



HOW TO USE

HOW TO ADJUST THE BACKREST:

THIS STROLLER HAS 4 DIFFERENT POSITIONS FOR LAYBACK. IN ORDER TO ADJUST THE STROLLER TO THE POSITION REQUIRED YOU MUST LIFT THE REAR LEVER UP. WHEN THE LEVER IS UP YOU CAN PUSH DOWN OR UP TO GET THE DESIRED POSITION REQUIRED. MAKE SURE CHILD IS NOT IN THE SEAT WHEN YOU ARE CHANGING THE POSITION.



HOW TO USE ADJUST THE LEG REST:



STRAIGHT POSITION

THE LEG REST CAN BE EITHER IN THE STRAIGHT POSITION OR IN THE LOOSE POSITION. TO ADJUST THE LEG REST YOU MUST PUSH THE LEVER DOWN ON BOTH SIDES. IF IN THE STRAIGHT POSITION ENSURE YOU HEAR IT CLICK.



LOOSE POSITION

HOW TO USE

HOW TO USE THE 5-POINT HARNESS:



TO RELEASE THE HARNESS


THIS STROLLER HAS BEEN DESIGNED WITH A 5-POINT HARNESS FOR THE SAFETY OF YOUR CHILD.

CAREFULLY PLACE YOUR CHILD INTO THE SEAT AND BRING THE SAFETY HARNESS AROUND THE CHILDS WAIST AND OVER THE CHILDS SHOULDERS. PLACE THE CROTCH STRAP BETWEEN YOUR CHILDS LEGS. TIGHTEN THE HARNESS TO BE SNUG AROUND THE CHILDS WAIST AND OVER ITS SHOULDERS.

ATTACH EACH OF THE SHOULDER STRAPS TO THE CROTCH STRAP BUCKLE WITH EACH END. REPEAT THIS FOR BOTH SHOULDER STRAPS. ONCE EACH SHOULDER STRAP IS ATTACHED ON THE WAIST BUCKLE INSERT THE WAIST STRAP END TO THE BUCKLE. REPEAT FOR BOTH SIDES. THEY SHOULD SNAP IN. (PULL ON THEM TO TEST) TO RELEASE THE HARNESS SQUEEZE THE CENTRE OF THE BUCKLES FOR BOTH WAIST STRAP ENDS.

YOUR CHILD SHOULD BE SECURELY HARNESSSED AT ALL TIMES AND SHOULD NEVER BE LEFT UNATTENDED

⚠ WARNING
USE THIS HARNESS AT ALL TIMES

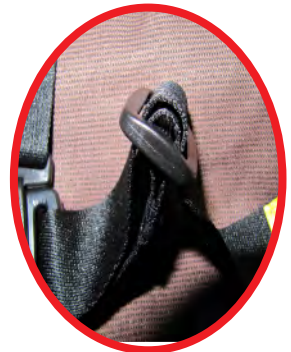

ADJUST THE STRAP TO BE SNUG



ATTACH EACH SHOULDER STRAP END TO WAIST BUCKLE



ATTACH WAIST STRAP ENDS INTO THE BUCKLE.

HOW TO USE THE FOOT REST:

THE FOOT REST CAN BE USED EITHER UPWARDS (FOR MORE SPACE FOR YOUR FEET), OR WITH THE FOOT REST DOWN (TO REST YOUR FEET). FOR UPWARDS JUST LIFT IT UP. FOR DOWNWARDS PULL IT DOWN.



FOOT REST UPWARDS



FOOT REST DOWN WARDS



Contact Us

Head Office:

Love N Care Pty Ltd.
297-299 Canterbury Rd, Revesby
NSW 2212 Australia
Contact No: 02 9774 4655
Fax: 02 9774 4633
Email: info@lovencare.com.au
Website: www.lovencare.com.au

Western Australia

5 Modal Crescent
Canning Vale WA 6155 Australia
Contact No: 08 9455 4972
Fax: 08 9455 4728

Brisbane

7-9 Eileen Street
Underwood QLD 4119 Australia
Contact No: 07 3290 4217
Fax: 07 3209 5019

Ireland

DMG House
Deansgrange Industrial Estate
Deansgrange Co. Dublin
Phone: +3531 2190254
Fax: +3531 2802734
Website: www.lovencare.ie