


love^hcare™

ridengo

Ride on seat & Board

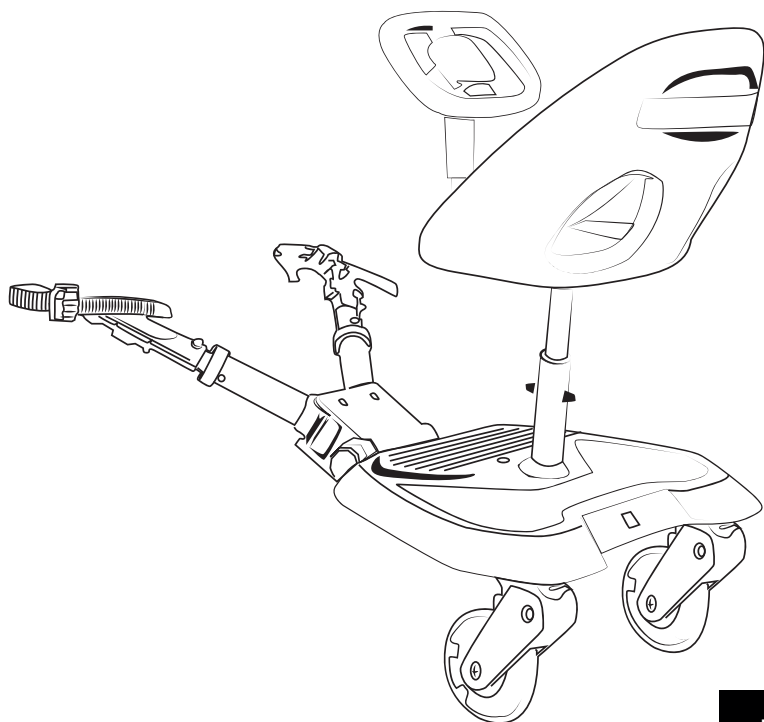

BP RIDENGO



up to 20kg

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

IMPORTANT! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.



WARNING!



This product complies with EN 71-1:2014+A1:2018; EN 71-2:2020; EN 71-3:2019+A1:2021

Important: Please read the following instructions carefully before assembling this product. Retain this guide in a safe place for future reference. Please refer to your pram or pusher's manufacturer's instructions to ascertain the suitability of using the product with your model. Some prams and strollers are not suited to bearing additional loads and use of the product may void your pram or stroller's warranty.

This product is designed for children upwards of 15 months and up to a maximum weight of 20 kg. In order to guarantee the safety and functionality of the device, avoid any overloading and under no circumstances use it for transporting other items.

WARNING Never leave your child unattended.

WARNING Your child must step off the stroller board before you attempt to: Go up or down stairs, steps, kerbs or escalators, go backwards, go around sharp turns, use the board on rough or uneven ground, go onto soft surfaces eg, snow, sand, mud and grass.

WARNING An adult must hold the stroller handles tightly with both hands at all times.

WARNING Make sure your child is standing with both feet on the board before pushing the stroller.

WARNING Check all connectors, arms and the wheels of the stroller board as well as the stroller before using it, and ensure that all connectors and mechanisms are tightened prior to use.

WARNING In the event of damage to any component of the product discontinue use immediately. Only use original replacement parts provided by the manufacturer.

WARNING The use of the product is only recommended if there is a child in the pram body, or if the Pram handles are firmly secured by an adult.

WARNING Never let children play with the stroller board. When not in use store away from children's access,

WARNING Always disconnect your stroller board before folding the stroller. In some models you may need to disassemble the connectors as well.

WARNING The product is intended for one passenger.

WARNING Do not use the product until your child can walk independently and without help. Children must only be transported on the foot-board in a standing position.

WARNING The board is only designed to be used if there is a child in the stroller.

WARNING The board must never be attached to the brakes, to any non-loadbearing elements, or any moving parts of the stroller.

WARNING Any alterations to the product may cause the product to malfunction and render it unsafe. It will also void any warranties.

Please keep the plastic packing away from children or dispose of it as there is a risk of suffocation.

Please refer to your pram or pusher's manufacturer's instructions to ascertain the suitability of using the board with your model. Some prams and strollers are not suited to bearing additional loads and use of the board may void your pram or stroller's warranty.

Please keep the plastic packing away from children or dispose of it as there is a risk of suffocation.

This product is intended for domestic use only. It is not intended for commercial use.

There may be prams, strollers and buggies which are not suitable for use with the board, as they cannot provide a secure connecting structure for latching the board onto. Please consult with your product vendor for more information.

Due to our policy of continuous product development, this product is constantly evolving. It is possible that some features or procedures outlined here have changed since this document was written. If you are unsure of any procedure shown here, please contact us via the web at info@lovenecare.au to obtain the most up to date information before use. Include the batch number, which can be found on a sticker on the frame.

All pictures and diagrams herein are provided for illustration purposes only. Actual product, colour or fabric may vary. Love N Care reserves the right to modify or alter any specification or colour without notice or obligation to modify any product previously purchased

CARE AND MAINTENANCE

To ensure your ride-on board stays safe, smooth, and ready for every adventure, please follow the care and maintenance guidelines below:

Cleaning

- Wipe down regularly using a damp cloth and mild soap.
- Avoid harsh chemicals, bleach, or abrasive cleaners, as these can damage the surface or reduce grip.
- For wheels and joints, use a soft brush or cloth to remove dirt, sand, or debris—especially after visits to parks and playgrounds.

Wheels & Moving Parts

- Check wheels frequently for wear, cracks, or buildup that may affect performance.
- If the wheels begin to squeak or feel stiff, apply a small amount of silicone-based lubricant to the axle or rotating parts. Do not use oil-based products, as they may attract dust.
- Ensure all fasteners and quick-release mechanisms are firmly secured before each use.

Attachment System

- Inspect clips, straps, adaptors, and connectors regularly to ensure they are tight and undamaged.
- If any part feels loose or does not lock securely to the stroller, stop using immediately and refer to the manufacturer for replacement parts.

Storage

- Store indoors in a dry, cool place when not in use.
- Avoid prolonged exposure to direct sunlight, rain, or extreme temperatures, which can cause fading or material fatigue.
- If transporting in a car boot or overhead compartment, ensure it is secured to prevent bending or damage.

Routine Safety Check (Recommended Before Each Use)

- ☐ Board securely attached
- ☐ Wheels spin freely
- ☐ No loose screws or clips
- ☐ Standing surface clean and dry

With regular care, your stroller ride-on board will stay reliable, comfortable, and ready to roll—mile after mile!

Warranty Against Defects

All Love N Care products are guaranteed for twelve months from the date of purchase. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage.



You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. This covers against faults which develop through faulty materials and workmanship.



Misuse, accidental damages, normal wear and tear or neglect are not covered. If a fault becomes apparent, please return the item to the store of purchase with your receipt. You must inform the store what the defect is. We will then arrange for its repair or it will be assessed for replacement as expediently as possible. The benefits of this warranty are in addition to other right and remedies under the law in relation to the goods or services to which this warranty relates.

If you are unable to return the item to the store of purchase, you can contact Love N Care on free call 1300 732 599. Where you send the product directly to the manufacturer then you may be liable for the costs of transportation to and from Love N Care. Love N Care will meet the reasonable expenses incurred by a consumer in a making a warranty claim. You can claim expenses incurred in making a claim by contacting our customer service team on 1300 732 599 or by email at info@lovenccare.au



Congratulations on purchasing your new Ride N Go Board.
In almost no time you should be able to have this one of a kind Ride on Board ready to meet your beautiful child :)
Please take a few moments to read this instruction manual on how to assemble and use your ride on board correctly so you can rest assured that your little one is Safe N Secure.

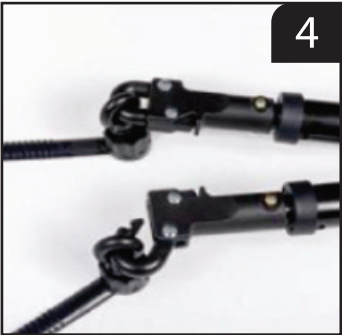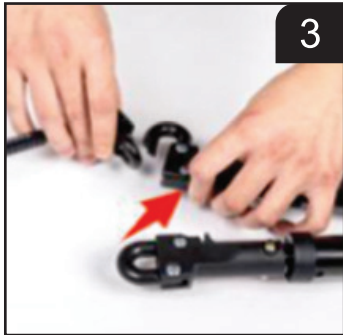

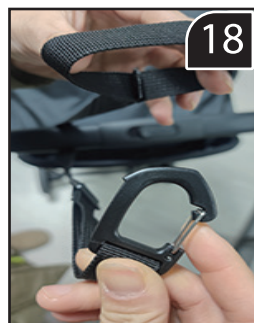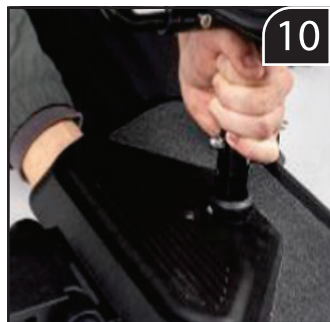


PRODUCT PARTS AND FEATURES

- | | | |
|-----------|--|--|
| I | <ol style="list-style-type: none">1. Large Seat/Backrest2. Adjustable Armrest - Up and Down3. Adjustable Armrest - Forward and backward4. Clamping Bracket5. Adjustable length joint | <ol style="list-style-type: none">6. Angle Adjustment7. Non-Slip Board8. luminous Wheels9. Adjustable Height Rod10. Adjustable safety Buckle |
| II | <ol style="list-style-type: none">1. Clamping Brackets x22. Main Body3. Wheels x24. Seat and Belts5. Connection Device | <ol style="list-style-type: none">6. Armrest7. Seat Support8. Tools and Screws for assembly9. Storage Strap10. Seat holder Screw |

ASSEMBLY INSTRUCTIONS

- III**
1. Attach the two connection devices (5) to the ends of the main body (2). Each is marked left and right. Insert Screws into the open holes.
 2. Tighten the screws with the screwdriver (8)
 3. Unlock the connection device by pressing on the release latch on each side of the connection device (5).
 4. Place the clamping Bracket (1) into the connection device (5) then close it and make sure it locks into place. Tug on it to make sure its secured and locked.
 5. Attaching the Armrest (6) to the Seat Support (7)
 6. Slot the Armrest (6) into the seat support (7) by pressing on the push button and clicking the armrest into the desired position. Tug on the armrest to make sure it is assembled.
 7. Place the seat (4) on top of the assembled armrest (6) and seat support (7) from step 6. Place the short screws to the front of the seat holes and place the long screws on the back section. The screws should go from the holes on the seat to the assembled seat support.
 8. Tighten the screws using the screwdriver (8)
 9. The seat should now be assembled.
- IV**
10. Place the assembled seat (step 9) into the groove on the main body (2). If the groove is covered you would need to unscrew it until the slot is opened.
 11. Once the assembled seat is on the main body (2) turn the cog to screw the seat to the main body.
 12. Place the hex bolt through the assembled seat once the desired level is selected. Once the level is selected then connect the dome nut on the opposite side and screw it onto the grooves.
 13. Use the Hex Screwdriver and wrench (8) to tighten.
 14. Place the 2 wheels (3) into the iron pins on the bottom of the main body (2)
 15. Tighten the wheels otherwise the seat will shake.
 16. The connectors/ Clamping brackets (1) can be attached either directly to the stroller chassis or to the rear bar of the stroller. Once the location is selected wrap the strap around the frame and then feed the end of the strap into the opening on the clamping bracket. Then turn the spindle clockwise to tighten. Repeat for both sides. To remove just turn the spindle anti clockwise and remove the strap from the clamping bracket.
 17. The stroller board is now affixed to the stroller.
 18. The storage strap (9) allows the board to be stowed when not in use. Before use open the loop of the strap and feed the clip through.
 19. Wrap the strap around the handle bar of the stroller until it is attached as shown. When the board is being stowed you can clip the board on the hole on the back.

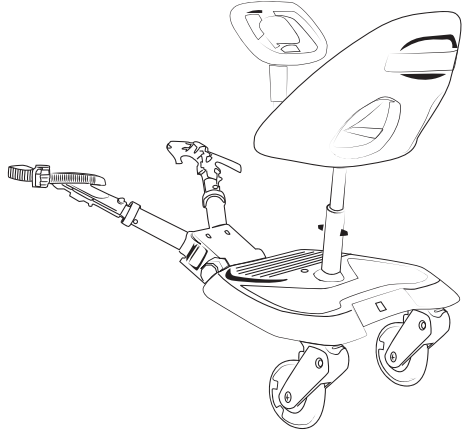

ride^hngo

Ride on seat & Board

love^hncare™

Love N Care Pty Ltd.
297-299 Canterbury Rd, Revesby
NSW 2212 Australia
Contact No: 02 9774 4655
Fax: 02 9774 4633
Email: info@lovencare.au
Website: www.lovencare.au



[/lovencare1](#) [/lovencare.au](#) [/@LoveNcare_au](#)