


loveⁿcare™



complete bassinet
Instruction manual HK F250
Please keep instructions for future reference

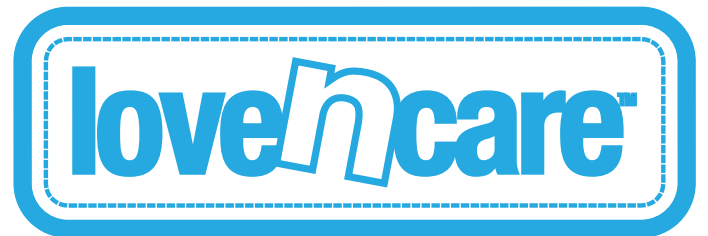

Congratulations on Purchasing
your new Love N Care basinet.

Within no time you should be able
to have this furniture ready to
meet your beautiful child :)





Safety guidelines and instructions must always be followed before making use of this product, please retain these instructions for future reference.

WARNING

WARNING: TO AVOID INJURY OR DEATH:

FOLLOW THE MANUFACTURER'S INSTRUCTIONS.

ALWAYS APPLY THE BRAKES WHENEVER THE BASSINET IS STATIONARY.
THE BASSINET MUST BE PLACED ON A FLAT SURFACE.

THE MAXIMUM WEIGHT FOR THE BASSINET IS 9KG

THE MAXIMUM WEIGHT FOR THE BASKET IS 6KG

THE MAXIMUM TOTAL WEIGHT FOR THE BASSINET AND BASKET IS 15KG OR UNTIL THE CHILD CAN SIT UP

It is unsafe to use accessories other than those supplied or approved by Love N Care.

- DISCONTINUE USING THIS BASSINET ONCE THE CHILD CAN SIT UP OR IF A PART IS BROKEN
- USE ONLY THE MATTRESS SUPPLIED BY THE MANUFACTURER
- INCORRECT MATTRESS CAN CAUSE DEATH
- ENSURE THAT PROPER VENTILATION IS MAINTAINED IN AND AROUND THE BASSINET BY LIMITING PILLOWS, TOYS ETC...
- ENSURE THE BASSINET IS PLACED AT A REASONABLE DISTANCE FROM CURTAINS, BLINDS, HEATERS AND POWER POINTS.
- KEEP MEDICATION, STRING, ELASTIC, SMALL TOYS OR SMALL ITEMS SUCH AS MONEY OUT OF REACH FROM ANY POSITION IN THE BASSINET.

To reduce the risk of SIDS, pediatricians recommend healthy infants be placed on their backs to sleep, unless otherwise advised by your physician.

NEVER add a mattress, pillow, comforter, or padding.

Use ONLY the pad provided by manufacturer. If a sheet is used with the pad, use only the one provided by the bassinet manufacturer or one specifically designed to fit the dimension of the bassinet.

WARNING: TO PREVENT SUFFOCATION AND FALLS THE RECOMMENDED MATTRESS SIZE SHOULD BE 370MM WIDE X 800MM LONG AND NO MORE THAN 50MM THICK

Images used in this manual are used for display purposes only. The item may appear different to your product.

WHATS INSIDE THE BOX



WHAT SHOULD YOU HAVE INSIDE?

1. Bassinet Frame
2. Basket
3. 4 castor wheels
4. Bassinet Mattress
5. Quilt
6. Baby pillow
7. Hood
8. Mosquito Net
9. Bassinet Liner with Base



HOW TO ASSEMBLE TO OPEN UP THE BASSINET

To open the frame you should pull the frame ends away from each other.

Once they are apart you should ensure that the centre locking is locked by pressing down. Give it a tug to ensure that it is secure.

Pull the 2 chrome bars outward (as shown) so they lean against the stand. These bars will be used to support the Bassinet.

HOW TO ASSEMBLE

ASSEMBLING THE WHEELS



At the end of the Frame there is an opening to insert the 4 castor wheels.



Push in each of the wheels into the openings.

Once the wheels are secured apply some pressure. You should hear each wheel click into place. Please ensure that all wheels are secured before using. Pull on the wheels to ensure they don't fall out.



The assembled wheels on the frame should look like this



HOW TO ASSEMBLE

ASSEMBLING THE BASKET



Place each press stud around the chrome bars located on four corners.

Wrap each end of the straps around the bar and join the press studs together.



Make sure all 4 press studs are secured before using the basket.

The Assemble basket should look like this.



• The Maximum Weight for the basket is 6kg

HOW TO ASSEMBLE

ASSEMBLING THE BASSINET



You must first push the 2 chrome bars (located on the liner) to each end of the board until the liner is raised and the chrome bar end (middle section which sticks out) is placed in the opening on the base. Please ensure that the press studs are faced upwards.

Please ensure that the bars are secured to the openings by giving it a slight tug. If this is not secured, the bassinet will not stabilize.



Once the bars are inserted to the base you must then secure each of the press studs which are attached on the liner to the studs located on the base.

Each of the press studs should be pressed together. Pull on the liner slightly to ensure all are secured to the liner.

The assembled bassinet should look like this.



HOW TO ASSEMBLE

ASSEMBLING THE BASSINET



Place the bassinet on the top of the stand. Ensure that the two chrome bars are placed in the outward position.

The Bassinet should lay flat on the top of the frame between the bars.



Make sure that the material located on the bottom of the bassinet which has press studs is able to wrap around the frame. Wrap the Material around the frame and click the press studs to the Base. Repeat this on both sides to secure the bassinet. Tug on the bassinet to ensure it is stable




HOW TO ASSEMBLE

ASSEMBLING THE HOOD



Place the sides of the bassinet into the holders located on each of the sides of the bassinet frame. Push in the centre until it clicks into place. Repeat for both sides. Pull on it slightly to make sure it is secured.

Once the sides are clicked into place, snap the clips to the buttons located on the sides. They should click into place.

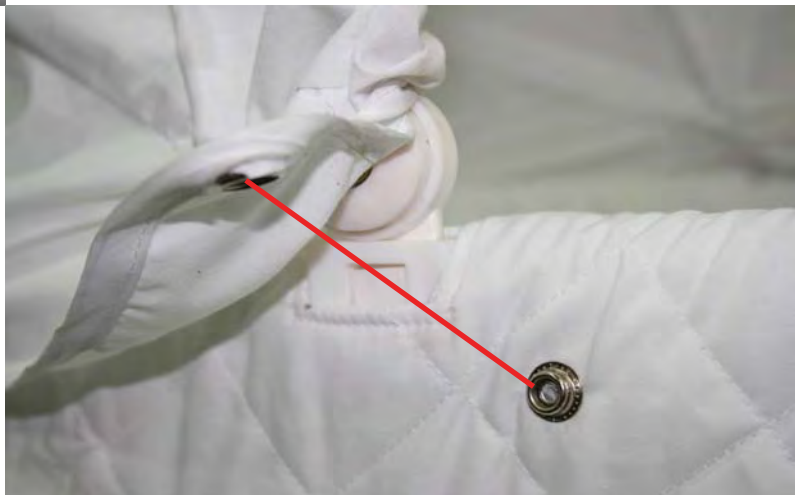

HOW TO USE

INSERTING MATTRESS, PILLOW, QUILT AND MOSQUITO NET



Once the bassinet has been assembled you must place the bassinet mattress in first then the quilt and then the pillow.

Place the mosquito net on the top of the bassinet. Make sure that the elastic mosquito net is placed around the bassinet line and around the hood.



images used for display purposes only.

! WARNING !

- **USE ONLY THE MATTRESS SUPPLIED BY THE MANUFACTURER, INCORRECT MATTRESSES CAN CAUSE DEATH**
- **Use only Accessories As Recommended By The Supplier**
- **Ensure The Top Rails And Base Are Fully Locked.**
- **Do Not Use This Cot If Any Part Of The Cot Is Broken, Torn or Missing**



HOW TO USE

Brakes



To apply the brakes push the on the end of each wheel downwards. Repeat this on all sides.

After placing the child inside the bassinet it is recommended to apply the brakes on all wheels.

To release the brakes push the lever upwards. In order to move the bassinet from one place to another release the brakes.



HOW TO FOLD



You must first release the press studs which are holding the bassinet to the frame

Remove the mattress, quilt and pillow from the bassinet. You can remove the press studs if you would like to wash the liner but it is not necessary to remove the liner here. Release the 2 chrome bars from the base by raising them up.



The bassinet should now be flat.



**Next we can remove the basket from the frame.
Release the press studs from the frame.**

Raise up the middle section of the frame and push the two frame ends to close the frame.



CLEANING AND MAINTENANCE

ALL LOVE N CARE PRODUCTS HAVE ONE YEAR WARRANTY FROM THE DATE OF PURCHASE.

IT IS RECOMMENDED TO REGULARLY INSPECT AND MAINTAIN MOVEMENT OF LOCKING DEVICES AND SECURITY OF ESSENTIAL COMPONENTS.

REGULARLY CHECK ALL PARTS FOR WEAR AND TEAR.

DO NOT USE SPRAY LUBRICANTS, SIMPLY WIPE CLEAN AFTER USE.

NEVER CLEAN WITH ABRASIVE, AMMONIA BASED, BLEACH BASED OR SPIRIT TYPE CLEANERS.

IF THE WHEELS BECOME DAMAGED OR WORN DISCONTINUE USE AND REPLACE.

RECOMMENDED TO WASH MATTRESS WITH DAMP CLOTH ONLY.

THE STAND CAN BE CLEANED WITH A DAMP CLOTH.

**FABRIC - 35% COTTON
65% POLYESTER
FILLING - 100% POLYESTER**

WASHING INSTRUCTIONS

Bassinet and canopy:

Hand wash, warm (50°C). Wash separately. Use bleach-free detergent. Do not iron. Do not dry clean. Do not tumble dry.



Mattress cover and pillow:

Hand wash (50°C). Use bleach-free detergent. Do not dry clean. Do not Iron. Do not tumble dry.



Warranty against defects

All Love N Care products are guaranteed for twelve months from the date of purchase.

Our goods come with guarantees that cannot be excluded under the Australian consumer law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This covers against faults which develop through faulty materials and workmanship. Misuse, accidental damages, normal wear and tear or neglect are not covered.

If a fault becomes apparent; please return the item to the store of purchase with your receipt. You must inform the store what the defect is. We will then arrange for its repair or it will be assessed for replacement as expediently as possible. The benefits of this warranty are in addition to other rights and remedies under the law in relation to the goods and services to which this warranty relates.

If you are unable to return the item to the store of purchase, you can contact Love n care on freecall 1300732599. We will then organise for either somebody to inspect the item or arrange for a courier to pick it up and return it back to you.

Love N Care Pty Ltd
297-299 Canterbury Rd, Revesby
NSW 2212 Australia
Contact No: 02 9774 4655
Fax: 02 9774 4633
Email: info@lovencare.com.au
Website: www.lovencare.com.au

loveⁿcare™



Contact Us

Head Office:

Love N Care Pty Ltd.
297-299 Canterbury Rd, Revesby
NSW 2212 Australia
Contact No: 02 9774 4655
Fax: 02 9774 4633
Email: info@lovencare.com.au
Website: www.lovencare.com.au

Brisbane

7-9 Eileen Street
Underwood QLD 4119 Australia
Contact No: 07 3290 4217
Fax: 07 3209 5019

let's be friends!

 <http://www.facebook.com/lovencare1>

 http://twitter.com/love_ncare



100 % AUSTRALIAN OWNED SINCE 1984

lovehncare™
lovencare.com.au