


# love<sup>h</sup>care™

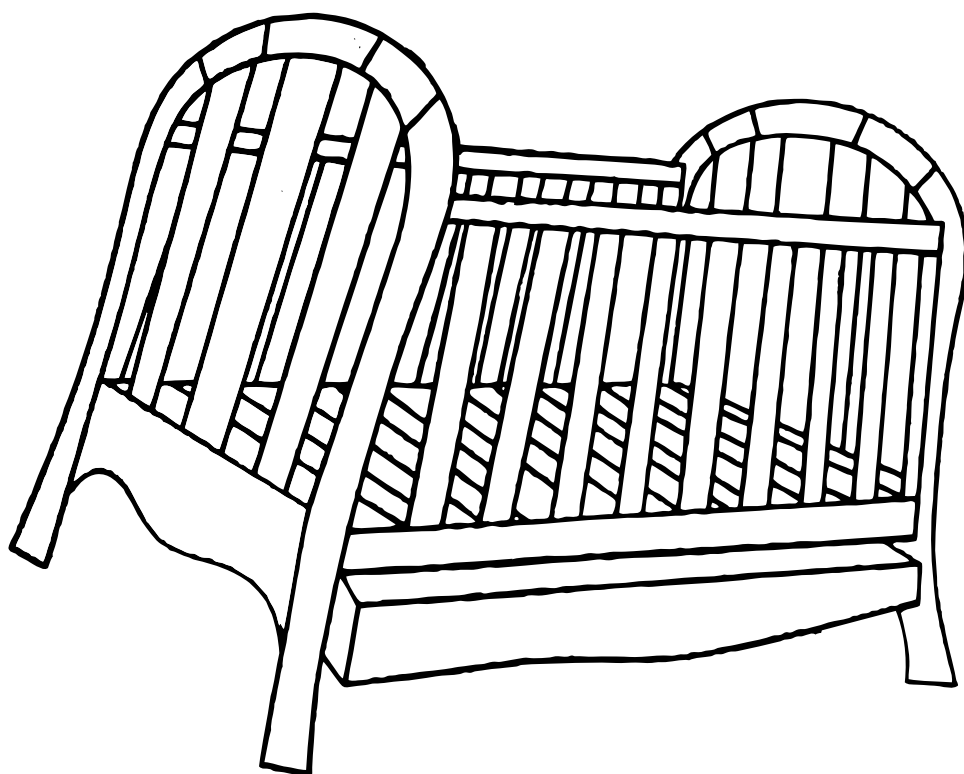

## DLX EURO COT

### CEC 2100

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE


# love<sup>n</sup>care™

Congratulations on your new quality Love N Care product from our exclusive range of baby products. This exceptional design combines the most unique features that any baby product offers.

We are confident that you will appreciate its many highlights, including its reliability and durability. Your new product has been manufactured to comply with the Highest Quality Standards and comes with a 12-month warranty.

As you will soon learn there are many more great features about your new Love N Care product.



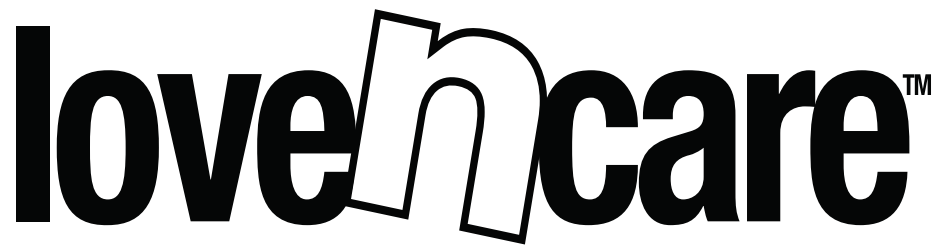

Safety guidelines and instructions must always be followed before making use of this product, please retain these instructions for future reference.

This product complies with product standard:

AS/NZS 2172:2003 Cots for household use - Safety Requirements

## WARNING

This cot has been designed for a child up to 25kg

Do not leave your child unattended when the dropside is in the lower position

**RECOMMENDED MATTRESS SIZE:** This cot has been manufactured for use with a mattress which measure 760mm wide by 1310mm long and 100mm in thickness.

The width and length are specific because it is important that the gaps between the mattress and the sides and ends of the cot will not exceed 40mm. This is to minimize the risk of a child's limb becoming caught in the gap. The thickness of the mattress has been specified to ensure that the depth of the cot is greater than 500mm with the mattress base in the lower position to minimise the risk of a child climbing or falling out of the cot.


**WARNING TO PREVENT FALLS, THE MATTRESS BASE OF THIS COT SHOULD BE ADJUSTED TO THE LOWEST POSITION BEFORE THE CHILD CAN SIT UP.**

The manufacturer's assembly instructions must be followed in detail to ensure all the safety features of the cot are not compromised.


Please ensure that the cot is placed at a reasonable distance from curtains, blinds, heaters and power points.

Please keep medication, string, elastic, small toys or small items, such as money out of reach from any position in the cot.


**WARNING: TO PREVENT FALLS, THE MAXIMUM MATTRESS THICKNESS SHOULD NOT EXCEED 100mm.**

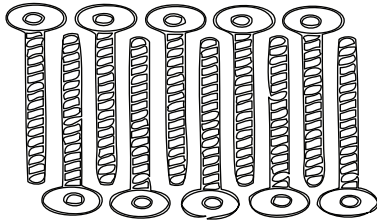


1# 6X45MM  
10PCS  
FOR DRAWER

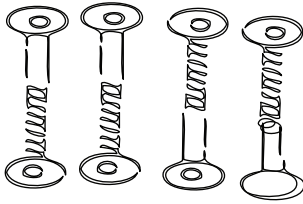


2# 6X30MM  
4 PCS  
FOR BLOCK ENDS

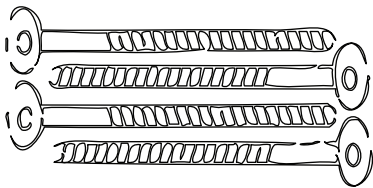


3# 6X50MM  
4 PCS  
FOR DROP SIDE

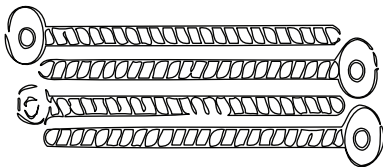

4# 6X80MM  
4 PCS  
FOR BASE


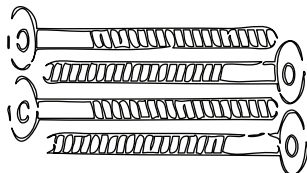


5# 6X60MM  
4 PCS  
FOR FIXED SIDE  
AND BED RAILS

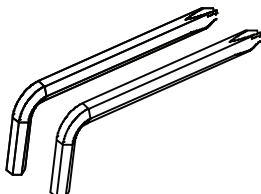

2 X ALLEN KEYS

# PARTS LIST

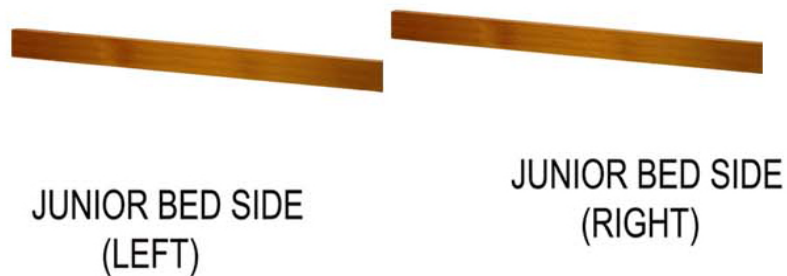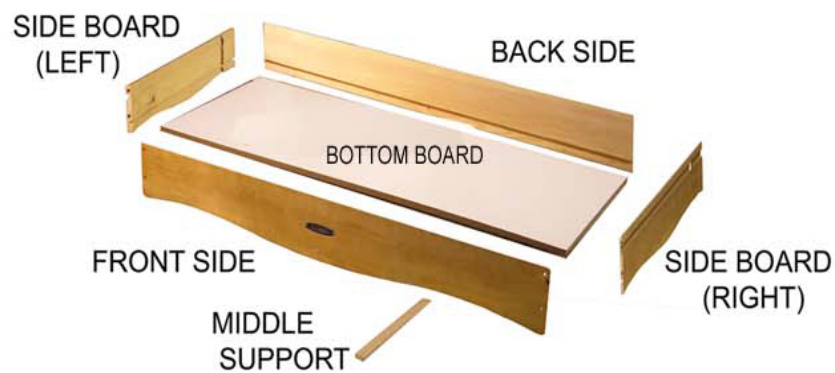

FOR JUNIOR BED

# ASSEMBLY

## ATTACH THE COT BASE TO THE COT ENDS

1. Select the appropriate base position on being either lower or upper.
  2. When the base is being used on the upper position, use the 4# bolts to fix the base on the upper holes of the cot ends. Attach the 2# BLANK ENDS to the lower holes on the cot ends to prevent fingers getting caught in the holes.
  3. When the base is being used on the lower position, use the 4# bolts to fix the base on the lower holes of the cot ends. Attach the 2# BLANK ENDS to the upper holes on the cot ends to prevent fingers getting caught in the holes. (Fig 1)
- Note: in this step, do not tighten the bolts fully.



**Fig 1**

## ATTACH THE FIXSIDE TO THE COT ENDS

4. Use four 5# Bolts to fix the FIXSIDE to the cot ends (Fig 2). Note: in this step, do not tighten the bolts fully.



**Fig 2**



**Fig 3**

## ATTACH THE DROPSIDE TO THE COT ENDS

5. Use four 3# Bolts to fix the DROPSIDE to the cot ends

## TIGHTEN THE BOLTS

6. Test the DROP SIDE for easy movement, then tighten all the bolts on the COT and retest the movement of the DROP SIDE to ensure its moving freely.



## ASSEMBLE THE DRAWER

7. Use 1# bolts to assemble the drawer (Fig 4)
8. Place the drawer on the slides and push the drawer in (Fig 5)



## TO RAISE THE DROPSIDE

1. To raise the DROPSIDE to the upper position, pull up the DROPSIDE with one or two hands. When the DROPSIDE is raised to the upper position, the locks will click into place by the spring pressure. (Fig 6)



Fig 6

## TO LOWER THE DROPSIDE

2. put one hand to one corner of the DROPSIDE and the other hand to the other corner, pull up the DROPSIDE, using both hands to press the locks inside at the same time to release the DROPSIDE down to the lower position. (Fig 7)



Fig 7

## CONVERTING TO THE LOUNGE

Remove the DROPSIDE and keep the FIXSIDE attached to the cot to convert the cot to be a lounge (Fig 10)



**Fig 10**

## CONVERTING TO THE JUNIOR BED

1. Remove the DROPSIDE and the FIXSIDE.
2. Assemble the side rails with FOUR 5# bolts (Fig 8)
3. Put the mattress to be used as junior bed ( Fig 9)



**Fig 8**



**Fig 9**





## **CARE AND MAINTENANCE**

**ALL LOVE N CARE PRODUCTS HAVE ONE YEAR WARRANTY FROM THE DATE OF PURCHASE.**

**IT IS RECOMMENDED TO REGULARLY INSPECT AND MAINTAIN MOVEMENT OF LOCKING DEVICES AND SECURITY OF ESSENTIAL COMPONENTS.**

**REGULARLY CHECK ALL PARTS FOR WEAR AND TEAR.**

**YOUR FURNITURE MAY BE CLEANED BY WIPING WITH A DAMP CLOTH AND DRYING WITH A SOFT CLEAN CLOTH. DO NOT USE ABRASIVES, BLEACH, ALCOHOL OR AMMONIA-BASED HOUSEHOLD POLISHES.**

**TAKE CARE WHEN HANDLING OR MOVING THE FURNITURE. CARELESS HANDLING MAY CAUSE DAMAGE.**

**CHECK THE COTS SCREWS AND LOCKS TO MAKE SURE THEY ARE ALL KEPT IN GOOD WORKING ORDER.**

**IF ANY OF THE PARTS ARE MISSING OR BROKEN YOU SHOULD CONTACT THE MANUFACTURER AND DISCONTINUE USING THE COT UNTIL THEY ARE REPLACED.**

## **WARRANTY AGAINST DEFECTS.**

**All Love n care products are guaranteed for twelve months from the date of purchase.**

**Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.**

**You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.**

**This covers against faults which develop through faulty materials and workmanship. Misuse, accidental damages, normal wear and tear or neglect are not covered.**

**If a fault becomes apparent, please return the item to the store of purchase with your receipt.**

**You must inform the store what the defect is. We will then arrange for its repair or it will be assessed for replacement as expediently as possible. The benefits of this warranty are in addition to other right and remedies under the law in relation to the goods or services to which this warranty relates.**

**If you are unable to return the item to the store of purchase, you can contact Love N Care on free call 1300 732 599. We will then organise for either somebody to inspect the item or arrange for a courier to pick it up and return it back to you.**



## Contact Us

Head Office:

Love N Care Pty Ltd.  
297-299 Canterbury Rd, Revesby  
NSW 2212 Australia  
Contact No: 02 9774 4655  
Fax: 02 9774 4633  
Email: [info@lovencare.com.au](mailto:info@lovencare.com.au)  
Website: [www.lovencare.com.au](http://www.lovencare.com.au)

Brisbane  
7-9 Eileen Street  
Underwood QLD 4119 Australia  
Contact No: 07 3290 4217  
Fax: 07 3209 5019

Western Australia  
5 Modal Crescent  
Canning Vale WA 6155 Australia  
Contact No: 08 9455 4972  
Fax: 08 9455 4728

let's be friends!

 <http://www.facebook.com/lovencare1>

 [http://twitter.com/love\\_ncare](http://twitter.com/love_ncare)

 100 % AUSTRALIAN OWNED SINCE 1984

**lovehncare™**  
[lovencare.com.au](http://lovencare.com.au)