


PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE



Congratulations on your new quality Love N Care product from our exclusive range of baby products. This exceptional design combines the most unique features that any baby product offers.

We are confident that you will appreciate its many highlights, including its reliability and durability. Your new product has been manufactured to comply with the Highest Quality Standards and comes with a 12-month warranty.

As you will soon learn there are many more great features about your new Love N Care product.

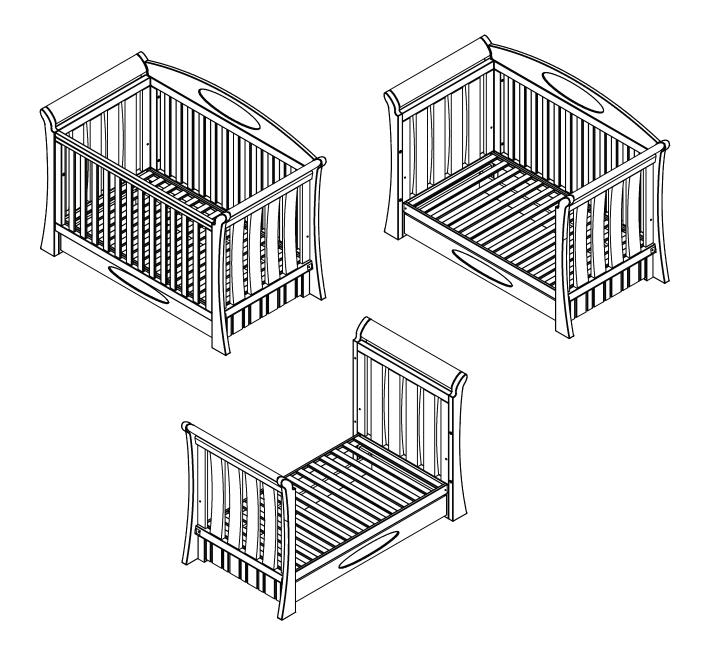



Safety guidelines and instructions must always be followed before making use of this product, please retain these instructions for future reference.

This product complies with product standard: AS/NZS 2172:2003 Cots for household use - Safety Requirements

#### 

This cot has been designed for a child up to 25kg

Do not leave your child unattended when the dropside is in the lower position

RECOMMENDED MATTRESS SIZE: This cot has been manufactured for use with a mattress which measure 760mm wide by 1310mm long and 130mm in thickness.

The width and length are specific because it is important that the gaps between the mattress and the sides and ends of the cot will not exceed 40mm. This is to minimize the risk of a childs limb becoming caught in the gap. The thickness of the mattress has been specified to ensure that the depth of the cot is greater than 500mm with the mattress base in the lower position to minimise the risk of a child climbing or falling out of the cot.

#### WARNING TO PREVENT FALLS, THE MATTRESS BASE OF THIS COR SHOULD BE ADJUSTED TO THE LOWEST POSITION BEFORE THE CHILD CAN SIT UP.

The manufacturers assembly instructions must be followed in detail to ensure all the safety features of the cot are not compromised.


Please ensure that the cot is placed at a reasonable distance from curtains, blinds, heaters and power points.

Please keep medication, string, elastic, small toys or small items, such as money out of reach from any position in the cot.

WARNING: TO PREVENT FALLS, THE MAXIMUM MATTRESS THICKNESS SHOULD NOT EXCEED 130mm.



PARTS LIST

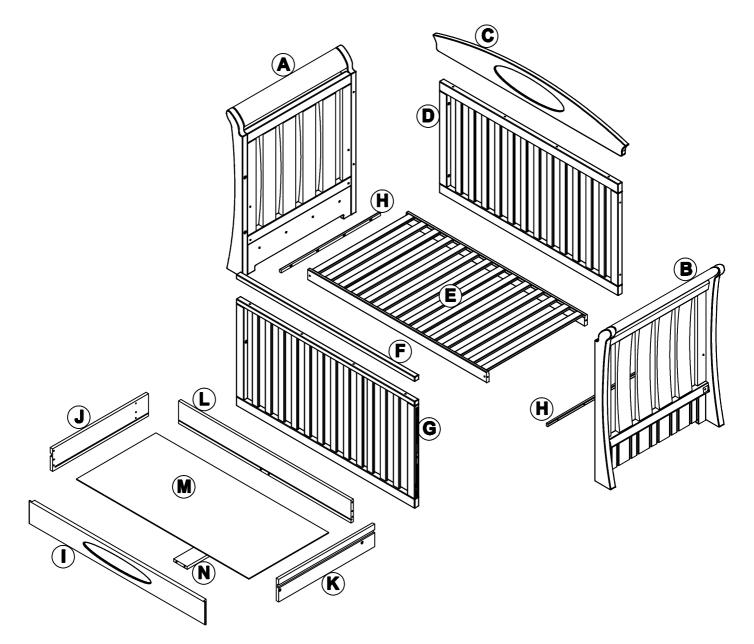


Α	Left End	1pc
В	Right End	1pc
С	Back Top Cap	1pc
D	Fixed Side	1pc
Е	Mattress Base	1pc
F	Front Top Cap	1pc
G	Drop Side	1pc

H	Support Rail	2pcs
1	Drawer Front	1pc
J	Drawer Side Left	1pc
К	Drawer Side Right	1pc
L	Drawer Back	1pc
M	Drawer Bottom	1pc
N	Drawer Bottom Rail	1pc




Step1	(1) Nail	X4	s d
Otep I	(2) M6x25mm Bolt	X8	<b>)</b>
Step2	(3) M6x38mm Bolt	X4	•
Step4	(4) Bolt	Х2	
Step5	(5) Iron Plate	X4	٦
Otehn	(6) M6x52mm Bolt	X4	0
Step6	(7) M6x67mm Bolt	X4	0
Step7	(7) M6x67mm Bolt	X4	0
Step8	(8) Ø8x25mm Wood Dowel	X4	
	(9) Nut	X2	al
Step9	(10) M6x57mm Bolt	X2	0
•	(8) Ø8x25mm Wood Dowel	X4	
	(9) Nut	X2	60
Step11	(10) M6x57mm Bolt	X2	
	(8) Ø8x25mm Wood Dowel	X4	
Mattress	(3) M6x38mm Bolt	X4	6
Tool	(11) Allen Key	X1	




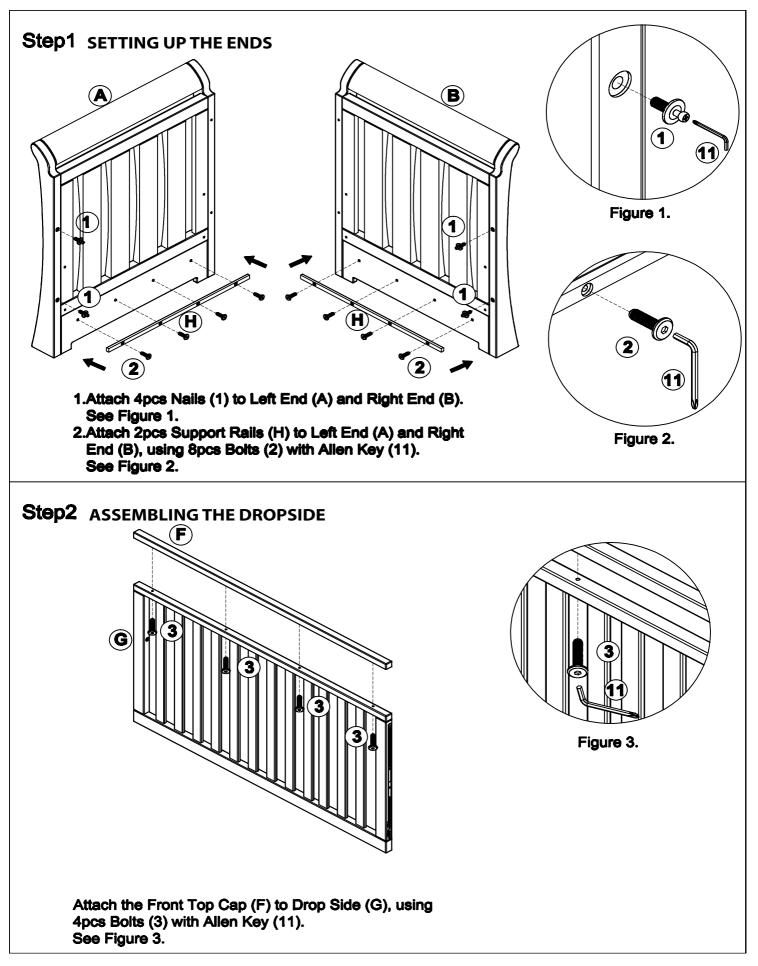




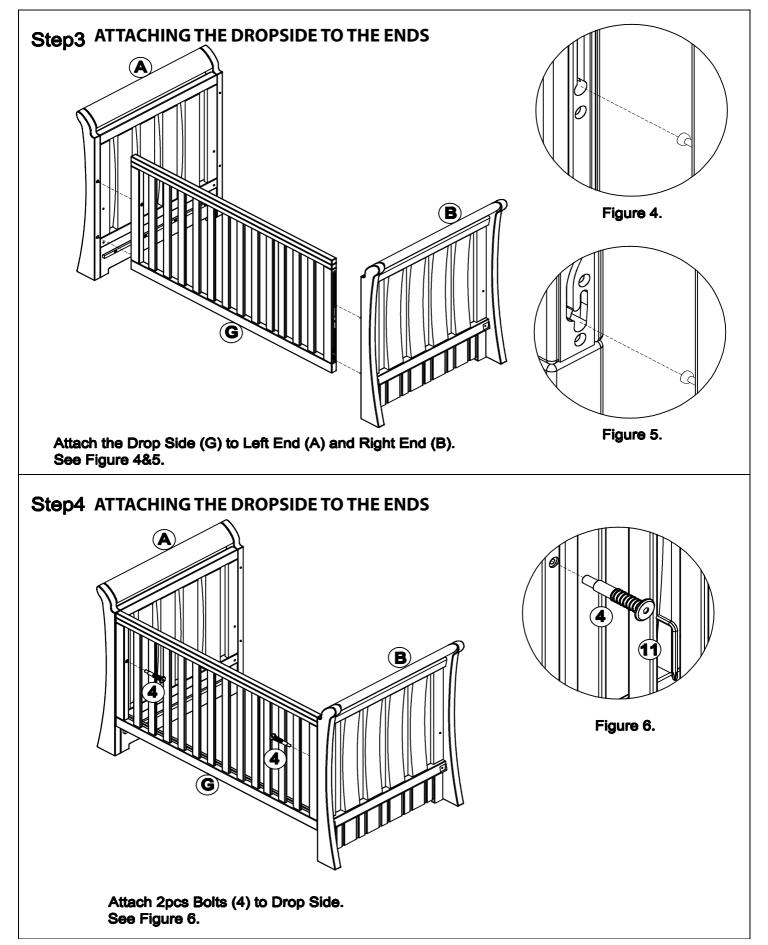




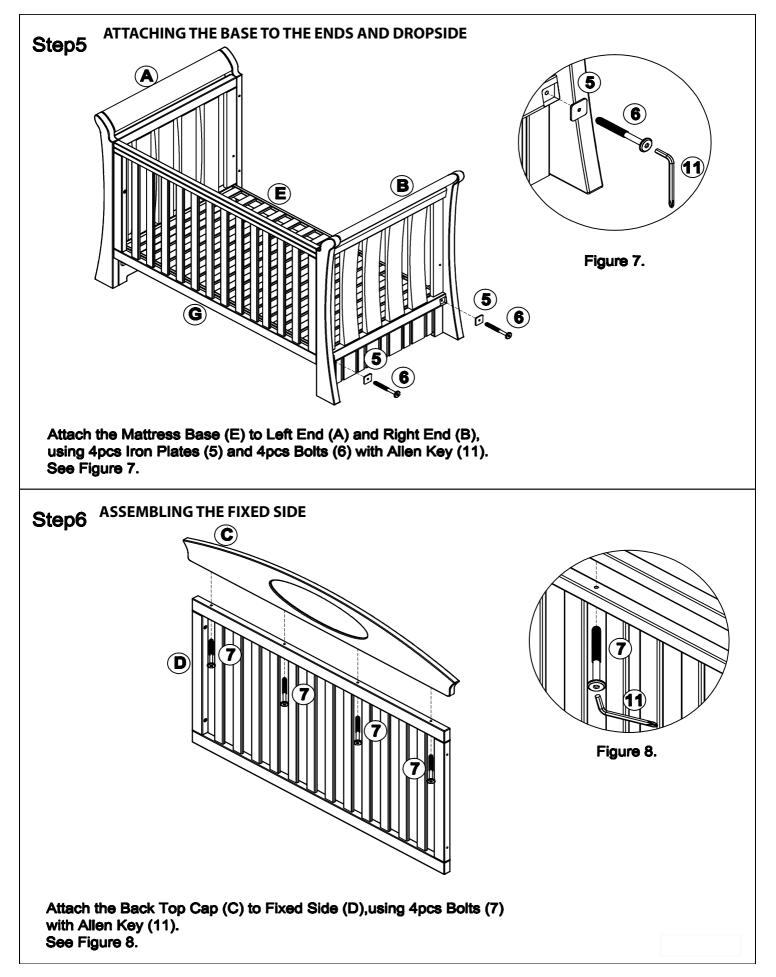




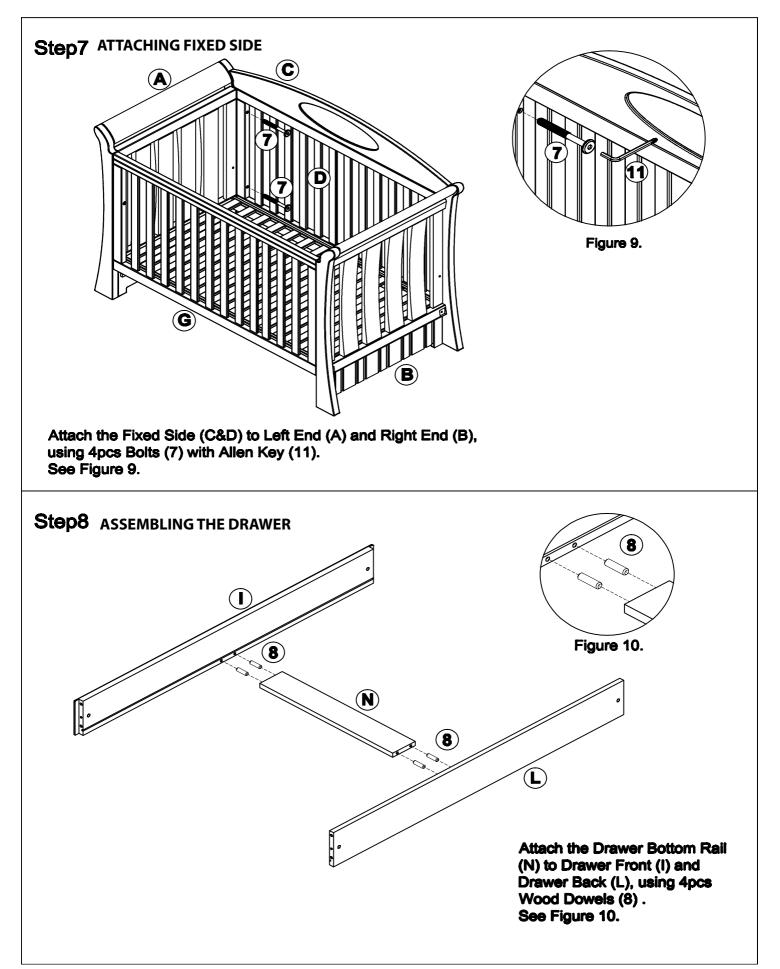



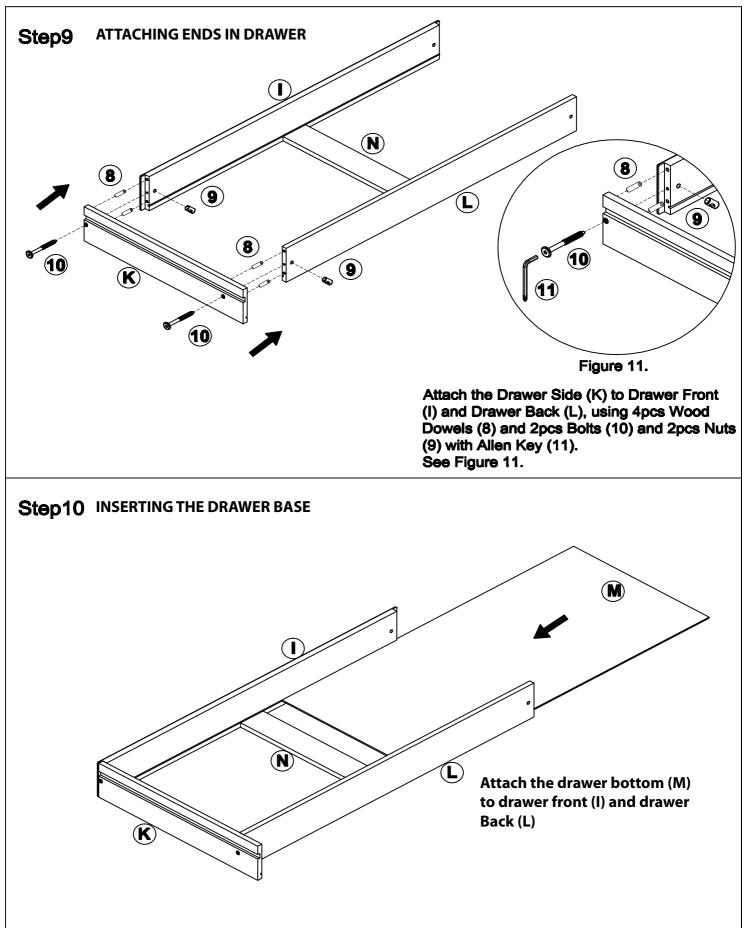



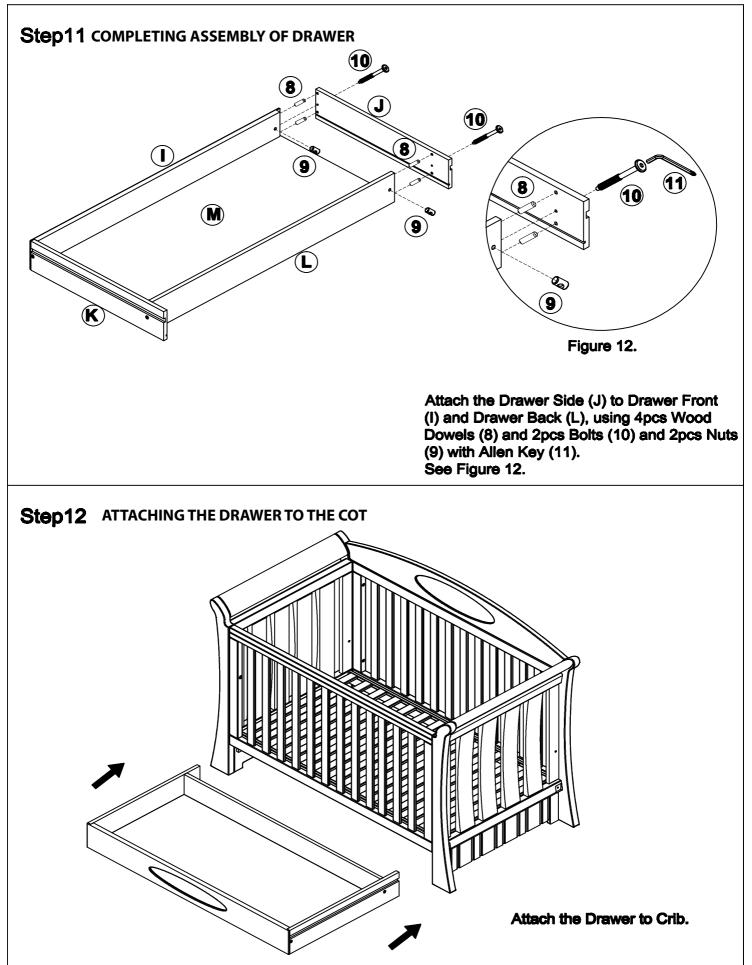




#### HOW TO ADJUST THE MATTRESS BASE Figure 13. Raise the mattress base to the highest position.Turn out the bolts that are inside the holes. See Figure 13. 3 1 3 Figure 14. 3 Attach 4pcs bolts (3) to Left & Right Sides See Figure 14. WARNING: TO PREVENT FALLS, THE MATTRESS BASE OF THIS COT

WARNING: TO PREVENT FALLS, THE MATTRESS BASE OF THIS COT SHOULD BE ADJUSTED TO THE LOWEST POSITION BEFORE THE CHILD CAN SIT UP



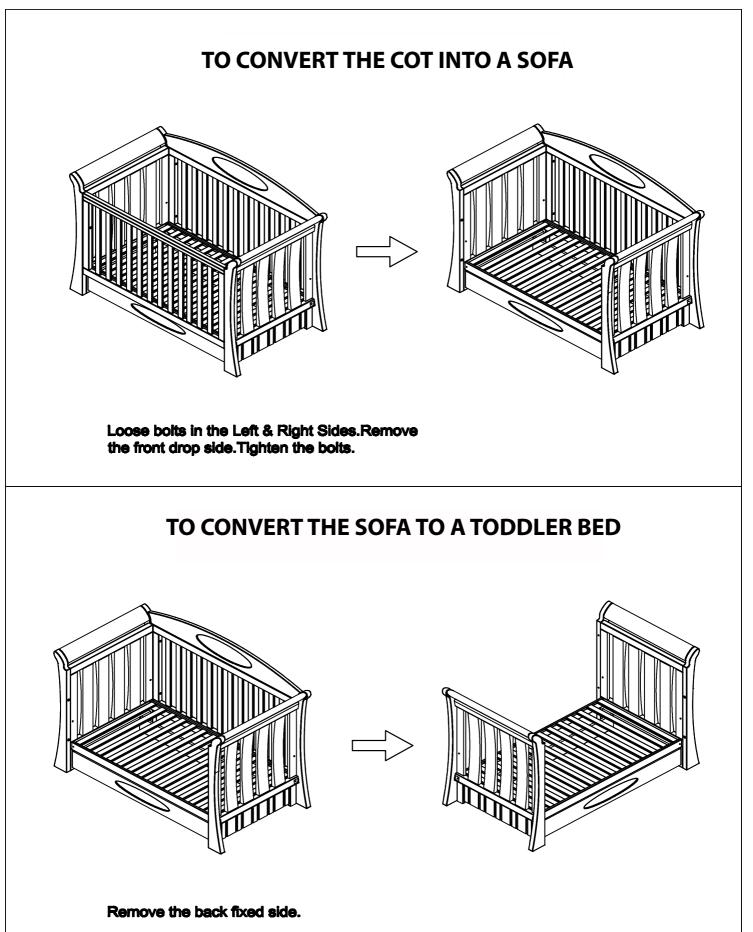



#### CARE AND MAINTENANCE

ALL LOVE N CARE PRODUCTS HAVE ONE YEAR WARRANTY FROM THE DATE OF PURCHASE.

IT IS RECOMMENDED TO REGULARLY INSPECT AND MAINTAIN MOVEMENT OF LOCKING DEVICES AND SECURITY OF ESSENTIAL COMPONENTS. REGULARLY CHECK ALL PARTS FOR WEAR AND TEAR.

YOUR FURNITURE MAY BE CLEANED BY WIPING WITH A DAMP CLOTH AND DRYING WITH A SOFT CLEAN CLOTH. DO NOT USE ABRASIVES, BLEACH, ALCOHOL OR AMMONIA-BASED HOUSEHOLD POLISHES. TAKE CARE WHEN HANDLING OR MOVING THE FURNITURE. CARELESS HANDLING MAY CAUSE DAMAGE.

CHECK THE COTS SCREWS AND LOCKS TO MAKE SURE THEY ARE ALL KEPT IN GOOD WORKING ORDER.

IF ANY OF THE PARTS ARE MISSING OR BROKEN YOU SHOULD CONTACT THE MANUFACTURER AND DISCONTINUE USING THE COT UNTIL THEY ARE REPLACED.

Manufactured By: Love N Care Pty Ltd. 297-299 Canterbury Rd, Revesby NSW 2212 Australia Contact No: 1300 732 599 Fax: 02 9774 4633 Email: info@lovencare.com.au Website: www.lovencare.com.au



#### Contact Us

Head Office: Love N Care Pty Ltd. 297-299 Canterbury Rd, Revesby NSW 2212 Australia Contact No: 02 9774 4655 Fax: 02 9774 4633 Email: info@lovencare.com.au Website: www.lovencare.com.au

Brisbane 7-9 Eileen Street Underwood QLD 4119 Australia Contact No: 07 3290 4217 Fax: 07 3209 5019

Western Australia 5 Modal Crescent Canning Vale WA 6155 Australia Contact No: 08 9455 4972 Fax: 08 9455 4728 Ireland

DMG House Deansgrange Industrial Estate

Deansgrange Co. Dublin Phone: +3531 2190254 Fax: +3531 2802734 Website: www.lovencare.ie

let's be friends!
Attp://www.facebook.com/lovencare1
http://twitter.com/love\_ncare



100 % AUSTRALIAN OWNED SINCE 1984

