

lovehncare™



maya cot

SMC 30W


PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

loveⁿcare™

Congratulations on your new quality Love N Care product from our exclusive range of baby products. This exceptional design combines the most unique features that any baby product offers.

We are confident that you will appreciate its many highlights, including its reliability and durability. Your new product has been manufactured to comply with the Highest Quality Standards and comes with a 12-month warranty.

As you will soon learn there are many more great features about your new Love N Care product.

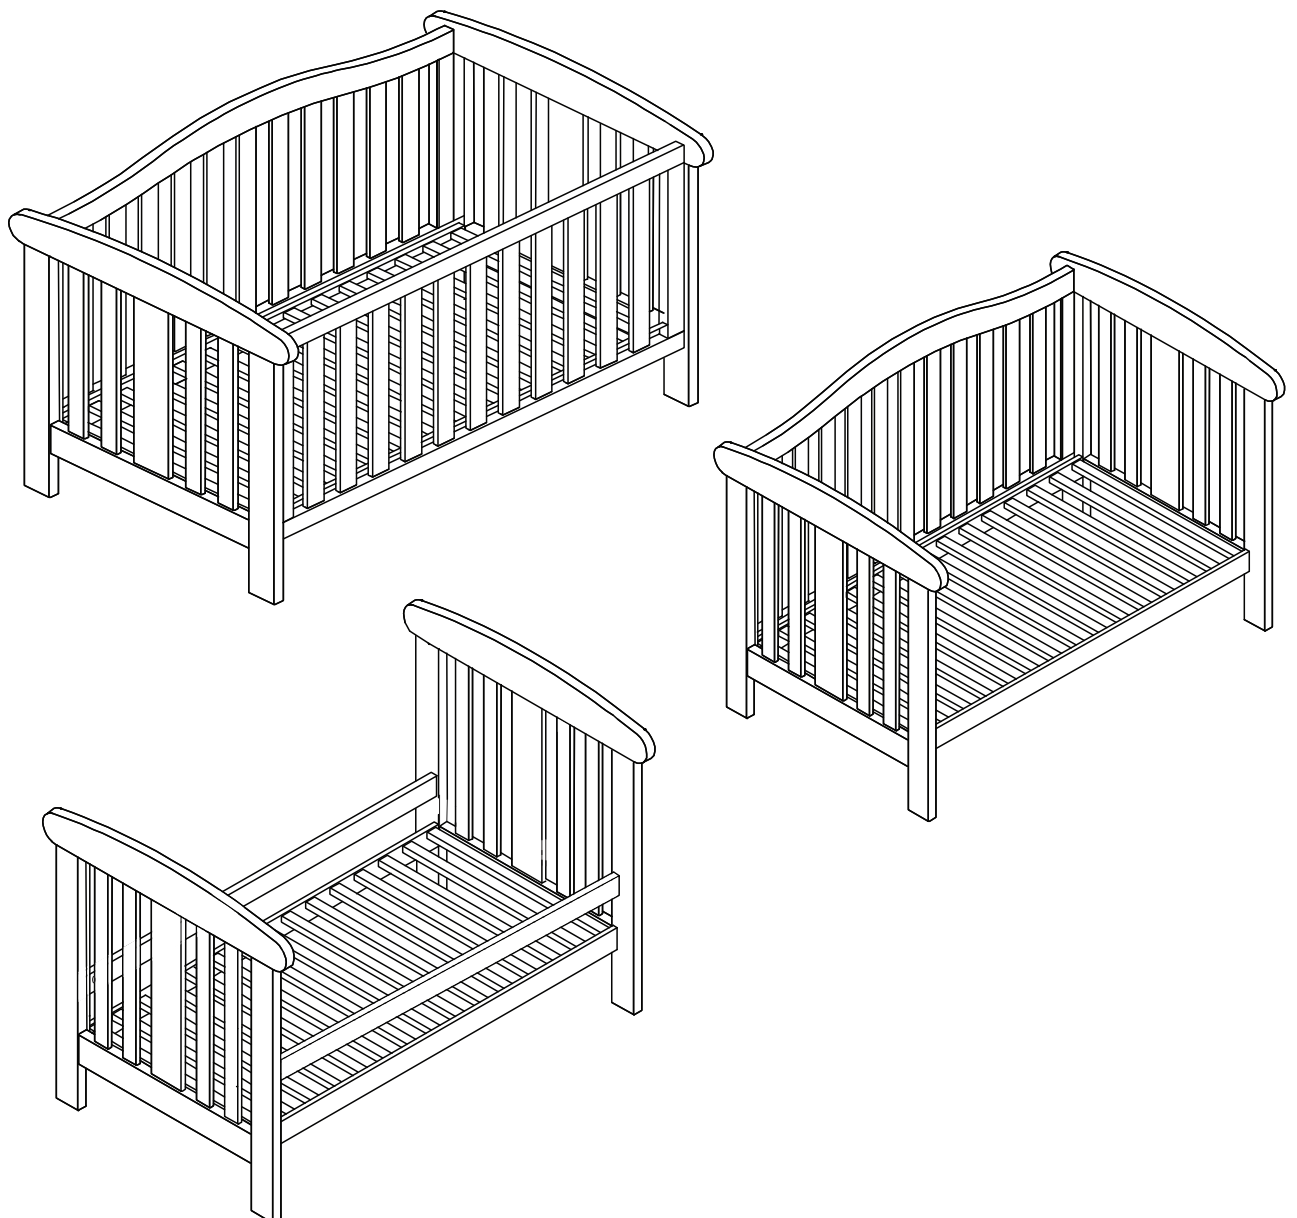



Safety guidelines and instructions must always be followed before making use of this product, please retain these instructions for future reference.

This product complies with product standard:

AS/NZS 2172:2003 Cots for household use - Safety Requirements

WARNING

This cot has been designed for a child up to 25kg

Do not leave your child unattended when the dropside is in the lower position

RECOMMENDED MATTRESS SIZE: This cot has been manufactured for use with a mattress which measure 690mm wide by 1300mm long and 130mm in thickness.

The width and length are specific because it is important that the gaps between the mattress and the sides and ends of the cot will not exceed 40mm. This is to minimize the risk of a child's limb becoming caught in the gap. The thickness of the mattress has been specified to ensure that the depth of the cot is greater than 500mm with the mattress base in the lower position to minimise the risk of a child climbing or falling out of the cot.

WARNING TO PREVENT FALLS, THE MATTRESS BASE OF THIS COT SHOULD BE ADJUSTED TO THE LOWEST POSITION BEFORE THE CHILD CAN SIT UP.


The manufacturer's assembly instructions must be followed in detail to ensure all the safety features of the cot are not compromised.

Please ensure that the cot is placed at a reasonable distance from curtains, blinds, heaters and power points.


Please keep medication, string, elastic, small toys or small items, such as money out of reach from any position in the cot.

WARNING: TO PREVENT FALLS, THE MAXIMUM MATTRESS THICKNESS SHOULD NOT EXCEED 130mm.


love^hcare™ SPARE PARTS

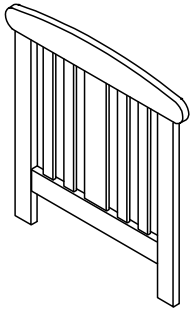


(A) COT END (LEFT)

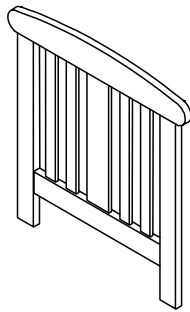


(B) COT END (RIGHT)

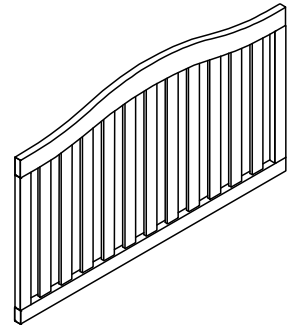


(C) FIXED SIDE

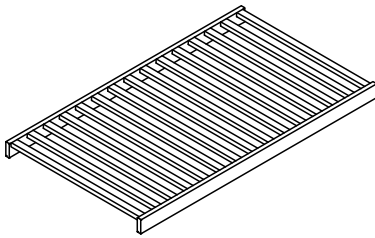


(D) COT BASE

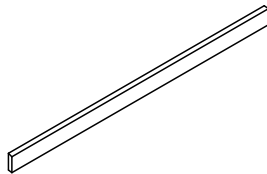


(F) BED RAIL (X2)

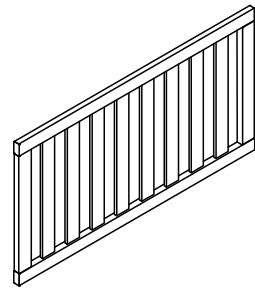


(E) DROP SIDE

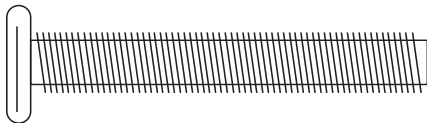


(1) 1/4" x 2 1/2" (x12)

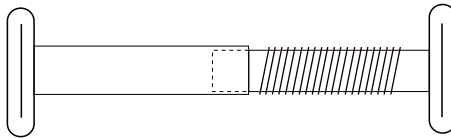


(2) 25mm (x4)

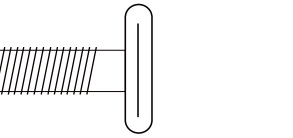


(3) 1/4" x 3/4" (x4)




(4) Barrel Nut (x8)

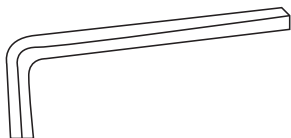

(5) Allen wrench (x1)




(6) Guide wheel(x4)



(7) Screw Sum (x2)


love^hcare™ ASSEMBLY

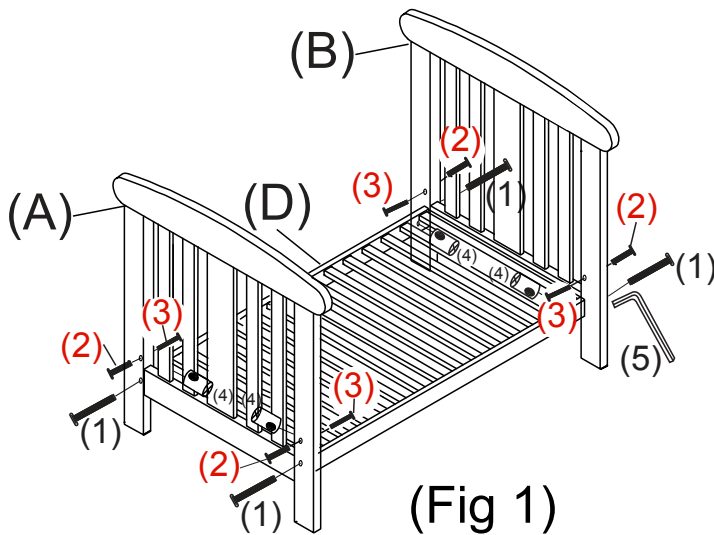

ATTACH THE COT BASE TO THE COT END

1. Select the appropriate base position on being either upper or lower.
2. Insert the Barrel nuts (4) into each end of the base.
3. When the base is being used in the upper position, use 4 (1) screws to attach the ends (A)(B) to the base (D). Make sure that it lines up with the barrel nuts.
4. Attach the 4 blank ends (2) and (3) on each side of the ends, on the lower side. The blank ends are 2 pieces that screw into each other.
5. When the base is being used in the lower position, use 4 (1) screws to attach the ends to the base. Make sure that it lines up with the barrel nuts.
6. Attach the 4 blank ends (2) and (3) on each side of the ends, on the upper side. The blank ends are 2 pieces that screw into each other.


Note: In this step do not tighten the bolts fully.

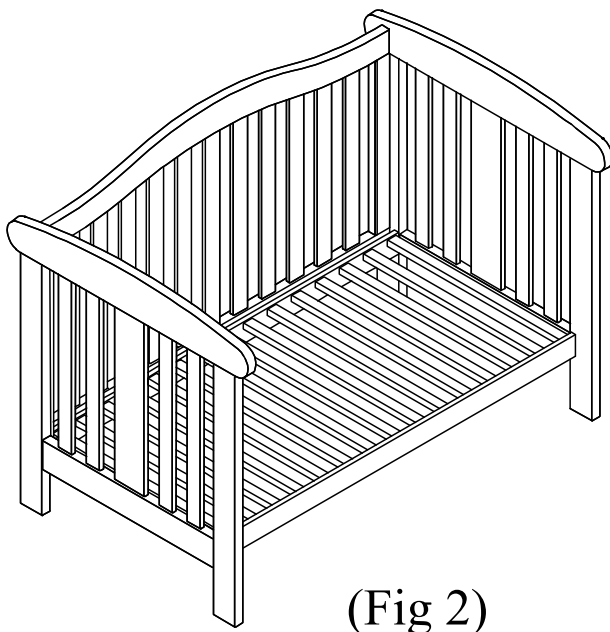

ATTACH THE FIXSIDE TO THE COT ENDS


7. Use 4 (1) screws to attach the Fixed side (C) to the cot ends (fig 2).

Note: In this step do not tighten the bolts fully.

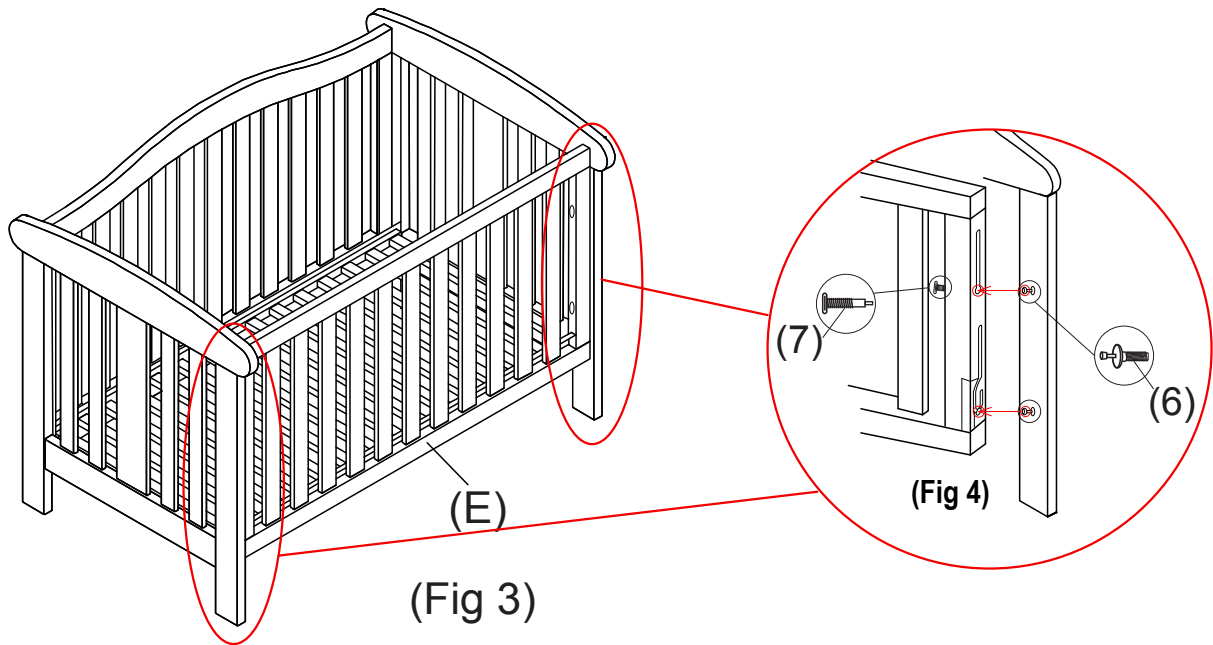

ATTACHING THE DROP SIDE TO THE COT


8. Screw 4 (6) guide wheels into each of the front ends where the dropside is to be placed as shown in (fig 4)
9. Line the dropside against the 4 guide wheels. Ensure that they are joined as shown in (fig 4)
10. Use the 2 (7) screw sums to connect the dropside to the ends as shown in (fig 4).
11. You can now tighten the screws.

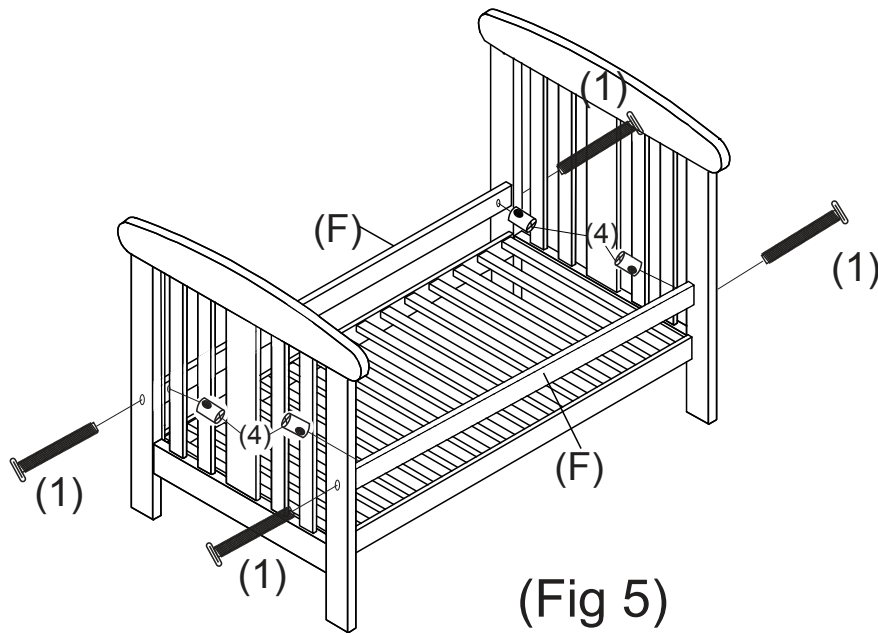

CONVERTING TO THE JUNIOR BED

(once assembled as a cot)

12. Remove the fixed side and the drop side from the cot.
13. Attach 4(4) Barrel nuts to each end of the bed rail sides (F)
14. Insert 4 (1) screws to each side of the ends so the bed rail will be assembled.
15. Tighten the screws.

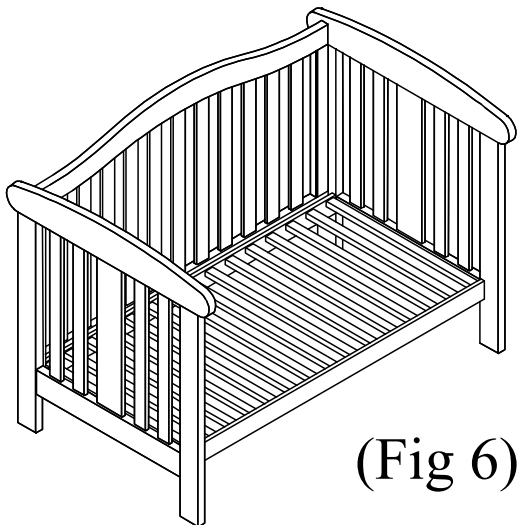

CONVERTING TO THE SOFA

(once assembled as a cot)

16. Remove the drop side



CARE AND MAINTENANCE

ALL LOVE N CARE PRODUCTS HAVE ONE YEAR WARRANTY FROM THE DATE OF PURCHASE.

IT IS RECOMMENDED TO REGULARLY INSPECT AND MAINTAIN MOVEMENT OF LOCKING DEVICES AND SECURITY OF ESSENTIAL COMPONENTS.

REGULARLY CHECK ALL PARTS FOR WEAR AND TEAR.

YOUR FURNITURE MAY BE CLEANED BY WIPING WITH A DAMP CLOTH AND DRYING WITH A SOFT CLEAN CLOTH. DO NOT USE ABRASIVES, BLEACH, ALCOHOL OR AMMONIA-BASED HOUSEHOLD POLISHES.

TAKE CARE WHEN HANDLING OR MOVING THE FURNITURE. CARELESS HANDLING MAY CAUSE DAMAGE.

CHECK THE COTS SCREWS AND LOCKS TO MAKE SURE THEY ARE ALL KEPT IN GOOD WORKING ORDER.

IF ANY OF THE PARTS ARE MISSING OR BROKEN YOU SHOULD CONTACT THE MANUFACTURER AND DISCONTINUE USING THE COT UNTIL THEY ARE REPLACED.

Manufactured By:

Love N Care Pty Ltd.

297-299 Canterbury Rd, Revesby

NSW 2212 Australia

Contact No: 1300 732 599

Fax: 02 9774 4633

Email: info@lovencare.com.au

Website: www.lovencare.com.au



Contact Us

Head Office:

Love N Care Pty Ltd.
297-299 Canterbury Rd, Revesby
NSW 2212 Australia
Contact No: 02 9774 4655
Fax: 02 9774 4633
Email: info@lovencare.com.au
Website: www.lovencare.com.au

Brisbane
7-9 Eileen Street
Underwood QLD 4119 Australia
Contact No: 07 3290 4217
Fax: 07 3209 5019

Western Australia
5 Modal Crescent
Canning Vale WA 6155 Australia
Contact No: 08 9455 4972
Fax: 08 9455 4728

Ireland
DMG House
Deansgrange Industrial Estate
Deansgrange Co. Dublin
Phone: +3531 2190254
Fax: +3531 2802734
Website: www.lovencare.ie

let's be friends!

 <http://www.facebook.com/lovencare1>

 http://twitter.com/love_ncare



100 % AUSTRALIAN OWNED SINCE 1984

lovehncare™
lovencare.com.au