

# loven<sup>h</sup>care™



## SERENO COT 2.0

### HK 03

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE


# love<sup>n</sup>care™

Congratulations on your new quality Love N Care product from our exclusive range of baby products. This exceptional design combines the most unique features that any baby product offers.

We are confident that you will appreciate its many highlights, including its reliability and durability. Your new product has been manufactured to comply with the Highest Quality Standards and comes with a 12-month warranty.

As you will soon learn there are many more great features about your new Love N Care product.



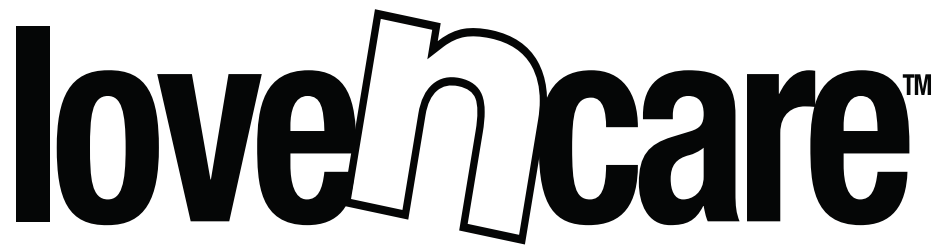

Safety guidelines and instructions must always be followed before making use of this product, please retain these instructions for future reference.

This product complies with product standard:

Trade Practices Act 1974 - Consumer Protection Notice No. 6 of 2005

CONSUMER PRODUCT SAFETY STANDARD: CHILDREN'S HOUSEHOLD COTS



This cot has been designed for a child up to 25kg

Do not leave your child unattended when the dropside is in the lower position

**RECOMMENDED MATTRESS SIZE:** This cot has been manufactured for use with a mattress which measure 690mm wide by 1300mm long and 130mm in thickness.

The width and length are specific because it is important that the gaps between the mattress and the sides and ends of the cot will not exceed 40mm. This is to minimize the risk of a child's limb becoming caught in the gap. The thickness of the mattress has been specified to ensure that the depth of the cot is greater than 500mm with the mattress base in the lower position to minimise the risk of a child climbing or falling out of the cot.

**WARNING TO PREVENT FALLS, THE MATTRESS BASE OF THIS COT SHOULD BE ADJUSTED TO THE LOWEST POSITION BEFORE THE CHILD CAN SIT UP.**

The manufacturer's assembly instructions must be followed in detail to ensure all the safety features of the cot are not compromised.






Please ensure that the cot is placed at a reasonable distance from curtains, blinds, heaters and power points.

Please keep medication, string, elastic, small toys or small items, such as money out of reach from any position in the cot.


**WARNING: TO PREVENT FALLS, THE MAXIMUM MATTRESS THICKNESS SHOULD NOT EXCEED 130mm.**




# Hardware Kit

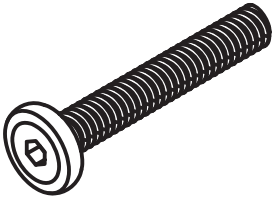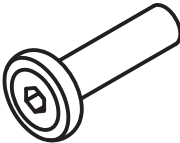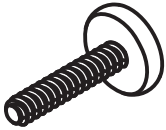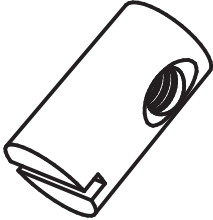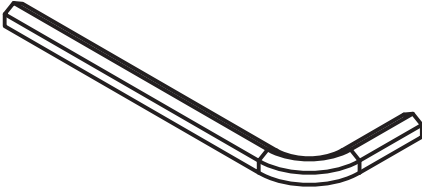


1# 6*50MM 12 PCS	2# 6*16MM 4PCS (4CAPPING NUTS) FOR BLOCK ENDS	
		
3# 6*14MM 4PCS FOR BASE	ALLEN KEY	
		
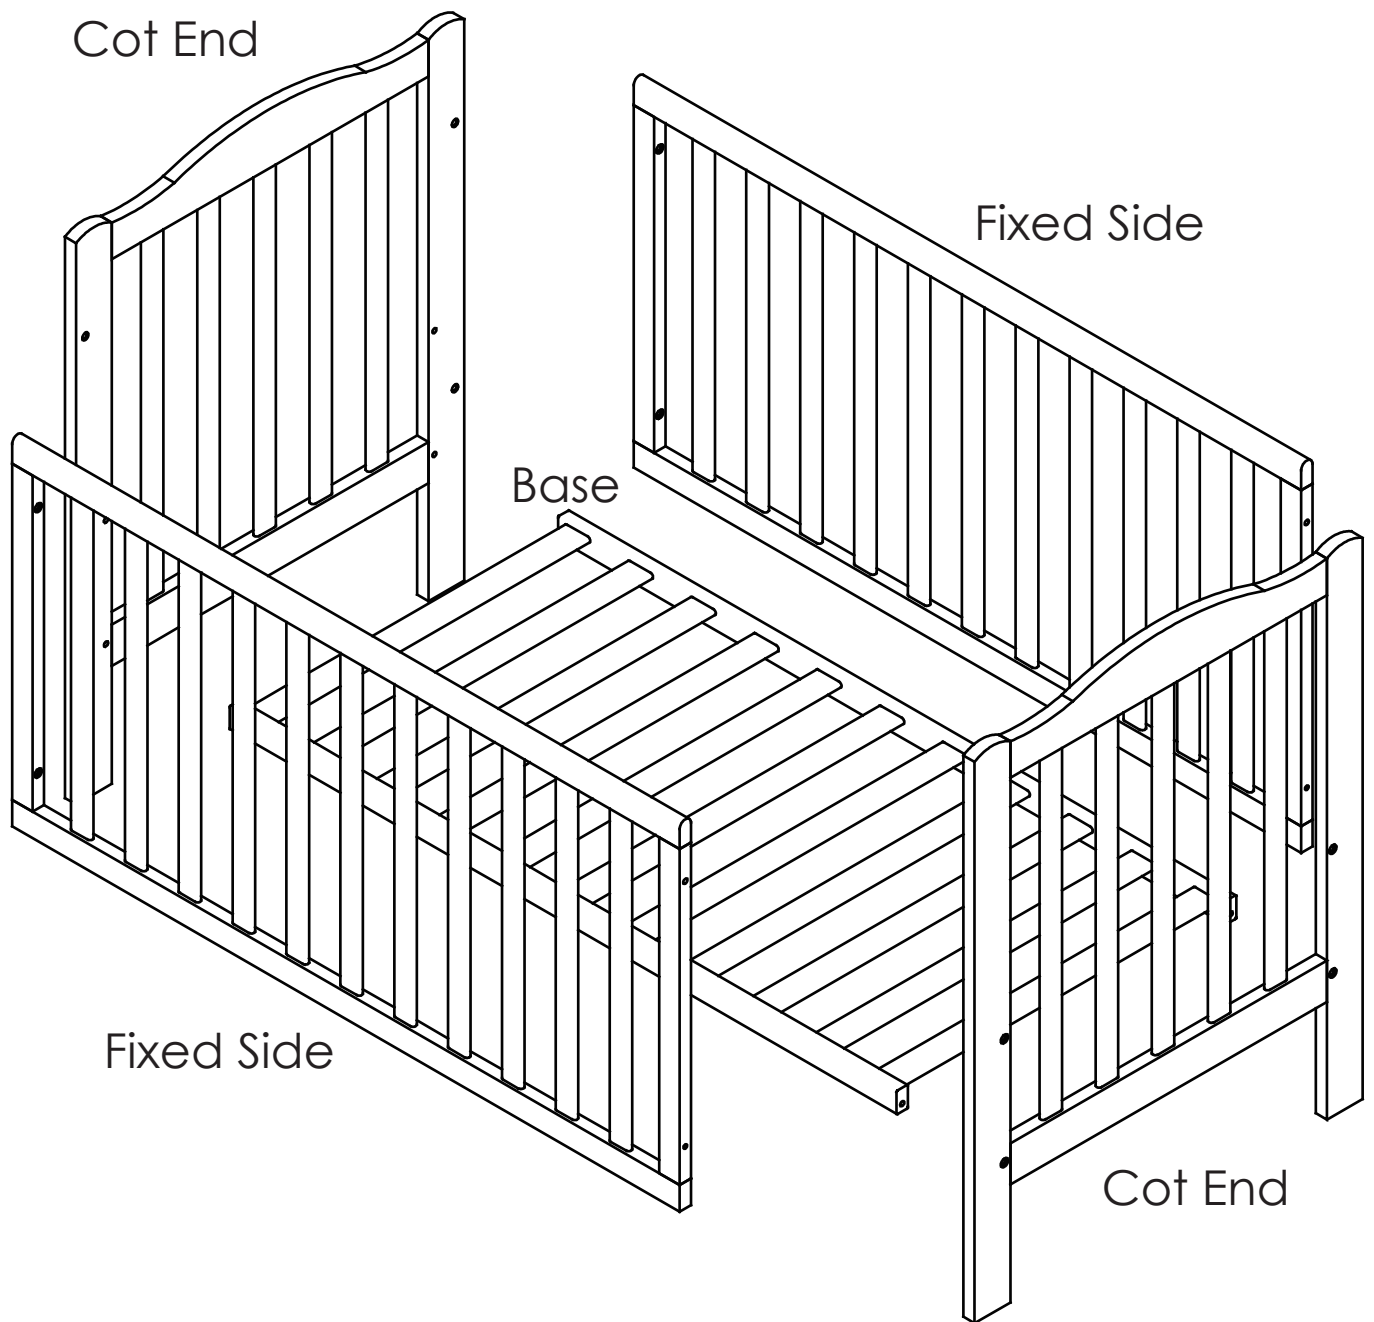
# Parts List




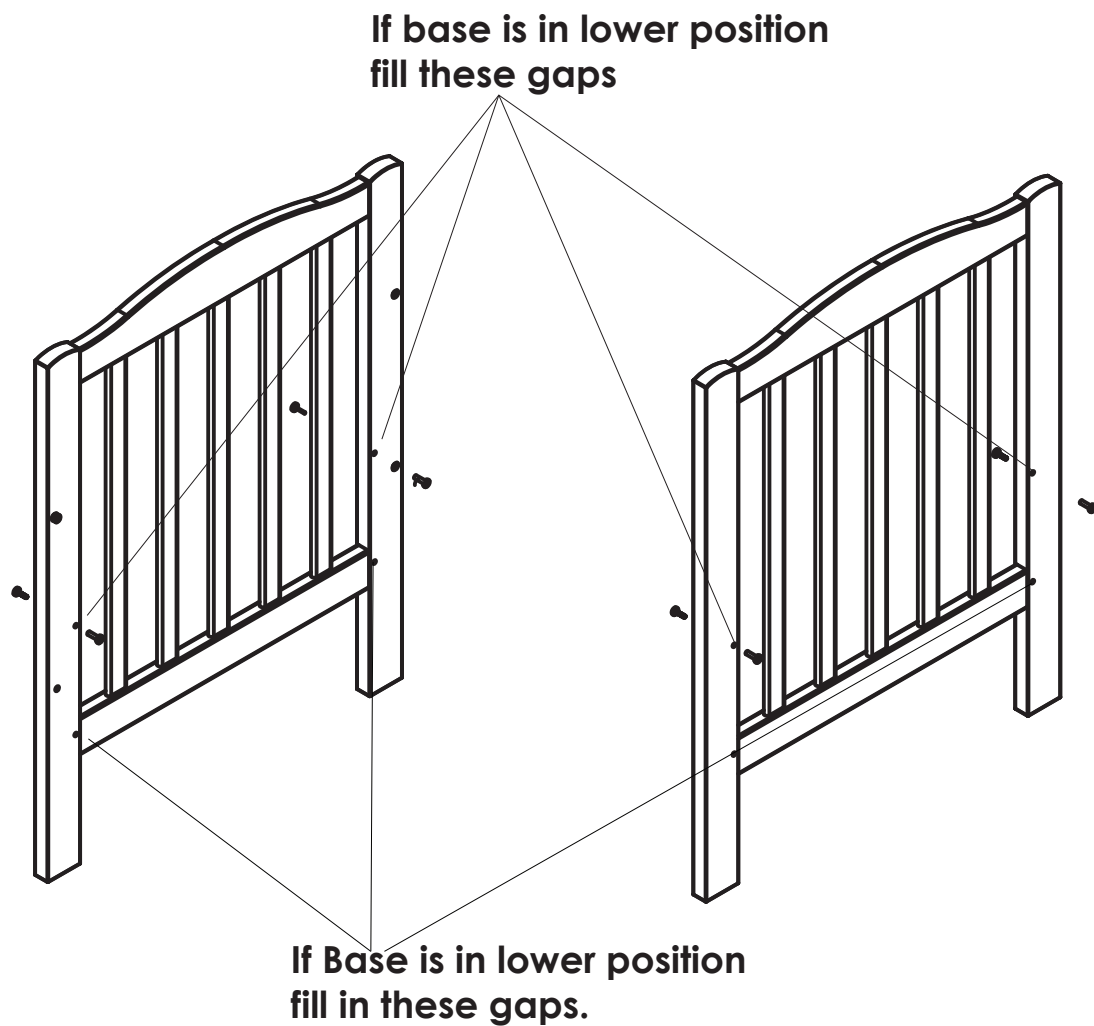

# Assembling Cot



2# 6*16MM 4PCS (4CAPPING NUTS) FOR BLOCK ENDS		ALLEN KEYS
		

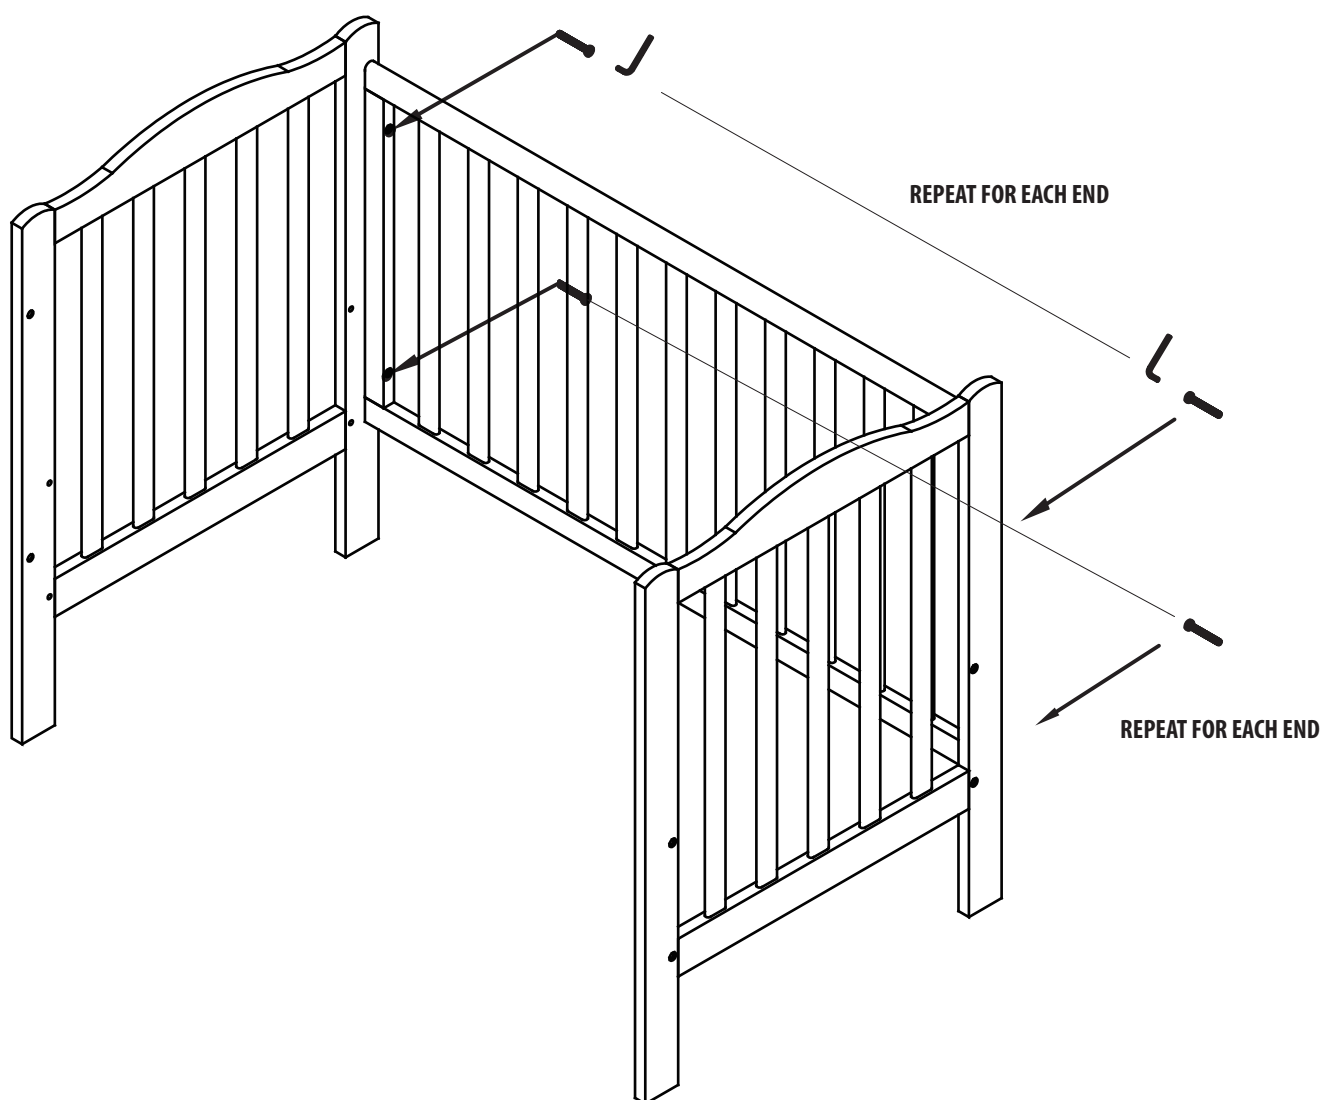
If placing the base in the **lower position** fill in the holes with the capping nuts #2. Tighten with the allen Key





1 # 6*50MM 4PCS FOR FIXED SIDE	ALLEN KEYS
	



Insert the 4 (1#) bolts to attach the fixed side to the cot ends.  
Tighten with the Allen Key but not completely.

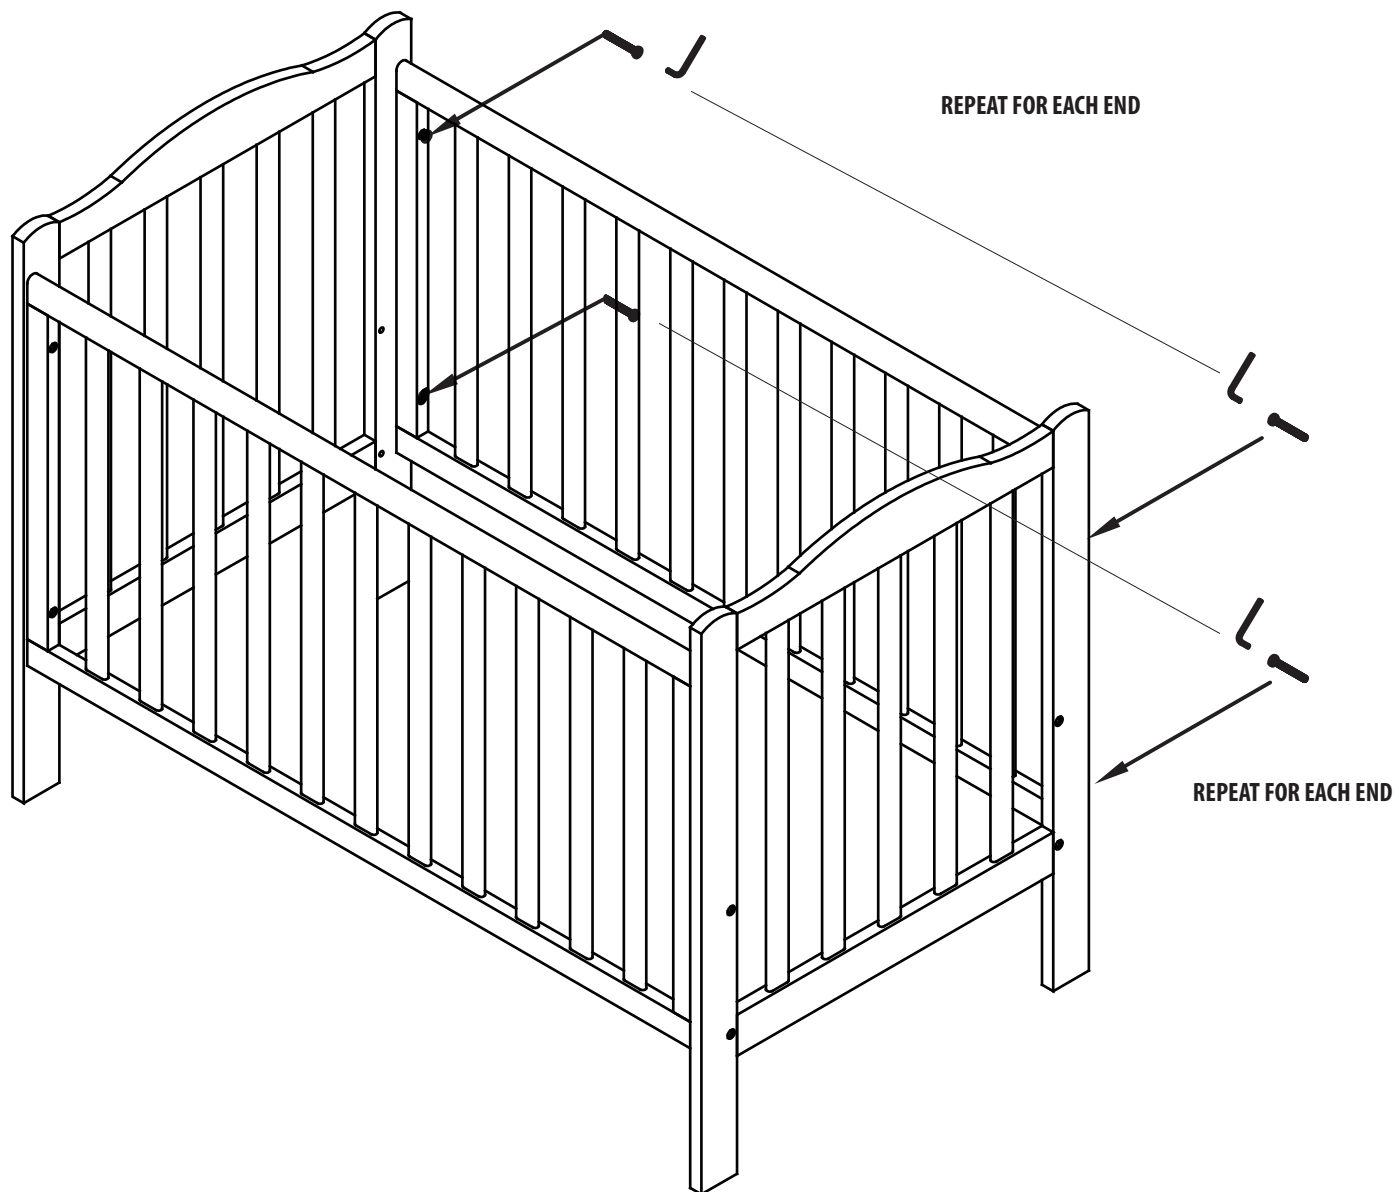






1 # 6*50MM 4PCS FOR FIXED SIDE	ALLEN KEYS
	

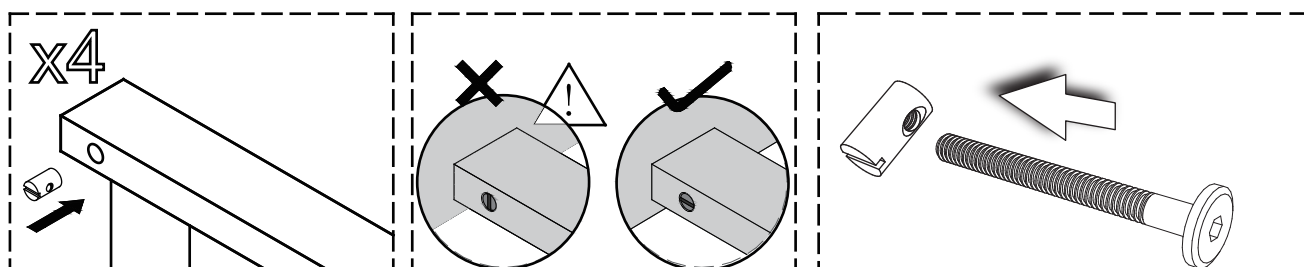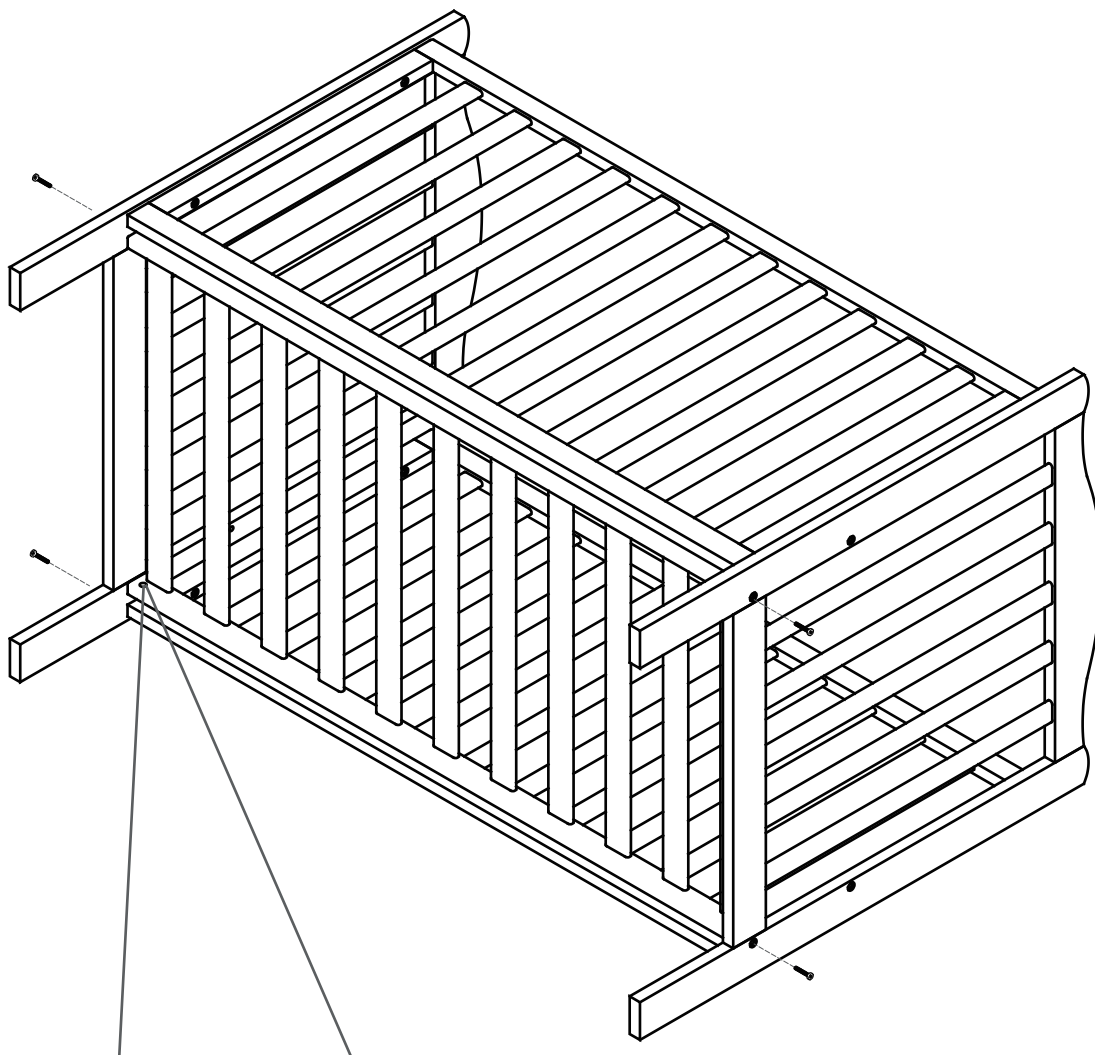Insert the 4 (1#) bolts to attach the fixed side to the cot ends.  
Tighten with the Allen Key but not completely.



1 # 6*50MM 4PCS	ALLEN KEYS
	
3# 6*14MM 4PCS FOR BASE	
	

Attach the base between the cot ends, and insert the 4 (1# ) bolts.



## **CARE AND MAINTENANCE**

**ALL LOVE N CARE PRODUCTS HAVE ONE YEAR WARRANTY FROM THE DATE OF PURCHASE.**

**IT IS RECOMMENDED TO REGULARLY INSPECT AND MAINTAIN MOVEMENT OF LOCKING DEVICES AND SECURITY OF ESSENTIAL COMPONENTS.**

**REGULARLY CHECK ALL PARTS FOR WEAR AND TEAR.**

**YOUR FURNITURE MAY BE CLEANED BY WIPING WITH A DAMP CLOTH AND DRYING WITH A SOFT CLEAN CLOTH. DO NOT USE ABRASIVES, BLEACH, ALCOHOL OR AMMONIA-BASED HOUSEHOLD POLISHES.**

**TAKE CARE WHEN HANDLING OR MOVING THE FURNITURE. CARELESS HANDLING MAY CAUSE DAMAGE.**

**CHECK THE CHEST SCREWS AND LOCKS TO MAKE SURE THEY ARE ALL KEPT IN GOOD WORKING ORDER.**

**IF ANY OF THE PARTS ARE MISSING OR BROKEN YOU SHOULD CONTACT THE MANUFACTURER AND DISCONTINUE USING THE COT UNTIL THEY ARE REPLACED.**

**LOCK MAINTENANCE: PUT LUBRICATING OIL EVERY 3-6 MONTHS TO ENSURE THE LOCK RUNS SMOOTHLY.**

**PLEASE MAKE SURE THAT THE COT IS PLACED ON A LEVEL FLOOR TO ENSURE THE LOCKING MECHANISM FUNCTIONS CORRECTLY.**

## **WARRANTY AGAINST DEFECTS.**

All Love N Care products are guaranteed for twelve months from the date of purchase. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This covers against faults which develop through faulty materials and workmanship. Misuse, accidental damages, normal wear and tear or neglect are not covered.

If a fault becomes apparent, please return the item to the store of purchase with your receipt.

You must inform the store what the defect is. We will then arrange for its repair or it will be assessed for replacement as expediently as possible. The benefits of this warranty are in addition to other right and remedies under the law in relation to the goods or services to which this warranty relates.

If you are unable to return the item to the store of purchase, you can contact Love N Care on free call 1300 732 599. Where you send the product directly to the manufacturer then you may be liable for the costs of transportation to and from Love N Care.

Love N Care will meet the reasonable expenses incurred by a consumer in making a warranty claim. You can claim expenses incurred in making a claim by contacting our customer service team on 1300 732 599 or by email at [info@lovenecare.com.au](mailto:info@lovenecare.com.au)



## Contact Us

Head Office:

Love N Care Pty Ltd.

297-299 Canterbury Rd, Revesby

NSW 2212 Australia

Contact No: 02 9774 4655

Fax: 02 9774 4633

Email: [info@lovencare.com.au](mailto:info@lovencare.com.au)

Website: [www.lovencare.com.au](http://www.lovencare.com.au)

let's be friends!

 <http://www.facebook.com/lovencare1>

 [http://twitter.com/love\\_ncare](http://twitter.com/love_ncare)



100 % AUSTRALIAN OWNED SINCE 1984

**lovehncare™**  
[lovencare.com.au](http://lovencare.com.au)