



SLEIGH COT

CSC 25

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE


loveⁿcare™

Congratulations on your new quality Love N Care product from our exclusive range of baby products. This exceptional design combines the most unique features that any baby product offers.

We are confident that you will appreciate its many highlights, including its reliability and durability. Your new product has been manufactured to comply with the Highest Quality Standards and comes with a 12-month warranty.

As you will soon learn there are many more great features about your new Love N Care product.



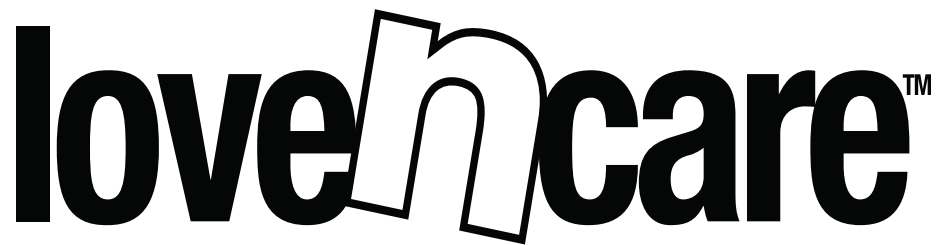

Safety guidelines and instructions must always be followed before making use of this product, please retain these instructions for future reference.

This product complies with product standard:

AS/NZS 2172:2003 Cots for household use - Safety Requirements

WARNING

This cot has been designed for a child up to 25kg

Do not leave your child unattended when the dropside is in the lower position

RECOMMENDED MATTRESS SIZE: This cot has been manufactured for use with a mattress which measure 760mm wide by 1310mm long and 100mm in thickness.

The width and length are specific because it is important that the gaps between the mattress and the sides and ends of the cot will not exceed 40mm. This is to minimize the risk of a child's limb becoming caught in the gap. The thickness of the mattress has been specified to ensure that the depth of the cot is greater than 500mm with the mattress base in the lower position to minimise the risk of a child climbing or falling out of the cot.


WARNING TO PREVENT FALLS, THE MATTRESS BASE OF THIS COT SHOULD BE ADJUSTED TO THE LOWEST POSITION BEFORE THE CHILD CAN SIT UP.

The manufacturer's assembly instructions must be followed in detail to ensure all the safety features of the cot are not compromised.


Please ensure that the cot is placed at a reasonable distance from curtains, blinds, heaters and power points.

Please keep medication, string, elastic, small toys or small items, such as money out of reach from any position in the cot.


WARNING: TO PREVENT FALLS, THE MAXIMUM MATTRESS THICKNESS SHOULD NOT EXCEED 100mm.

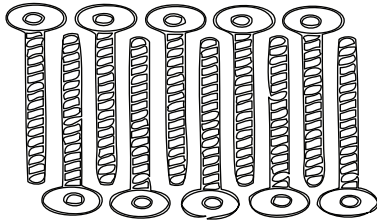


1# 6X40MM
10PCS
FOR DRAWER

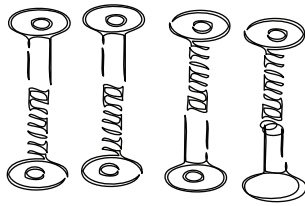


2# 6X25MM
4 PCS
FOR BLOCK ENDS

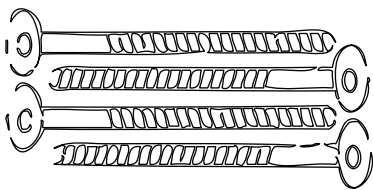


3# 6X80MM
4 PCS
FOR DROP SIDE

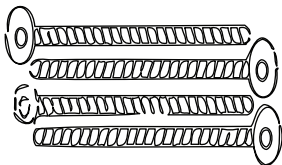

4# 6X60MM
4 PCS
FOR BASE

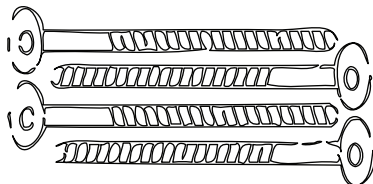


5# 6X80MM
4 PCS
FOR FIXED SIDE
AND BED RAILS

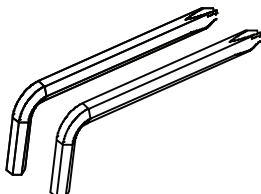

2 X ALLEN KEYS

PARTS LIST

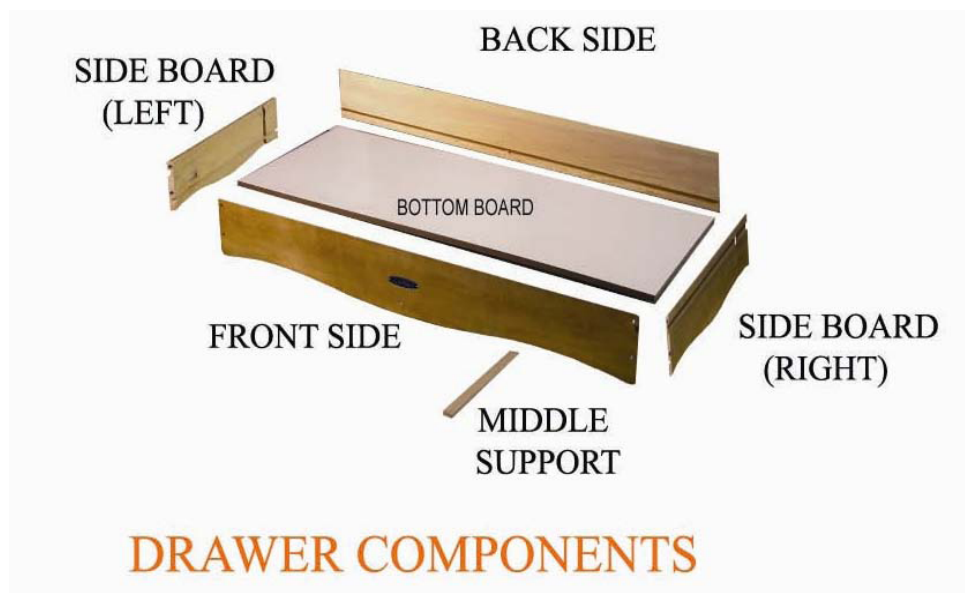

ASSEMBLY

ATTACH THE COT BASE TO THE COT ENDS

1. Select the appropriate base position on being either lower or upper.
 2. When the base is being used on the upper position, use the 4# bolts to fix the base on the upper holes of the cot ends. Attach the 2# BLANK ENDS to the lower holes on the cot ends to prevent fingers getting caught in the holes.
 3. When the base is being used on the lower position, use the 4# bolts to fix the base on the lower holes of the cot ends. Attach the 2# BLANK ENDS to the upper holes on the cot ends to prevent fingers getting caught in the holes. (Fig 1)
- Note: in this step, do not tighten the bolts fully.



ATTACH THE FIXSIDE TO THE COT ENDS

4. Use four 5# Bolts to fix the FIXSIDE to the cot ends (Fig 2). Note: in this step, do not tighten the bolts fully.



ATTACH THE DROPSIDE TO THE COT ENDS

5. Use four 3# Bolts to fix the DROPSIDE to the cot ends

TIGHTEN THE BOLTS

6. Test the DROP SIDE for easy movement, then tighten all the bolts on the COT and retest the movement of the DROP SIDE to ensure its moving freely.

ASSEMBLE THE DRAWER

7. Use 1# bolts to assemble the drawer (Fig 4)
8. Place the drawer on the slides and push the drawer in (Fig 5)



TO RAISE THE DROPSIDE

1. To raise the DROPSIDE to the upper position, pull up the DROPSIDE with one or two hands. When the DROPSIDE is raised to the upper position, the locks will click into place by the spring pressure. (Fig 6)



TO LOWER THE DROPSIDE

2. put one hand to one corner of the DROPSIDE and the other hand to the other corner, pull up the DROPSIDE, using both hands to press the locks inside at the same time to release the DROPSIDE down to the lower position. (Fig 7)



CONVERTING TO THE LOUNGE

Remove the DROPSIDE and keep the FIXSIDE attached to the cot to convert the cot to be a lounge (Fig 10)



Fig 10

CONVERTING TO THE JUNIOR BED

1. Remove the DROPSIDE and the FIXSIDE.
2. Assemble the side rails with FOUR 5# bolts (Fig 8)
3. Put the mattress to be used as junior bed (Fig 9)



Fig 8

Fig 9



CARE AND MAINTENANCE

ALL LOVE N CARE PRODUCTS HAVE ONE YEAR WARRANTY FROM THE DATE OF PURCHASE.

IT IS RECOMMENDED TO REGULARLY INSPECT AND MAINTAIN MOVEMENT OF LOCKING DEVICES AND SECURITY OF ESSENTIAL COMPONENTS.

REGULARLY CHECK ALL PARTS FOR WEAR AND TEAR.

YOUR FURNITURE MAY BE CLEANED BY WIPING WITH A DAMP CLOTH AND DRYING WITH A SOFT CLEAN CLOTH. DO NOT USE ABRASIVES, BLEACH, ALCOHOL OR AMMONIA-BASED HOUSEHOLD POLISHES.

TAKE CARE WHEN HANDLING OR MOVING THE FURNITURE. CARELESS HANDLING MAY CAUSE DAMAGE.

CHECK THE COTS SCREWS AND LOCKS TO MAKE SURE THEY ARE ALL KEPT IN GOOD WORKING ORDER.

IF ANY OF THE PARTS ARE MISSING OR BROKEN YOU SHOULD CONTACT THE MANUFACTURER AND DISCONTINUE USING THE COT UNTIL THEY ARE REPLACED.

Manufactured By:

Love N Care Pty Ltd.

297-299 Canterbury Rd, Revesby

NSW 2212 Australia

Contact No: 1300 732 599

Fax: 02 9774 4633

Email: info@lovencare.com.au

Website: www.lovencare.com.au



Contact Us

Head Office:

Love N Care Pty Ltd.
297-299 Canterbury Rd, Revesby
NSW 2212 Australia
Contact No: 02 9774 4655
Fax: 02 9774 4633
Email: info@lovencare.com.au
Website: www.lovencare.com.au

Brisbane
7-9 Eileen Street
Underwood QLD 4119 Australia
Contact No: 07 3290 4217
Fax: 07 3209 5019

Western Australia
5 Modal Crescent
Canning Vale WA 6155 Australia
Contact No: 08 9455 4972
Fax: 08 9455 4728

let's be friends!

 <http://www.facebook.com/lovencare1>

 http://twitter.com/love_ncare



100 % AUSTRALIAN OWNED SINCE 1984

lovehncare™
lovencare.com.au